


8032508

Magazine

FESTO

CP Factory/CP Lab

Translation of the
original operating
instructions

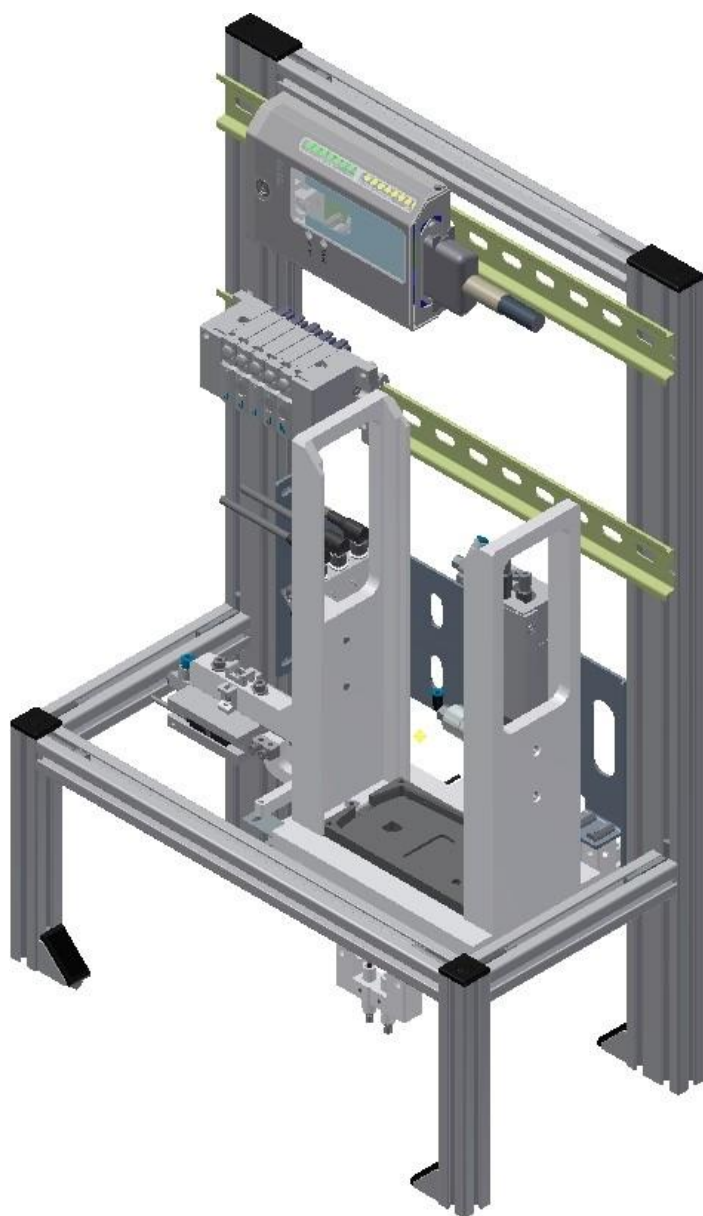

Festo Didactic
8032508 en
11/2020

Order number: 8032508
Revision Level: 11/2020
Authors: Schober, Weiss
Layout: Frank Ebel
File Name: CP-AM-MAG-GB-A005.doc

© Festo Didactic SE, Rechbergstr. 3, 73770 Denkendorf, Germany, 2020



 +49 711 3467-0  www.festo-didactic.com
 +49 711 34754-88500  did@festo.com

Translation of the original instructions

The reproduction, distribution, and utilization of this document, as well as the communication of its content to others without explicit authorization, is prohibited. Offenders will be held liable for damages. All rights reserved, in particular the right to file patent, utility model and registered design applications.



Where only pronouns such as he and him are used in these operating instructions, these pronouns are of course intended to refer to both male and female persons. The use of a single gender (e.g. he, him) should not be construed as gender discrimination; it is intended solely to make the manual easier to read and the formulations easier to understand.

	 CAUTION
	<p>These operating instructions must be available to the user at all times. The operating instructions must be read before commissioning. The safety instructions must be observed. Non-observance may result in severe personal injury or damage to property.</p>

Main document

Associated documents attached:

Safety instructions concerning transport (print/electronic)
Component datasheets (print/electronic)
Circuit diagram (print/electronic)

Contents

1 Safety instructions	5
1.1 Warning notice system	5
1.2 Pictograms	6
1.3 General prerequisites for installing the product.....	7
1.4 General prerequisites for operating the devices	7
2 Intended use	8
3 For your safety	9
3.1 Important information	9
3.2 Qualified persons	10
3.3 Obligations of the operating company	10
3.4 Obligations of the trainees	10
4 Basic safety instructions	11
4.1 General information	11
4.2 Mechanical components	11
4.3 Electrical components	12
4.4 Pneumatic components.....	14
4.5 Guarantee and liability for application examples	16
4.6 Cyber security	16
4.7 Additional safety instructions	17
4.8 Guarantee and liability	18
4.9 Transport.....	19
4.10 Name plates	20
4.11 CE Declaration of Conformity	21
4.12 General product safety.....	23
4.13 Protective devices	24
4.13.1 Panel doors on underground control cabinet	24
4.13.2 Emergency stop.....	24
4.13.3 Additional protective devices	24
5 Technical Data	25
6 Design and Function	27
6.1 Transport.....	27
6.2 Overview of the System.....	29
6.3 The application module magazine.....	30
6.4 Function	31
6.5 Variants	32
6.6 Process description	33
6.7 Electrical Connections	34
6.7.1 Overview	34
6.7.2 I/O Box XD1	35
6.7.3 I/O Terminal XD15	36
7 Commissioning	37
7.1 Workplace	37
7.2 Visual Inspection	38
7.3 Safety Regulations	38

7.4 Assembly	39
7.4.1 Assembly of an CP application module to a CP Lab conveyor	39
7.4.2 Connecting the CP application module electrically to basic module CP Lab Conveyor	42
7.4.3 Pneumatic connection from application modules.....	44
7.4.4 Assembly of an CP application module to a CP Factory basic module	45
7.4.5 Connecting the CP application module electrically to the CP Factory basic module	48
7.4.6 Pneumatic connection from application modules.....	49
7.5 Adjusting the sensors.....	50
7.5.1 Through-beam sensor (Workpiece detection)	50
7.5.2 Proximity Switch (cylinder lifting unit)	53
7.5.3 Proximity Switch (separating cylinder)	55
7.6 Adjusting the one-way flow control valves	57
8 Operation	59
8.1 General operating instructions.....	59
8.1.1 Conduct instructions	59
8.1.2 Operating instructions.....	59
8.2 Sequence description of the application module magazine	59
8.3 Setting the application module magazine at HMI	61
8.4 Transitions of the application module	64
8.4.1 Parameter (MAGFRONT)	65
8.4.2 Parameter (MAGBACK)	66
9 Error messages and message texts at the HMI.....	67
9.1 Reporting texts.....	68
9.1.1 General remediation texts	68
9.1.2 RFID detection messages	70
9.1.3 Message texts of the application module magazine	70
9.2 Interactive message texts.....	71
9.2.1 General.....	71
9.2.1 Application module magazine	71
10 Spare part list	72
11 Service and cleaning	73
12 Further information and updating	74
13 Disposal	75








1 Safety instructions

1.1 Warning notice system

These operating instructions contain notes that must be observed for your personal safety and in order to prevent property damage. The notes concerning your personal safety are indicated by a safety symbol.

Notes that only concern property damage are not indicated by a safety symbol.

The notes below are listed in order of hazard level.

	<div data-bbox="762 533 1018 600">  DANGER </div> <p>... indicates an imminently hazardous situation that will result in fatal or severe personal injury if not avoided.</p>
	<div data-bbox="751 817 1029 884">  WARNING </div> <p>... indicates a potentially hazardous situation which may result in fatal or severe personal injury if not avoided.</p>
	<div data-bbox="758 1102 1021 1169">  CAUTION </div> <p>... indicates a potentially hazardous situation that may result in moderate or slight personal injury or severe property damage if not avoided.</p>
	<div data-bbox="842 1408 946 1453"> NOTE </div> <p>... indicates a potentially hazardous situation that may result in property damage or loss of function if not avoided.</p>

In cases where more than one hazard level applies, the safety note with the highest hazard level will be shown. A safety note may concern both personal injury and property damage.

Hazards that will only result in property damage are indicated with the word "Note".

1.2 Pictograms

This document and the hardware described in it include warnings concerning possible hazards which may arise if the system is used incorrectly.

The following pictograms are used:



Hazard warning



Warning - dangerous electric voltage



Read and observe the operating and safety instructions prior to commissioning.



Switch off the device and unplug the connection for power supply from the plug socket before commencing installation, repair, maintenance or cleaning work.



Warning – hand injuries



Warning – lifting heavy loads



Information and/or references to other documentation

1.3 General prerequisites for installing the product

- Festo Didactic products must only be used for the applications specified in their respective operating instructions. Products or components supplied by other manufacturers must only be used if recommended or approved by Festo.
- The products must be transported, stored, installed, assembled, commissioned, operated and maintained properly in order to ensure their safe operation.
- The approved ambient conditions must be observed. The specifications in the relevant operating instructions must be observed.
- The safety equipment must be tested every working day.
- Connecting cables must be checked for damage before each use. In case of damage, they must be replaced.

Connecting cables must correspond to the minimum specifications.

1.4 General prerequisites for operating the devices

General requirements for safe operation of the system:

- In industrial facilities, the national accident prevention regulations must be observed.
- The laboratory or classroom must be overseen by a supervisor.
 - A supervisor is a qualified electrician or a person who has been trained in electrical engineering, knows the respective safety requirements and safety regulations, and whose training has been documented accordingly.

The laboratory or the classroom must be equipped with the following devices:

- An emergency-off device must be provided.
 - At least one emergency-off device must be located inside the laboratory or the classroom, and at least one outside it.
- The laboratory or classroom must be secured so that the operating voltage and compressed air supply cannot be activated by any unauthorized persons, for example by means of:
 - e.g. a keyswitch
 - e.g. lockable shut off valves
- The laboratory or classroom must be protected by residual current devices (RCDs).
 - RCDs with a differential current of ≤ 30 mA, Type B. When operating machinery with unavoidable leakage current, suitable measures must be implemented and documented in the corresponding workplace risk assessment.
- The laboratory or classroom must be protected by overcurrent protection devices.
 - Fuses or circuit breakers
- Devices must not be used if they are damaged or defective.
 - Damaged devices must be barred from further use and removed from the laboratory or classroom.
 - Damaged connecting cables, pneumatic tubing and hydraulic hoses represent a safety risk and must be removed from the laboratory or classroom.
- Safety devices must be checked every working day to ensure that they are fully functional.
- Connecting cables and accessories must be checked for damage before each use.

2 Intended use

Festo Didactic systems and components must only be used:

- For their intended use in teaching and training applications
- When their safety functions are in perfect condition

The components and systems are designed in accordance with the latest technology and recognized safety rules. However, life and limb of the user and third parties may be endangered and the components may be impaired if they are used incorrectly.

The Festo Didactic learning system has been developed and produced exclusively for education and training in the field of automation technology. The training company and/or trainers must ensure that all trainees observe the safety precautions described in these operating instructions.

Training with complex machinery is a highly hazardous activity. The operating company must draw up and document a workplace risk assessment. The trainees must be briefed on all the relevant safety aspects before work commences.

Festo Didactic hereby excludes any and all liability for damages suffered by apprentices, the training company and/or any third parties, which occur during use of the device in situations which serve any purpose other than training and/or vocational education, unless such damages have been caused by Festo Didactic due to malicious intent or gross negligence.

All extensions and accessories must be approved by Festo Didactic, and are only permitted for use for their intended purpose.

The machine fulfils the requirements of the European directives that applied when it was commissioned. Any modification to the machine shall render the manufacturer's CE Declaration of Conformity null and void. The CE Declaration of Conformity must be renewed following each major modification.



3 For your safety

3.1 Important information

Knowledge of the basic safety instructions and safety regulations is a fundamental prerequisite for safe handling and trouble-free operation of Festo Didactic components and systems.

These operating instructions include the most important instructions for safe use of the components and systems. In particular, the safety instructions must be adhered to by all persons who work with these components and systems. Furthermore, all pertinent accident prevention rules and regulations that are applicable at the respective place of use must be adhered to.

	<div data-bbox="751 651 815 707"></div> <div data-bbox="847 667 1027 707">WARNING</div> <ul data-bbox="395 757 1278 786" style="list-style-type: none">• Malfunctions which could impair safety must be eliminated immediately!
---	--

	<div data-bbox="759 900 823 956"></div> <div data-bbox="860 918 1019 958">CAUTION</div> <ul data-bbox="395 1005 1382 1115" style="list-style-type: none">• Improper repairs or modifications may result in unforeseeable operating statuses. Do not carry out any repair or alternation work on components or systems that is not described in these operating instructions.
--	---

3.2 Qualified persons

- The product described in these operating instructions is only permitted for operation by persons who are qualified for the task in question in accordance with the operating instructions, especially the safety instructions.
- Qualified persons are defined as persons whose training and experience enables them to recognize risks and avoid potential dangers when working with this product.

3.3 Obligations of the operating company

It is the responsibility of the operating company to ensure that the station is operated safely.

The operating company undertakes to allow only those persons to work with the components and systems who:

- Are familiar with the basic regulations regarding occupational safety, with the safety instructions, and with the accident prevention regulations, and who have been instructed in the use of the components and systems
- Have read and understood the safety chapter and warnings in these operating instructions
- Are qualified to operate the components and systems in question
- Are governed by and trained in suitable organizational measures to ensure safe training

Personnel should be tested at regular intervals to ensure that they are safety-conscious in their work habits.



3.4 Obligations of the trainees

All persons who have been entrusted to work with the components and systems undertake to complete the following steps before beginning work:



- Read the chapter concerning safety and the warnings in these operating instructions
- Familiarize themselves with the basic regulations regarding occupational safety and accident prevention



4 Basic safety instructions

4.1 General information



	<div style="background-color: #FFD700; text-align: center; padding: 5px;">  CAUTION </div> <ul style="list-style-type: none"> Trainees must be supervised by an instructor at all times when working with the components and systems. Observe the specifications included in the technical data for the individual components, and in particular all the safety instructions! Wear your personal protective equipment (safety goggles, safety shoes). Never leave objects lying on the top of protective enclosures. Vibrations could cause such objects to fall off.
---	---



4.2 Mechanical components



	<div style="background-color: #D2691E; text-align: center; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> Switch off the power supply! <ul style="list-style-type: none"> – Switch off both the operating power and the control power before commencing work on the circuit. – Never reach into the setup unless it is at a complete standstill. – Be aware of potential overtravel times for the actuators. Risk of injury during troubleshooting! <ul style="list-style-type: none"> – Use a tool such as a screwdriver for actuating sensors.
--	--

	<div style="background-color: #FFD700; text-align: center; padding: 5px;">  CAUTION </div> <ul style="list-style-type: none"> Risk of burns due to hot surfaces <ul style="list-style-type: none"> – Devices can reach high temperatures during operation, as a result of which they can cause burns if touched. Measures to take when maintenance is required. <ul style="list-style-type: none"> – Allow the device to cool off before commencing work. – Use suitable personal protective clothing, e.g. safety safety gloves.
---	--



4.3 Electrical components



	 WARNING
	<ul style="list-style-type: none"> • Disconnect from all sources of electrical power! <ul style="list-style-type: none"> – Switch off the power supply before working on the circuit. – Please note that electrical energy may be stored in individual components. Further information on this issue is available in the datasheets and operating instructions included with the components. – Warning! Capacitors inside the device may still be charged even after being disconnected from all sources of voltage. • Danger due to malfunction <ul style="list-style-type: none"> – Never place or leave liquids (e.g. drinks) on the station in open containers. – The machine must not be switched on if there is condensation (moisture) on its surface. – Never lay pipes/hoses designed to carry liquid media near the machine. • Electric shock due to connection to unsuitable power supply! <ul style="list-style-type: none"> – When devices are connected to an unsuitable power supply, exposed components can cause dangerous electrical voltage that can lead to severe or fatal injury. – Always use power supplies that provide SELV (safety extra-low voltage) or PELV (protective extra-low voltage) output voltages for all the connections and terminals on the electronics modules. • Electric shock when there is no protective grounding in place <ul style="list-style-type: none"> – If there is no protective grounding terminal in place for a Protection Class I device, or if the protective grounding terminal has not been installed correctly, exposed, conductive parts may carry high voltages, thus causing severe or fatal injury if touched. – Ground the device in accordance with the applicable regulations.

	 WARNING
	<ul style="list-style-type: none"> • Risk of fire due to use of unsuitable power supply <ul style="list-style-type: none"> – If a device is connected to an unsuitable power supply, this can cause components to overheat, leading to a breakout of fire. – Always use limited power supplies (LPSs) for all the connections and terminals on the electronics modules.

	 CAUTION
	<ul style="list-style-type: none"> • Always ensure that your connecting cables are designed for use with the electrical connections in question. • When laying connecting cables, make sure they are not kinked, sheared or pinched. Cables laid on the floor must be covered with a cable bridge to protect them. • Do not lay cables over hot surfaces. <ul style="list-style-type: none"> – Hot surfaces are identified with a corresponding warning symbol. • Make sure that connecting cables are not subjected to continuous tensile loads. • Devices with a grounding terminal must always be grounded. <ul style="list-style-type: none"> – If a ground connection (green-yellow laboratory socket) is available, it must always be connected to the protective grounding. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage). – Some devices have high leakage current. These devices must be fitted with a grounding conductor for additional grounding. • When replacing fuses, always use specified fuses with the correct current rating and tripping characteristics. • The device is not equipped with a built-in fuse unless otherwise specified in the technical data. • Safe operation of the device is not possible in the event of any of the following circumstances: <ul style="list-style-type: none"> – Visible damage – Malfunction – Inappropriate storage – Incorrect transport <p>Switch off the power supply immediately.</p> • Protect the device to prevent it from being restarted accidentally.

4.4 Pneumatic components

	 WARNING
	<ul style="list-style-type: none"> • Depressurize the system! <ul style="list-style-type: none"> – Switch off the compressed air supply before working on the circuit. – Check the system using pressure gauges to make sure that the entire circuit is fully depressurized. – Please note that energy may be stored in reservoirs. Further information on this issue is available in the datasheets and operating instructions included with the components. • Risk of injury when switching on compressed air! Cylinders may advance and retract automatically. • Risk of accident due to advancing cylinders! <ul style="list-style-type: none"> – Always position pneumatic cylinders so that the piston rod's working space is unobstructed along its entire stroke range. – Make sure that the piston rod cannot collide with any of the rigid components in the setup. • Risk of accident due to pneumatic tubing slipping off! <ul style="list-style-type: none"> – Use shortest barbed tubing connectors possible. – If pneumatic tubing slips off, switch off the compressed air supply immediately. • Do not exceed the maximum permissible pressure of 600 kPa (6 bar). • Do not switch on the compressed air until all the barbed tubing connectors have been connected and secured. • Do not disconnect pneumatic tubing while it is under pressure. <ul style="list-style-type: none"> – Do not attempt to seal or plug pneumatic tubing or plug connectors with your hands or fingers. • Check the condition of the condensate in the service unit regularly. If necessary, drain the condensate and dispose of it properly.

	<div data-bbox="758 188 1023 255"> CAUTION</div> <ul style="list-style-type: none">• Setting up pneumatic circuits<ul style="list-style-type: none">– Connect the devices with plastic tubing with an outside diameter of 4 or 6 mm.– Push the pneumatic tubing into the push-in connector as far as it will go.• Dismantling pneumatic circuits<ul style="list-style-type: none">– Switch off the compressed air supply before dismantling the circuit.– Press the blue release ring down so that the tubing can be pulled out.• Noise due to escaping compressed air<ul style="list-style-type: none">– Noise caused by escaping compressed air may damage your hearing. Reduce noise by using mufflers, or wear hearing protection if the noise cannot be avoided.– All of the exhaust ports on the components included in the equipment set are equipped with mufflers. Do not remove these mufflers.
---	---

4.5 Guarantee and liability for application examples



The application examples are not legally binding, and we cannot guarantee their completeness in terms of their configuration, their equipment or any events that may occur. The application examples are not representations of any specific customer solution; they are merely intended to illustrate typical tasks for which the product in question could be used. You bear the responsibility for ensuring that the products described here are operated properly. These application examples do not in any way relieve you of your responsibility to ensure that the system is handled safely when it is being used, installed, operated or maintained.

4.6 Cyber security

Note

Festo Didactic offers products with industrial security functions that aid the safe operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks from cyber threats, a comprehensive industrial security concept must be implemented and continuously updated. Festo's products and services only constitute one part of such a concept.

The customer is responsible for preventing unauthorized access to their plants, systems, machines and networks. Systems, machines and components should only be connected to a company's network or the Internet if and as necessary, and only when the suitable security measures (e.g. firewalls and network segmentation) are in place. Furthermore, Festo's guidelines on suitable security measures should be observed. Festo products and solutions are constantly being developed further in order to make them more secure. Festo strongly recommends that customers install product updates as soon as they become available and always use the latest versions of its products. Any use of product versions that are no longer supported or any failure to install the latest updates may render the customer vulnerable to cyber attacks.

	 WARNING
	<ul style="list-style-type: none"> • Unsecure operating conditions due to software tampering <ul style="list-style-type: none"> – Forms of software tampering (e.g. viruses, Trojans, malware and worms) can lead to unsecure operating conditions in your system, which may in turn lead to severe or fatal injury or property damage. – Keep your software up to date. – Integrate the automation and actuator components into an overarching and comprehensive industrial security concept for the installation or machine in question that is in line with the latest technological developments. – Make sure that all the products you have installed are incorporated into your overarching industrial security concept. – Use suitable measures, such as a virus scanner, to protect files save on exchangeable storage media from malware.

4.7 Additional safety instructions

General requirements for safe operation of the devices:

- Do not lay cables over hot surfaces.
 - Hot surfaces are identified with a corresponding warning symbol.
- Maximum permissible current loads for connector cables and devices must not be exceeded.
 - Always compare the current ratings of the device, the cable and the fuse to ensure that they match.
 - If they do not match, use a separate upstream fuse in order to provide appropriate overcurrent protection.
- Devices with a grounding terminal must always be grounded.
 - If a ground terminal (green-yellow laboratory socket) is available, it must always be connected to protective ground. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage).
- The device is not equipped with a built-in circuit unless otherwise specified in the technical data.

	<div data-bbox="751 792 815 851"></div> <div data-bbox="847 808 1027 851">WARNING</div> <ul style="list-style-type: none">• This product is designed for use in industrial environments, and may cause malfunctions if used in domestic or small commercial environments.
---	--


4.8 Guarantee and liability


Our General Terms and Conditions of Sale and Delivery shall apply at all times. These shall be made available to the operating company no later than upon conclusion of the sales contract. Guarantee and liability claims resulting from personal injury and/or property damage are excluded if they can be traced back to one or more of the following causes:

- Use of the equipment for purposes other than its intended use
- Improper installation, commissioning, operation or maintenance of the system
- Operation of the system with defective safety equipment, or with improperly attached or non-functional safety equipment and protective guards
- Non-compliance with directions included in the operating instructions with regard to transport, storage, installation, commissioning, operation, maintenance and setup of the system
- Unauthorized modifications to the system
- Improperly executed repairs
- Disasters resulting from the influence of foreign bodies and acts of God
- Dust generated during construction work must be kept away from the system (use coverings).

See the Environmental Requirements section (contamination level) for more details.

4.9 Transport

	<div data-bbox="751 311 818 369" style="text-align: center;"></div> <div data-bbox="852 331 1027 369" style="text-align: center;">WARNING</div> <ul style="list-style-type: none"> • Danger due to tipping over <ul style="list-style-type: none"> – Suitable packaging and transport equipment must be used when transporting the station. The station can be lifted from underneath using a forklift truck. Please note that eccentric centers of gravity can cause the station to tip over. – Stations with attachments at height will have a high center of gravity. – Take care to avoid tipping over during transportation.
---	--

	<div data-bbox="844 779 946 817" style="text-align: center;"><i>NOTE</i></div> <ul style="list-style-type: none"> • Station contains delicate components! <ul style="list-style-type: none"> – Take care not to shake during transportation • The station is only permitted for installation on solid, non-vibrating surfaces. <ul style="list-style-type: none"> – Make sure that the ground underneath the station has sufficient load-bearing capacity.
---	---

4.10 Name plates



Name plate example

Position	Description
1	Maximum pressure pneumatic (if available)
2	current consumption
3	Operating voltage
4	Serial number
5	Type number (Ordernumber) aaaaaa-aa (canadian nomenclature) bbbbbbbb (german nomenclature)
6	CE idenification
7	WEEE identification
8	Country of origin
9	Production year
10	Data Matrix Code (Type-and serial number)
11	Weight

4.11 CE Declaration of Conformity

FESTO

8101137

2018-10-17

(DE) Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller. Der beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union.

(EN) This declaration of conformity is issued under the sole responsibility of the manufacturer. The object of the declaration described is in conformity with the relevant Union harmonisation legislation.

(BG) Настоящата декларация за съответствие е издадена на отговорността на производителя. Предметът на описаната декларация отговаря на съответното законодателство на Съюза за хармонизация.

(CS) Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce. Popsaný předmět prohlášení je ve shodě s příslušnými harmonizačními právními předpisy Unie.

(DA) Denne overensstemmelseserklæring udstedes på fabrikantens ansvar. Genstanden for erklæringen, som beskrevet, er i overensstemmelse med den relevante EU-harmoniseringslovgivning.

(EL) Η παρούσα δήλωση συμμόρφωσης εκδίδεται με αποκλειστική ευθύνη του κατασκευαστή. Ο περιγραφόμενος στόχος της δήλωσης είναι σύμφωνος με τη σχετική ενωσιακή νομοθεσία εναρμόνισης.

(ES) La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante. El objeto de la declaración descrita es conforme con la legislación de armonización pertinente de la Unión.

(ET) Käesolev vastavusdeklaratsioon on välja antud tootja ainuvastutusel. Kirjelatud deklareeritav toode on kooskõlas asjaomaste liidu ühtlustamisaktidega.

(FI) Tämä vaatimustenmukaisuusvakuutus on annettu valmistajan yksinomaisella vastuulla. Kuvattu vakautuksen kohde on asiaa koskevan unionin yhdenmukais-tamisinsäännön vaatimusten mukainen.

(FR) La présente déclaration de conformité est établie sous la seule responsabilité du fabricant. L'objet décrit de la déclaration est conforme à la législation d'harmonisation de l'Union applicable.

(HU) Ezt a megfelelőségi nyilatkozatot a gyártó kizárólagos felelőssége mellett adják ki. Az ismertetett nyilatko-zat tárgyga megfelel a vonatkozó uniós har-monizációs jogszabályoknak.

(IT) La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante. L'oggetto della dichiarazione descritto è conforme alla pertinente normativa di armonizzazione dell'Unione.

(LT) Ši atitikties deklaracija išduota tik gamintojo atsakomybe. Aprašytas deklaracijos objekto atitinka susijusius derinamuosius Sąjungos teisės aktus.

(LV) Šī atbilstības deklarācija ir izdota vienīgi uz ražotāja atbildību. Aprakstītais deklarācijas objekts atbilst attiecīgajam Savienības saskaņošanas tiesību aktam.

(NL) Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant. Het beschreven voorwerp is in overeenstemming de desbe-treffende harmonisatiewetgeving van de Unie.

(PL) Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta. Wymieniony przedmiot niniejszej deklaracji jest zgodny z odpowiednimi wymaganiami unijnego prawodawstwa harmonizacyjnego.

(PT) A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante. O objeto da declaração descrito está em conformidade com a legislação aplicável de harmonização da União.

(RO) Prezenta declarație de conformitate este emisă pe răspunderea exclusivă a producătorului. Obiectul descris al declarației este în conformitate cu legislația relevantă de armonizare a Uniunii.

(SK) Toto vyhlásenie o zhode sa vydáva na vlastnú zodpovednosť výrobcu. Uvedený predmet vyhlásenia je v zhode s príslušnými harmonizačnými právnymi predpismi Unie.

(SL) Za izdajo te izjave o skladnosti je odgovoren izključno proizvajalec. Opisani predmet izjave je v skladu z ustrezno zakonodajo Unije o harmonizaciji.

(SV) Denna försäkran om överensstämmelse utfärdas på tillverkarens eget ansvar. Föremålet för försäkran överensstämmer med den relevanta harmoniserade unionslagstiftningen.

(TR) Bu Uygunluk Belgesi tamamen üreticinin sorumluluğunda altındadır. Belge de açıklanan obje, Birliğin ilgili uyum mevzuatına uygundur.

EG-Konformitätserklärung

EU Declaration of Conformity

Декларация за съответствие на ЕС

Prohlášení o shodě ES

EF-overensstemmelseserklæring

Δήλωση Συμμόρφωσης ΕΚ

Declaración de conformidad CE

EU vastavusdeklaratsioon

EY-vaatimustenmukaisuusvakuutus

Déclaration CE de conformité

EK megfelelőségi nyilatkozat

Dichiarazione di conformità EU

EB atitikties deklaracija

EK atbilstības deklarācija

EG-verklaring van

overeenstemming

Deklaracja zgodności WE

Declaração de conformidade CE

Declarație de conformitate CE

Vyhlásenie o zhode ES

Izjava ES o skladnosti

EG-försäkran om Överensstämmelse

The installation instructions according to the manual have to be followed. The person authorized to compile the technical documents is Philippe Drolet, Product conformity, Festo Didactic Ltée/Ltd. Canada.

Festo Didactic Ltée/Ltd. • 675 rue du Carbone • Québec, QC G2N 2K7 • CANADA • www.festo-didactic.com

8101137 – DoC0039

FESTO

8101137
2018-10-17

8050101	CP-LAB STATION
8050102	CP-LAB STATION
8058667	STATION CP BRIDGE
8032508	STACKING MAGAZINE
8061362	MEASURING STATION
8032510	MODULE DRILLING
8043598	MODULE IDRILLING
8038567	MODULE MUSCLE PRESS
8032507	MODULE PRESS
8032509	MODULE TURNING
8061184	MODULE WORKPIECE OUT
8032511	MODULE CAMERA INSP
8065842	MODULE LABELING
8032512	MODULE HEAT TUNNEL
8068413	MODULE PICK BY LIGHT
8092833	CP LAB STD CFG 4 STATIONS
8092834	CP LAB STD CFG 6 STATIONS
8092835	CP LAB STD CFG 8 STATIONS
8092836	CP LAB STD CFG 10 STATIONS
2006/42/EC	EN 60204-1:2006
2014/30/EU	EN 61326-1:2006
2011/65/EU	EN 50581:2012

Festo Didactic Ltée/Ltd

675 rue du Carbone
Québec, QC G2N 2K7
Canada
www.festo-didactic.com



Francis Larrivée

Francis Larrivée Ing.
Engineering- Festo Didactic

Philippe Drolet



Philippe Drolet
Product Compliance – Festo Didactic

4.12 General product safety

	<div data-bbox="751 311 1031 376"> WARNING</div> <ul style="list-style-type: none">• General product safety, CE conformity<ul style="list-style-type: none">– The product fulfills the requirements of all applicable EU directives. We confirm this with the CE mark.– As a consequence of Changes (hardware / software) Additions or improper use– Product safety can no longer be guaranteed by the operator.– In this case, the manufacturer's CE declaration of conformity expires. The operator must re-evaluate the safety and determine the CE conformity.
---	--

4.13 Protective devices

In order to reduce risks, this machine contains guards to prevent access to dangerous areas. These guards must not be removed or tampered with.

	 WARNING
	<ul style="list-style-type: none">• Damage to the safety window<ul style="list-style-type: none">– Windows must not be cleaned using aggressive or alcoholic cleaning agents. Risk of brittleness and breakage!– This protective device must be replaced if it shows any signs of damage. Please contact our Service department to arrange this.

4.13.1 Panel doors on underground control cabinet

Transparent, impact-resistant, polycarbonate plate with lock.

Can only be accessed with tool (control cabinet key); tool must be kept in a secure place!

Access reserved for qualified electricians.

The safety door is not monitored! Make sure the safety door is always closed.

4.13.2 Emergency stop




If a station has an emergency stop button, the emergency stop signal switches off all actuators. An acknowledgment by the operator is required for a restart, there is no automatic restart.

4.13.3 Additional protective devices

The individual components, such as the power supplies and the controllers, possess built-in safety functions such as short-circuit protection, overcurrent protection, overvoltage protection and thermal monitoring. If necessary, consult the instruction manual for the device in question for more information.

5 Technical Data

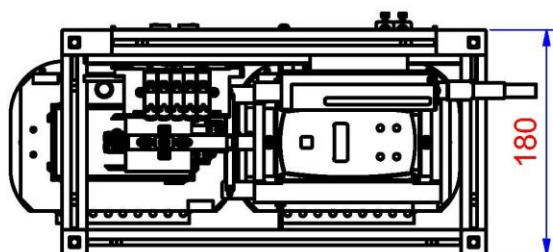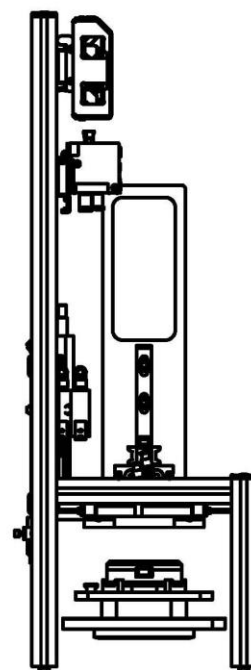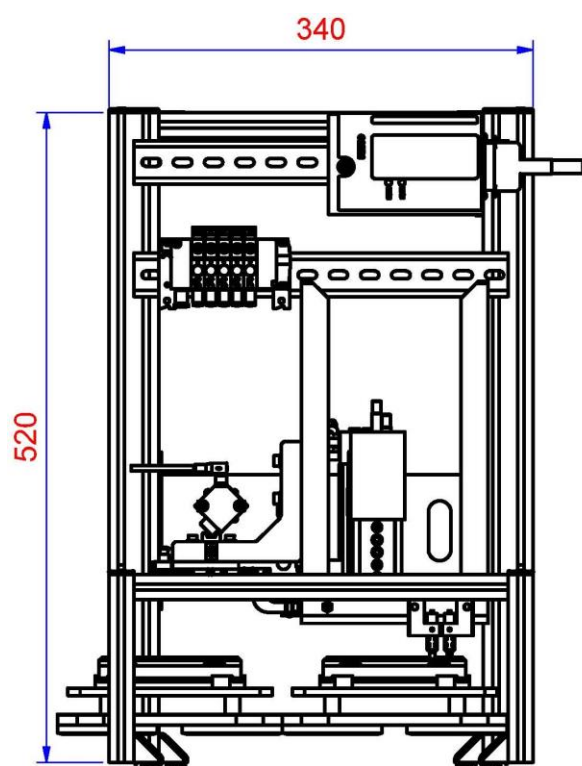

Parameter	Value
Electrics	
Power supply	24 V DC, 0,35 A safe low voltage (PELV)
Digital inputs	7
Digital outputs	5
Compressed air	
Supply pressure	6 bar, 90 psi
Supply rate	≥ 40 l/min
Compressed air quality	EN ISO 8573-1
Pressure dew point (Class 4)	≤ +3°C
Ambient conditions	
Operating environment	Use inside building only
Ambient temperature	5°C ... 40°C
Rel. air humidity	80% up to 31°C
Pollution degree	2, Dry, non-conductive contamination
Operating height	Up to 2000 m above NN (sea level)
Noise emission level	L _{pA} < 70 dB
Certification	
CE marking in accordance with:	Machinery Directive EMC Directive RoHS Directive
EMC environment	Industrial environment, Class A (in acc. with EN 55011)
Measurements	
Length	340 mm
Width	180 mm
Height	520 mm
Weight	Approx 6 kg
Subject to change	







Measurements / illustration similar


6 Design and Function

6.1 Transport

	<div style="text-align: center; background-color: #e67e22; color: white; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> • Damage to transport equipment when moving heavy machines/machine sections <ul style="list-style-type: none"> – When the stations are shipped out, extra care must be taken to ensure that heavy machines/machine sections are always transported using a suitable fork-lift truck. A single station can weigh up to 50 kg. – Always use suitable transport equipment. – Always use the lifting points provided to move the machine/machine sections. – Always use the designated load take-up point.
---	---

	<div style="text-align: center; background-color: #e67e22; color: white; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> • Securing transit routes <ul style="list-style-type: none"> – The supply routes must be cleared prior to transport, and must be suitable for the forklift truck to pass through. If necessary, warning signs or barrier tape must be set up to keep the routes clear. • Caution <ul style="list-style-type: none"> – When opening transport boxes, care must be taken to ensure that any additional components delivered in the same box, such as computers, do not fall out.
--	--


	<div style="text-align: center; background-color: #e67e22; color: white; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> • Danger of crushing for hands/feet <ul style="list-style-type: none"> – It is not permitted to grip onto or under the feet when handling the machine, as there is an increased risk of hands or feet getting crushed or trapped in these areas. – When setting down the station, make sure no persons have their feet under the machine's feet.
---	---

	<div data-bbox="834 248 948 291"><i>NOTE</i></div> <ul style="list-style-type: none">– When opening the transport box, any additional components must be secured to prevent them from falling out, and removed first.– Once this is done, the transport box can be removed/opened up fully, and the station can be taken out and moved to its intended location.– Care must be taken with all components projecting from the machine, as sensors and similar small parts can easily be damaged if the machine is not transported correctly.– Check that all the profile connectors are seated correctly using a size 4 – 6 Allen key. Unavoidable vibrations can loosen the connectors during transport.
---	--

6.2 Overview of the System

CP Lab Conveyor, CP Factory Linear, CP Factory Shunt and CP Factory Bypass are called basic modules. If an application module, e.g. the CP Application Module press is attached to a basic module, it becomes a station.

Example

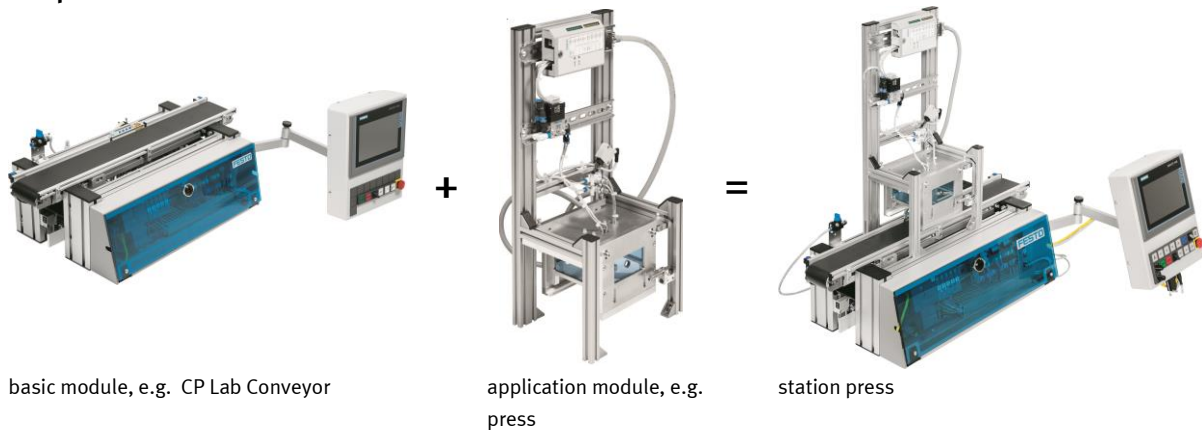


If several stations are put in a row one behind the other, this will form a production line.



Carriers are transported on the conveyors of the basic modules. And on the carriers, there are pallets with a fixed workpiece reception placed. The workpieces are placed on the workpiece reception or taken from it. Pallets can also be placed on a carrier in some stations or gripped from there.

The typical workpiece of a CP Factory/Lab System is the roughly simplified version of a mobile phone. The workpiece consists of a front cover, of a back cover, of a board and of a maximum of two fuses.

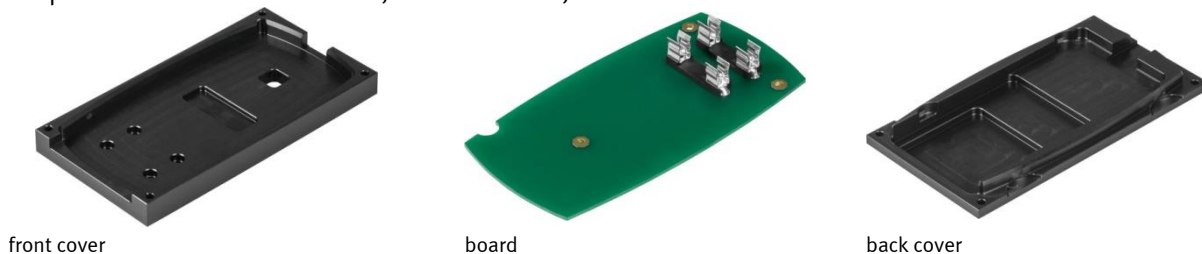

6.3 The application module magazine

The application module magazine is designed for

- Separate a front cover or a back cover from a magazine shaft and place the part on a carrier. There are two variants of this application module, these differ in their programs and the mechanics differ in the area of the separating unit. The electrical system as well as the circuit diagrams do not differ.

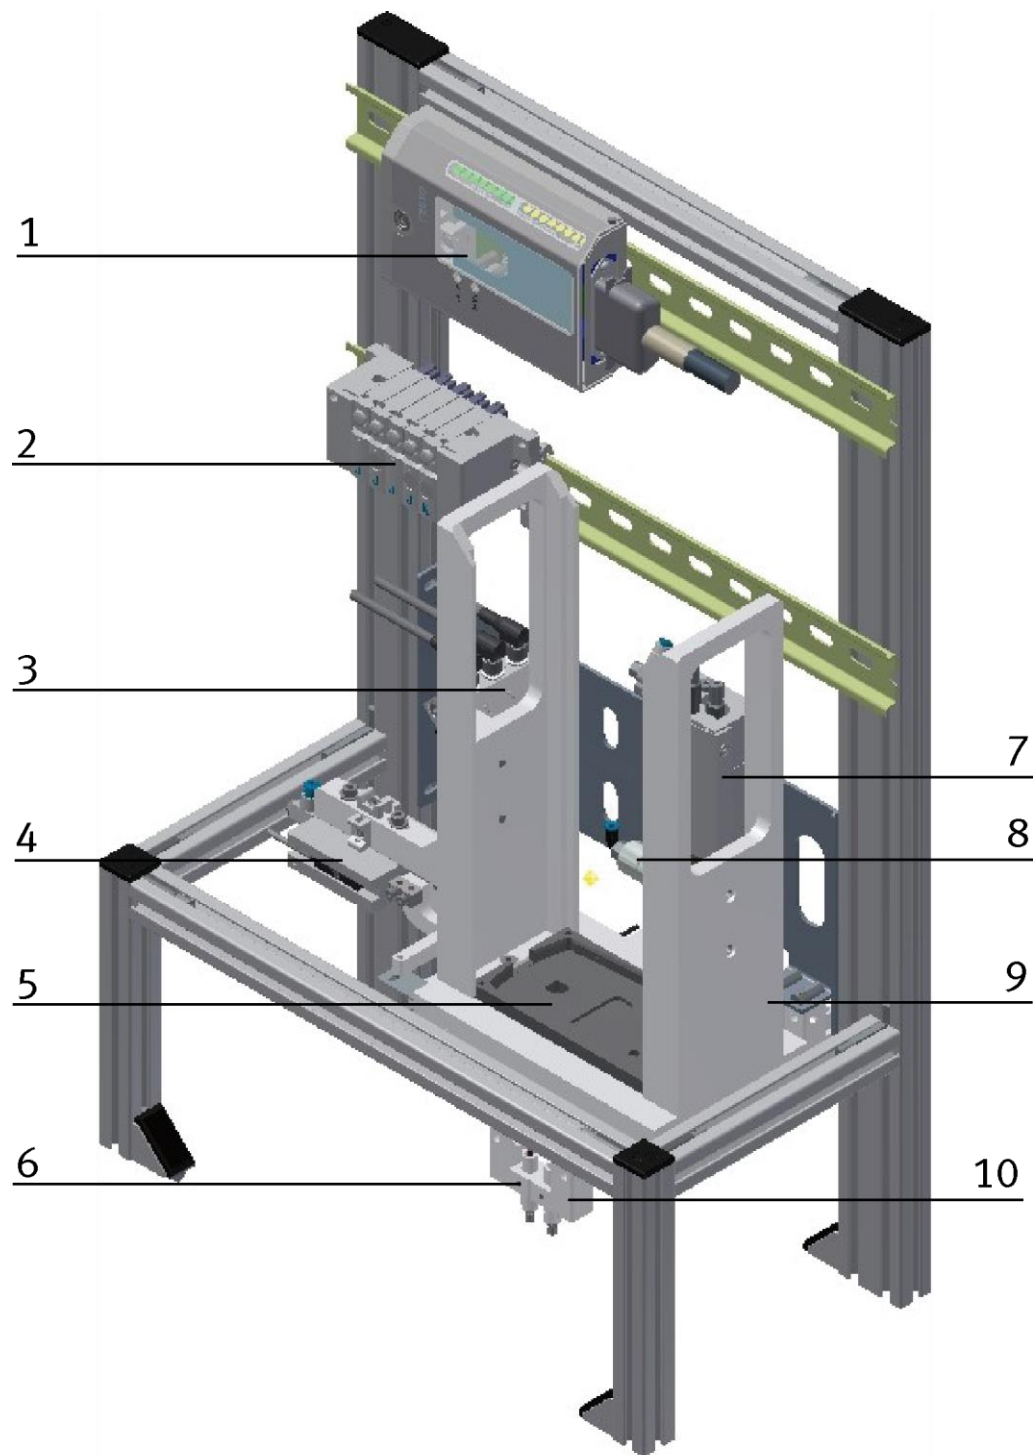


Illustration similar

Position	Designation	Name	Order No.
1	I/O Terminal		
2	Valve terminal	80P-10-1LIH-PB-N-SLC-4JK-T	525675
3	Fibre optic device workpiece available	SOEG-L-Q30-NA-S-2L	165327
4	Cylinder for workpiece separation	HPV-10-10-A	550908
5	Workpiece in magazine		
6	Check workpiece at running in	SOEZ-LLK-SE-2,0-M4	165360
7	Cylinder height adjustment	DGSL-10-40-E3-Y3A	543905
8	Locking cylinder height adjustment at end position	DGSL-10-40-E3-Y3A	543905
9	Magazine slot		
10	Check workpiece at running out	SOEZ-LLK-SE-2,0-M4	165360

6.4 Function

The application module is feeding a carrier with an front cover and a back cover. The carrier is recognized from a light barrier and then stopped. The sensors are checking the condition of the carrier. There are 3 possibilities

- There is no workpiece on the carrier
- There is a front cover on the carrier
- There is a back cover on the carrier

According to circumstances and task, a workpiece is isolated from the magazine to the carrier. Afterwards the carrier is released.

6.5 Variants

If the workpiece is changed from front to back cover or reversed, a modification from the inlay strip is necessary. All important notes are in the following table.

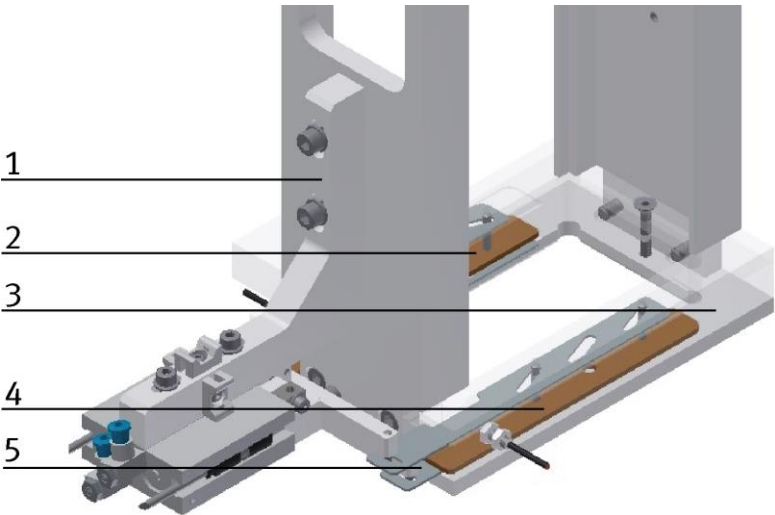


Illustration similar

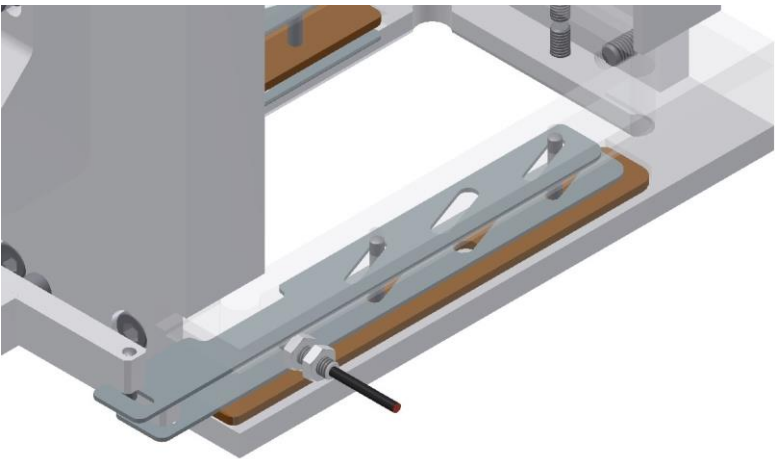


Illustration similar

Position	Description
1	Bracket mount for cylinder, if the housing is changed, it could be possible to align the mount again
2	Inlay strip left side – same adjustment then the right side
3	Cover frame, if the part is changed, the frame has to remove for assembly
4	Inlay strip right side – with the inlay strip it is possible to adjust the magazine to the housing Inlay strip in upper position mounted - front cover is isolated (upper graphic) Inlay strip in lower position mounted – back cover is isolated (lower graphic)
5	Locking lever lower position – in dependence of the inlay strip, the locking lever is mounted in upper or lower position

6.6 Process description

Start Conditions

- All connections have been made properly

Start position

- The cylinder of the lifting unit must be in its upper end position.
- The isolating cylinder must be in the rear end position

Sequence

1. If a carrier is transported with a workpiece through the light barrier of the application module magazine, the carrier is stopped, and an automatic mode is started.
2. The sensors are checking the condition of the carrier
3. If the conditions are fitting to the requirements, the lifting unit drives downwards.
4. A part is isolated and put on the carrier.
5. The lifting unit drives upward to its start position.
6. Having arrived at the top, the carrier is released and leaves the application module.

6.7 Electrical Connections

6.7.1 Overview

Connection with syslink connectors

The application module is connected to the electrical board of the module via I/O. The I/O box (1) of the application module is connected to the I/O terminal (2) on the module's electrical board.

The example refers to the connection to a basic module linear, it is possible that the terminal names of the I/O terminal differ when connected to another module.

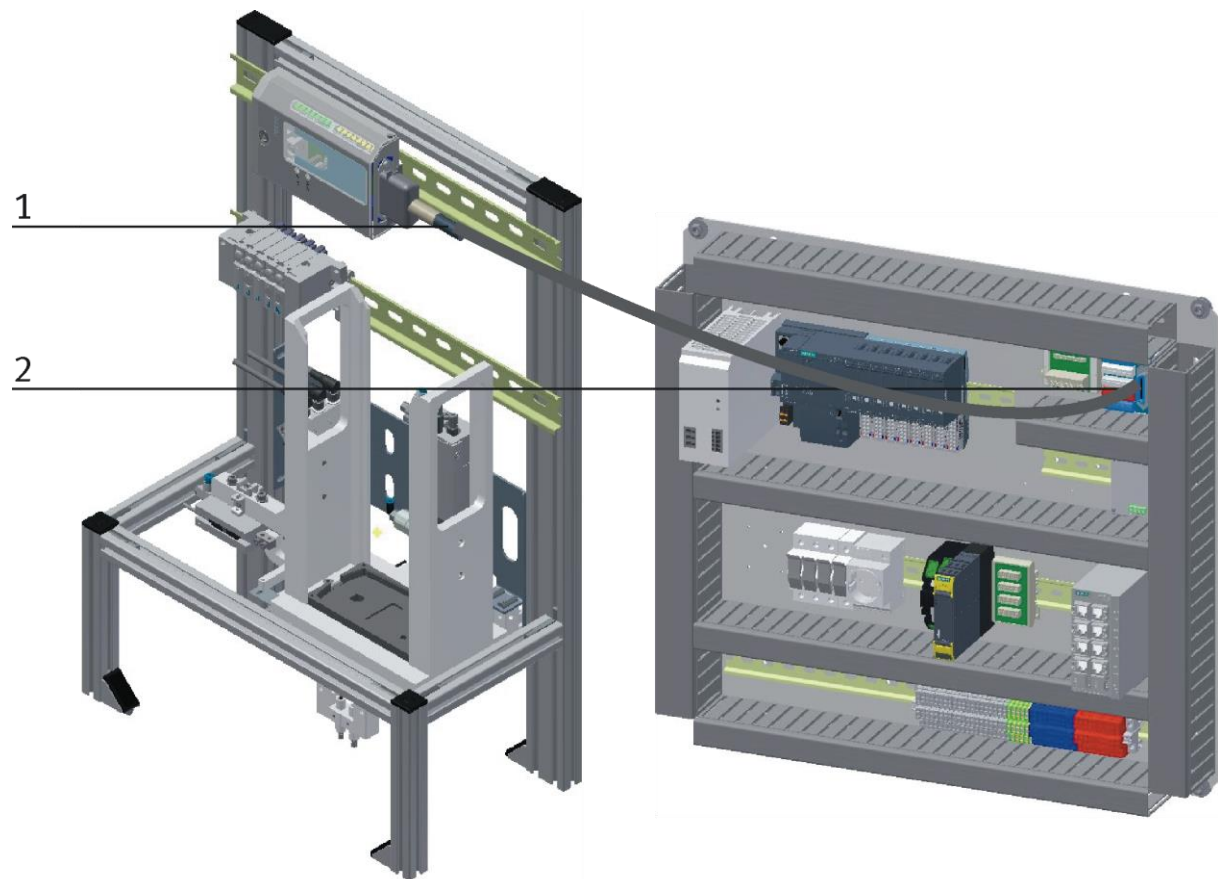


Illustration similar

6.7.2 I/O Box XD1

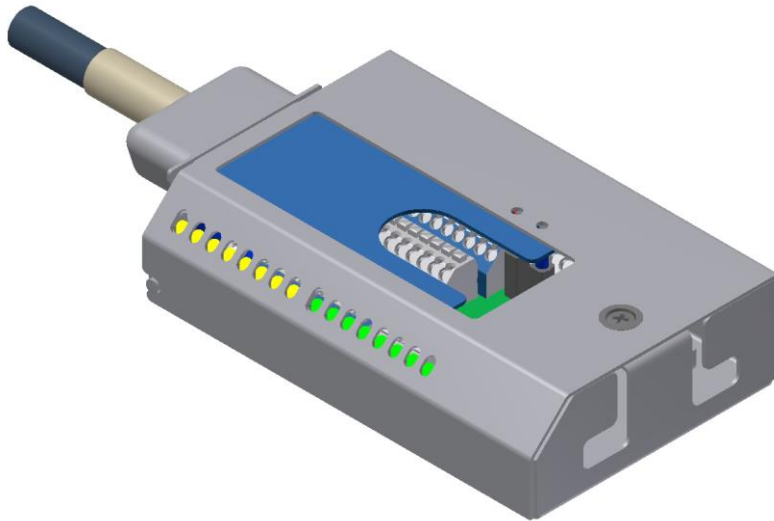


Illustration similar

Inputs Box

Designation	Equipment Identifier	Application	Application SysLink
Lifting unit cylinder upper position	BG1	XD1 / XK:I0	XD1:XS13
Lifting unit cylinder lower position	BG2	XD1 / XK:I1	XD1:XS14
Lower pawl is extended / initial position	BG3	XD1 / XK:I2	XD1:XS15
Upper pawl is extended	BG4	XD1 / XK:I3	XD1:XS16
0= Magazine is empty	BG5	XD1 / XK:I4	XD1:XS17
Reserve		XD1 / XK:I5	XD1:XS18
Pallet Front cover 1 = pallet available Back cover 1 = front cover available	BG7	XD1 / XK:I6	XD1:XS19
Front cover Front cover 1 = front cover already available Back cover 1 = back cover already available	BG8	XD1 / XK:I7	XD1:XS20

Outputs Box

Designation	Workpiece Identifier	Application	Application SysLink
Lifting cylinder up	MB1	XD1 / XK:O0	XD1:XS1
Lifting cylinder down	MB2	XD1 / XK:O1	XD1:XS2
Separator close	MB3	XD1 / XK:O2	XD1:XS3
Open separator	MB4	XD1 / XK:O3	XD1:XS4
Open cylinder clamping unit	MB5	XD1 / XK:O4	XD1:XS5
Reserve		XD1 / XK:O5	XD1:XS6
Reserve		XD1 / XK:O6	XD1:XS7
Reserve		XD1 / XK:O7	XD1:XS8

6.7.3 I/O Terminal XD15

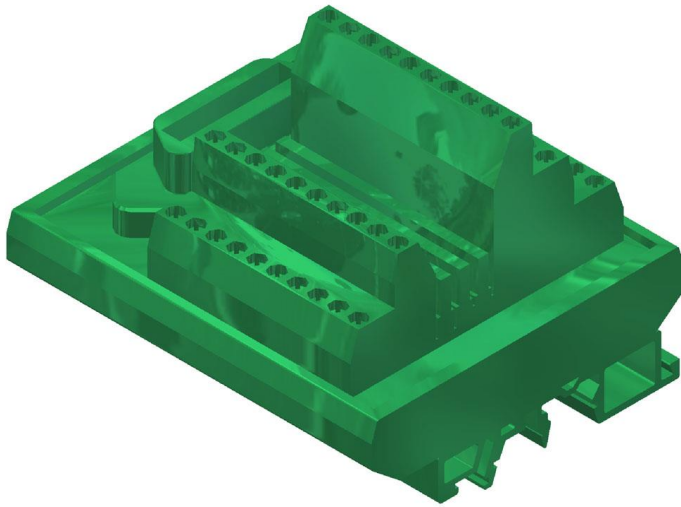


Illustration similar


Terminal Inputs

Designation	Terminal Board SysLink	Terminal Board	Input Control Unit
Lifting unit cylinder upper position	XD15:XS13	XD15 / XK:I0	K5-KF4:1 / I2.0
Lifting unit cylinder lower position	XD15:XS14	XD15 / XK:I1	K5-KF4:2 / I2.1
Lower pawl is extended / initial position	XD15:XS15	XD15 / XK:I2	K5-KF4:3 / I2.2
Upper pawl is extended	XD15:XS16	XD15 / XK:I3	K5-KF4:4 / I2.3
0= Magazine is empty	XD15:XS17	XD15 / XK:I4	K5-KF4:5 / I2.4
Reserve	XD15:XS18	XD15 / XK:I5	K5-KF4:6 / I2.5
Pallet Front cover 1 = pallet available Back cover 1 = front cover available	XD15:XS19	XD15 / XK:I6	K5-KF4:7 / I2.6
Front cover Front cover 1 = front cover already available Back cover 1 = back cover already available	XD15:XS20	XD15 / XK:I7	K5-KF4:8 / I2.7


Terminal Outputs

Designation	Terminal Board SysLink	Terminal Board	Output Control Unit
Lifting cylinder up	XD15:XS1	XD15 / XK:O0	K5-KF12:1 / Q2.0
Lifting cylinder down	XD15:XS2	XD15 / XK:O1	K5-KF12:2 / Q2.1
Separator close	XD15:XS3	XD15 / XK:O2	K5-KF12:3 / Q2.2
Open separator	XD15:XS4	XD15 / XK:O3	K5-KF12:4 / Q2.3
Open cylinder clamping unit	XD15:XS5	XD15 / XK:O4	K5-KF12:5 / Q2.4
Reserve	XD15:XS6	XD15 / XK:O5	K5-KF12:6 / Q2.5
Reserve	XD15:XS7	XD15 / XK:O6	K5-KF12:7 / Q2.6
Reserve	XD15:XS8	XD15 / XK:O7	K5-KF12:8 / Q2.7

7 Commissioning

	<p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> – The following applies to the start-up as well as to the restart.
---	---

- The CP Application Module is delivered pre-assembled.
- All attachment parts are individually packaged.
- All components, tubings and cabling have been clearly marked in order to guarantee a problem-free retrieving of all connections.
- For the operation within a CP Factory/Lab System, the CP Application Module has to be put on and attached to a basic module.

	<p style="text-align: center;">NOTE</p> <ul style="list-style-type: none"> – You can read the general installation instructions in the manual of your basic module. The following instructions apply particularly to the CP Application Module.
---	---

7.1 Workplace

The commissioning of the CP Application Module requires:

- a CP Application Module
- a basic module CP Factory or a basic module CP Lab Conveyor for the installation of the CP Application Module
- a SysLink cable for the connection between the I/O terminal of the CP Application Module and the basic module CP Factory
- an Ethernet cable for the connection of the motor controller (option)
- an on-site electrical connection in the room, see data sheet basic module
- an on-site pneumatically connection in the room, see data sheet basic module

7.2 Visual Inspection

	<div data-bbox="384 311 1402 383"> WARNING</div> <ul style="list-style-type: none">• Any damages must always be repaired instantly.
---	--

Visual inspection has to be carried out prior to every commissioning!

Before you start the CP Application Module, you must always inspect the following parts regarding visual damages and function:

- Electrical connections
- Mechanical components and connections
- Emergency Stop devices

7.3 Safety Regulations


	<div data-bbox="384 913 1402 985"> WARNING</div> <ul style="list-style-type: none">• Any damages must always be repaired instantly.
--	--

The CP Application Module may only be operated on the following conditions:

- The technical condition – mechanically and electrically – of the CP Application Module is perfect.
- The CP Application Module is used in accordance with the regulations.
- The operating instructions have been read and understood.
- All safety devices are available and active.

7.4 Assembly

7.4.1 Assembly of an CP application module to a CP Lab conveyor




NOTE

– The procedure of attaching the CP application module to a CP Lab conveyor is the same as with all basic modules. The following description is an example for all application modules.

Positioning slot nuts in the cross profiles of the CP Lab Conveyor

Mounting the CP application module is very easy:

- Two M5-slot nuts (2) have to be put into the inner front slot of the cross profile (4) of the CP Lab Conveyor.
- Then put two additional M5-slot nuts (2) into the inner back slot of the cross profile (3) of the CP Lab conveyor.
- Then you have to position the slot nuts (2) approximately to the distance of the vertical cross profiles of the CP application module.

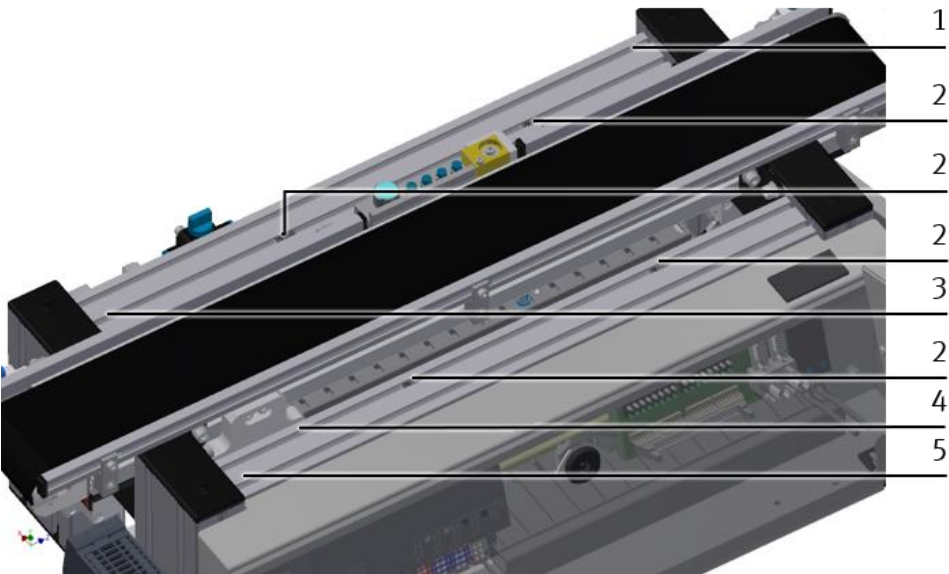


Positioning slot nuts / illustration similar

Position	Description
1	back cross profile
2	slot nut
3	Inner slot (back cross profile)
4	Inner slot (front cross profile)
5	front cross profile


Attaching the application module to the CP Lab Conveyor

- Put the CP application module on the CP Lab Conveyor.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.



NOTE

– Use Allen keys for lateral adjustment of the slot nuts.

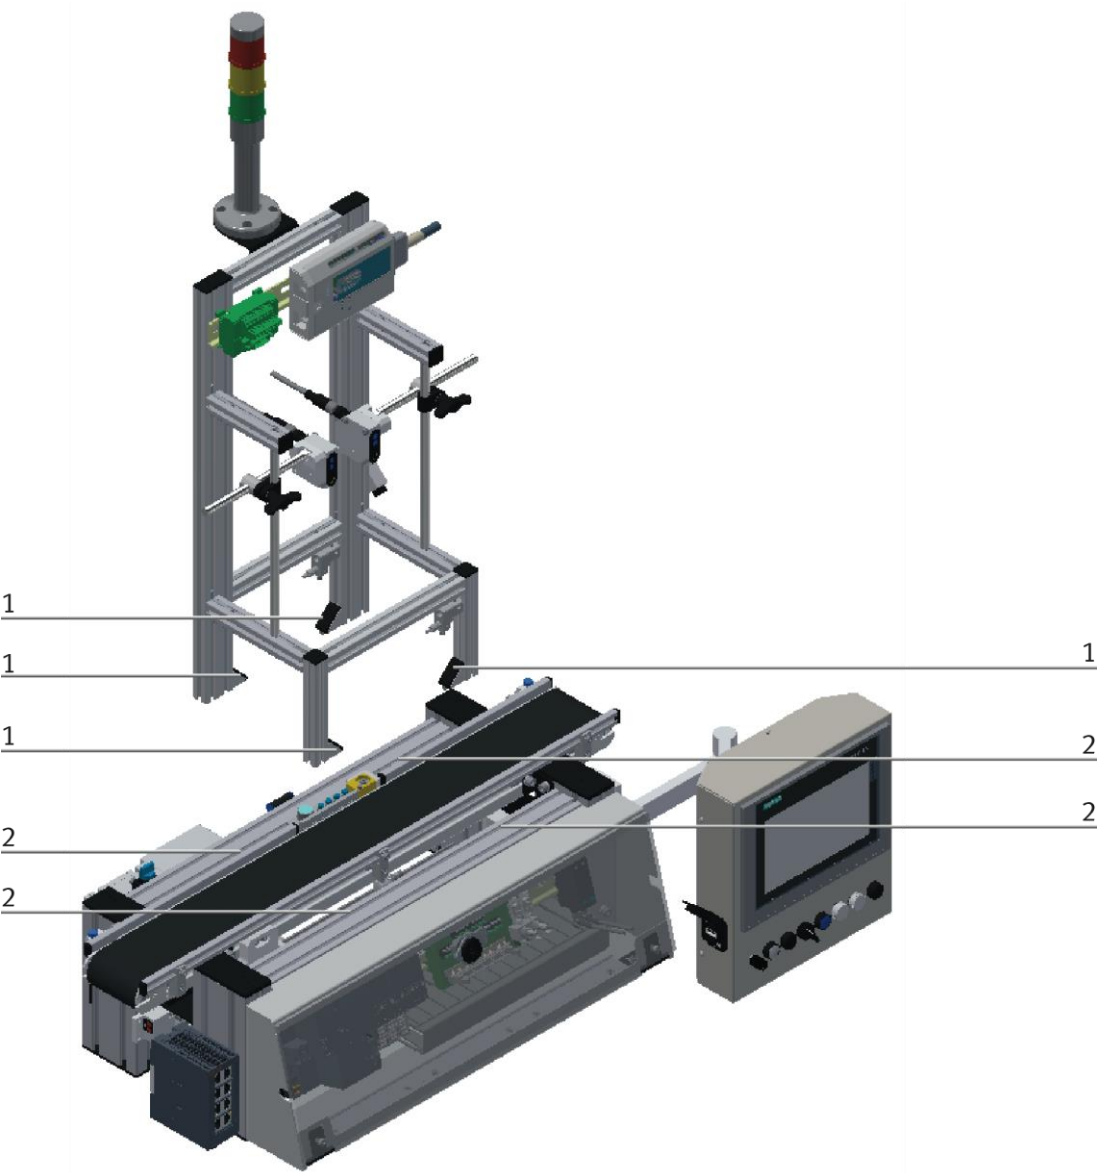


How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

Adjusting the CP application module and fixing it on the CP Lab Conveyor


- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the CP Lab Conveyor.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

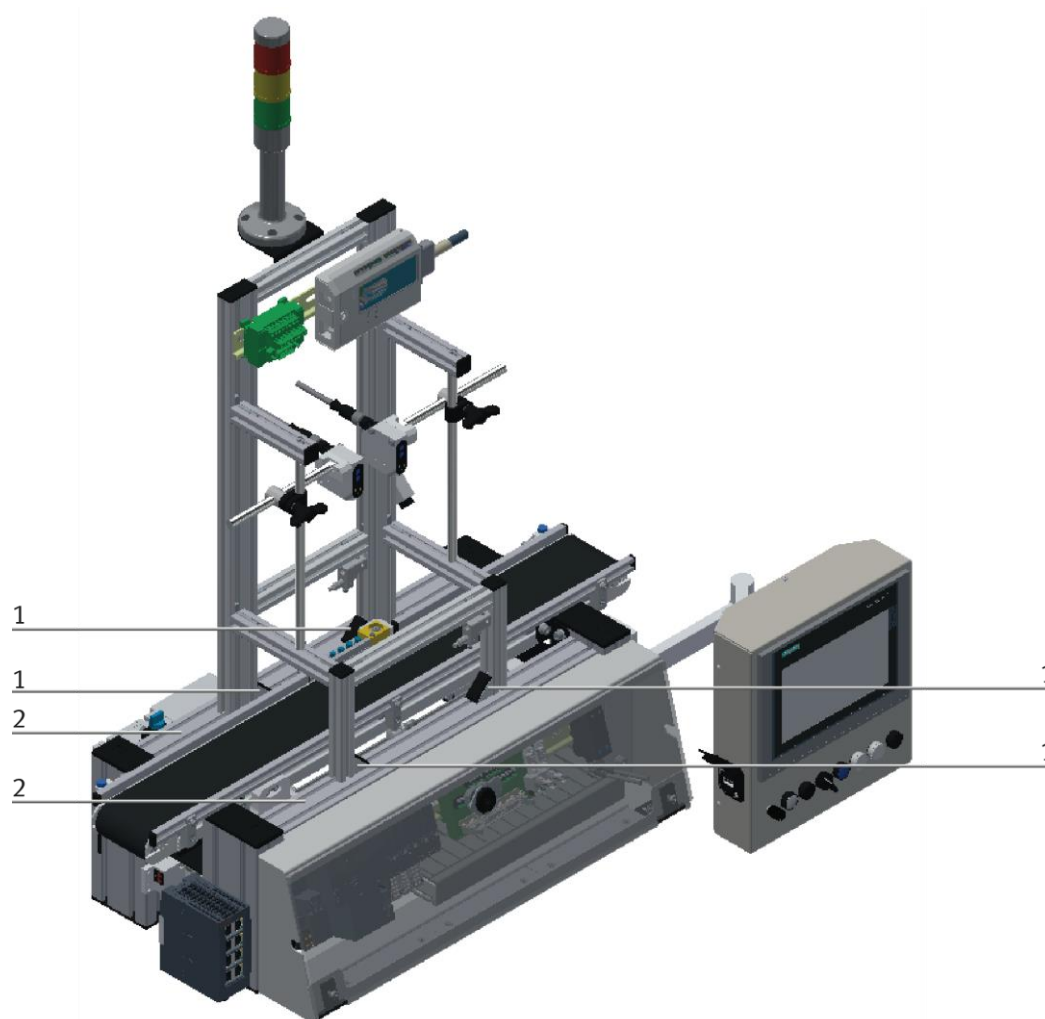

Tightening the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket with cover
2	CP Lab Conveyor: cross profile

7.4.2 Connecting the CP application module electrically to basic module CP Lab Conveyor
SysLink-interface for digital signals




NOTE

– With special variants of the CP Lab Conveyor, you absolutely have to observe the corresponding operation instructions of the CP Lab Conveyor!

The CP application module exchanges digital input and output signals with the CP Lab conveyor via the SysLink interface:

- Connect the I/O terminal (2) of the CP application module with the control (3) of the CP Lab Conveyor. Therefore use the connecting cable with SysLink plugs (5) which has already been attached to the control and is led out on the back side of the CP Lab Conveyor.

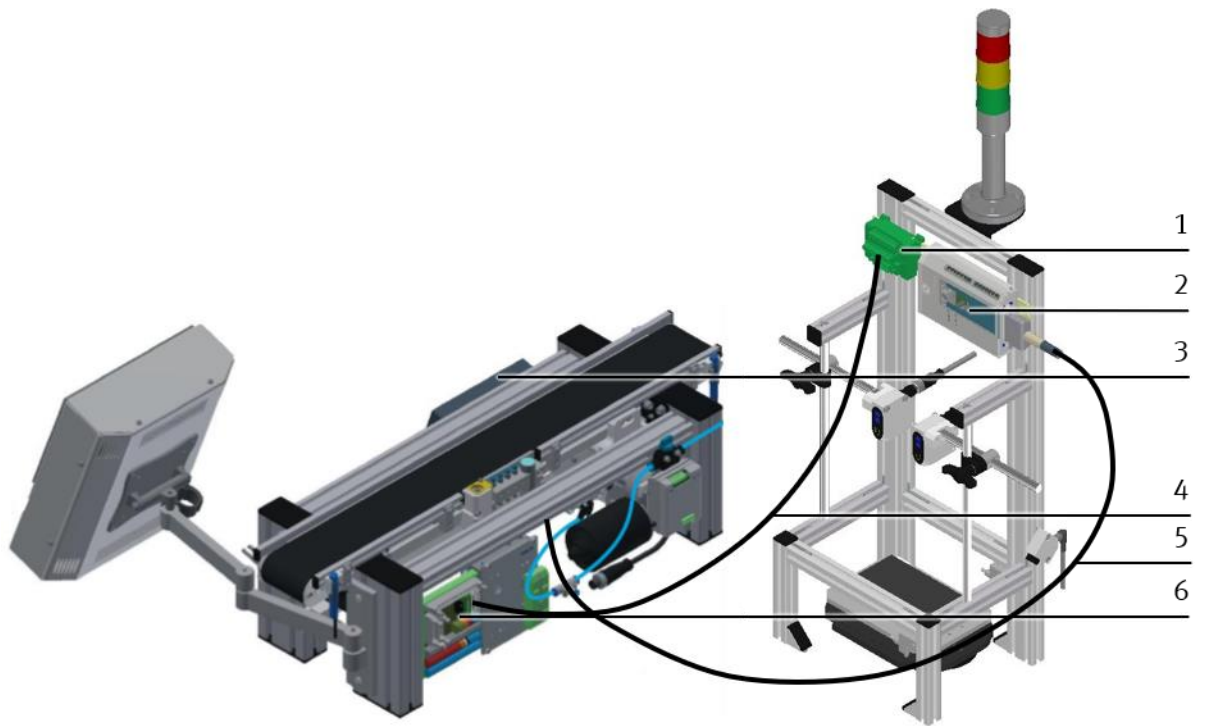


Electrical connections / illustration similar

Position	Description
1	CP application module: analogue terminal (+BG-XD2A)
2	CP application module: I/O terminal (+BG-XD1)
3	CP Lab Conveyor: control or decentralized periphery
4	connecting cable with15-pin standard D-Sub-plugs
5	connecting cable with a SysLink-plug (SysLink-cable)
6	CP Lab Conveyor: board at the back (+G1-XZ2)

D-Sub-interface for analogue signals

The CP application module produces two analogue output signals with the distance sensors. These are put on the analogue terminal (1) and must be connected with the analogue inputs of the CP Lab conveyor:

- Connect the analogue terminal (1) of the CP application module with the D-Sub-interface for analogue signals (6) on the rear board of the CP Lab Conveyor. Therefore use the provided connecting cable (4) with standard D-Sub plugs: 15-pin, two-rowed.

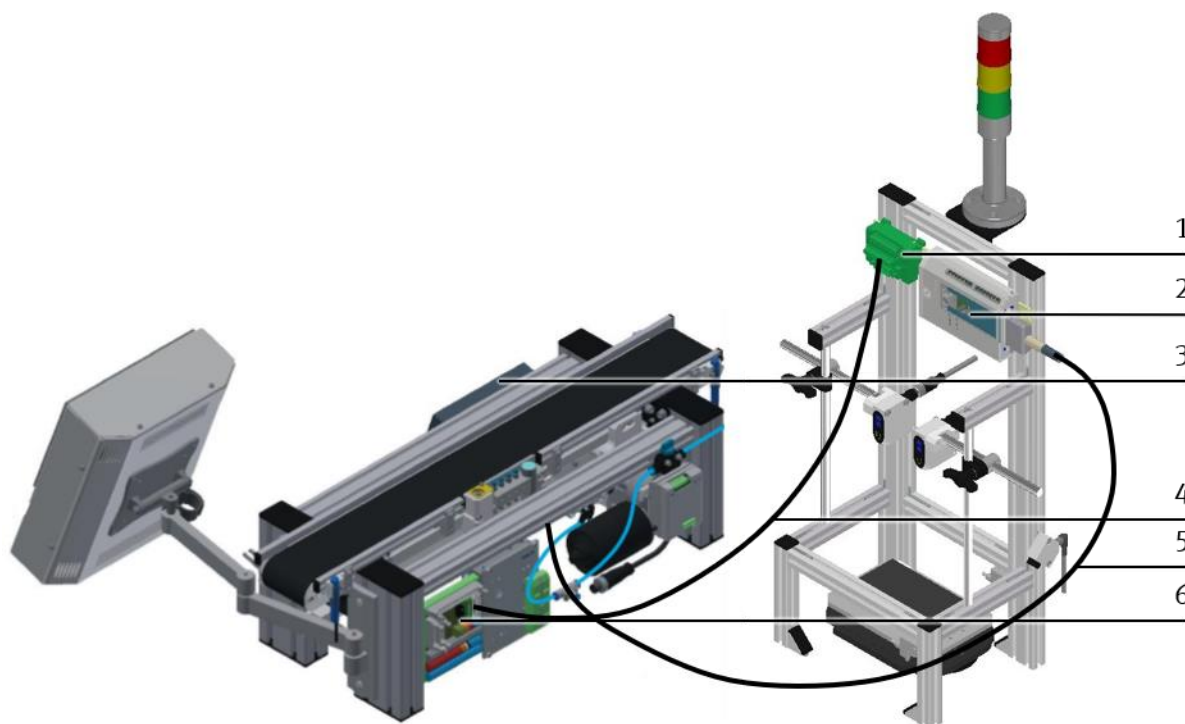


Electrical connections / illustration similar

Position	Description
1	CP application module: analogue-terminal (+BG-XD2A)
2	CP application module: I/O terminal (+BG-XD1)
3	basic module CP Lab Conveyor: control or decentralized periphery
4	connecting cable with 15-pin standard D-Sub-plugs
5	connecting cable with a SysLink-plug (SysLink-cable)
6	basic module CP Lab Conveyor: board at the back (+G1-XZ2)

7.4.3 Pneumatic connection from application modules

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve terminal to the shut-off valve (2) on the conveyor belt. The hose (1) (nominal width 4) is simply inserted into the QS connector. The supply line (5) is plugged into the T-plug (3). The CP Lab conveyor is also supplied with a T-connector (4).

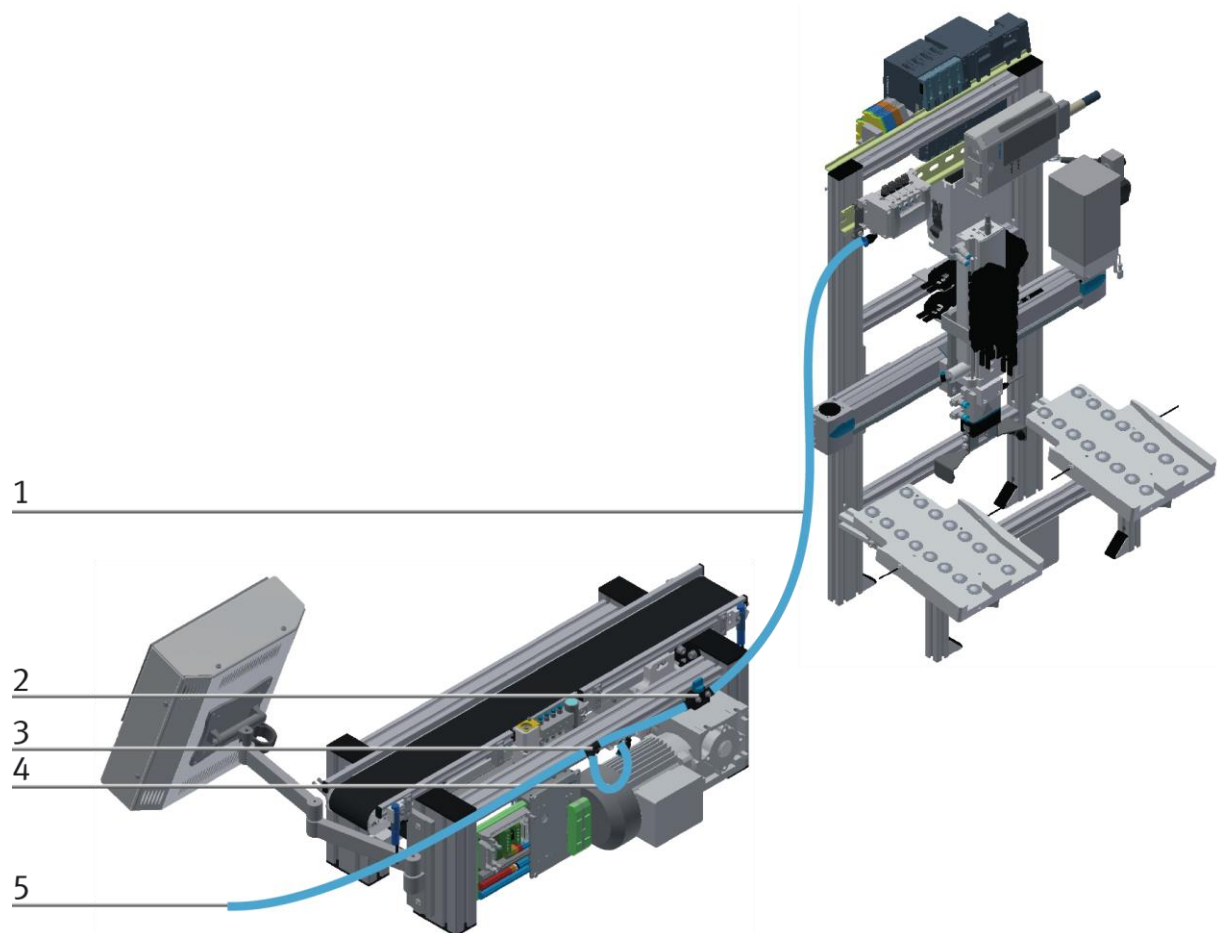

Pneumatically connect application module / illustration similar

7.4.4 Assembly of an CP application module to a CP Factory basic module




NOTE

The procedure for installing a CP application module on a basic module is identical for all basic modules. The following example is an example for all basic modules and applications.

Positioning slot nuts in the cross profiles of the CP Factory basic module

Mounting the CP application module is very easy:

- Two M5-slot nuts (1) have to be put into the inner front slot of the cross profile (4) of the CP Factory basic module.
- Then put two additional M5-slot nuts (1) into the inner back slot of the cross profile (2) of the basic module.
- Then you have to position the slot nuts (1) approximately to the distance of the vertical cross profiles of the CP application module.

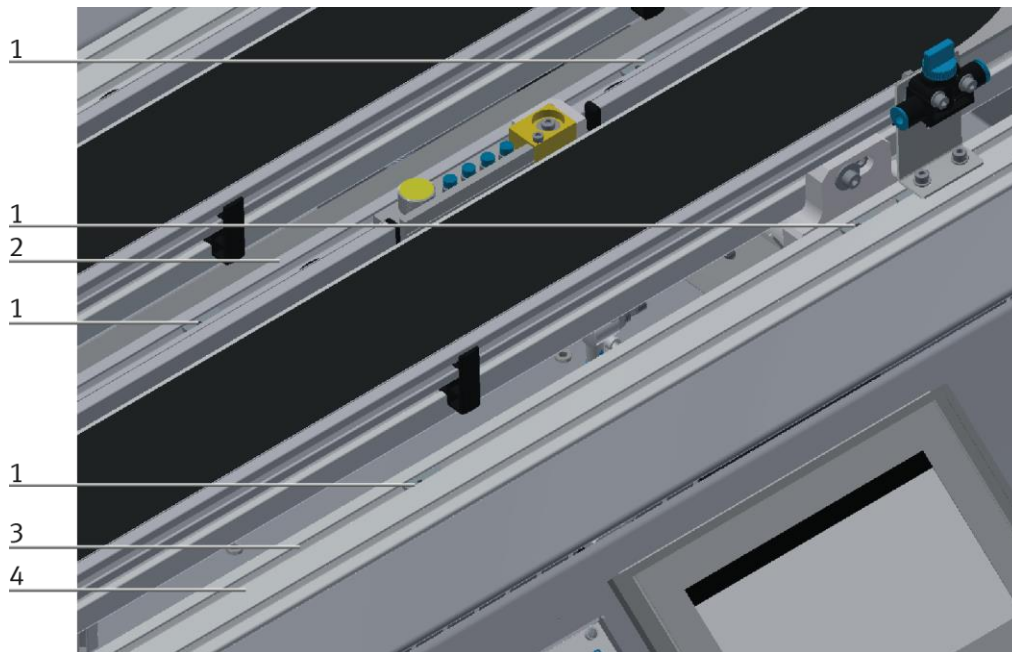


Positioning slot nuts / illustration similar

Position	Description
1	slot nut
2	back cross profile
3	Inner slot (front cross profile)
4	front cross profile


Attaching the application module to the CP Factory basic module

- Put the CP application module on the CP Factory basic module.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.



NOTE

Use Allen keys for lateral adjustment of the slot nuts.

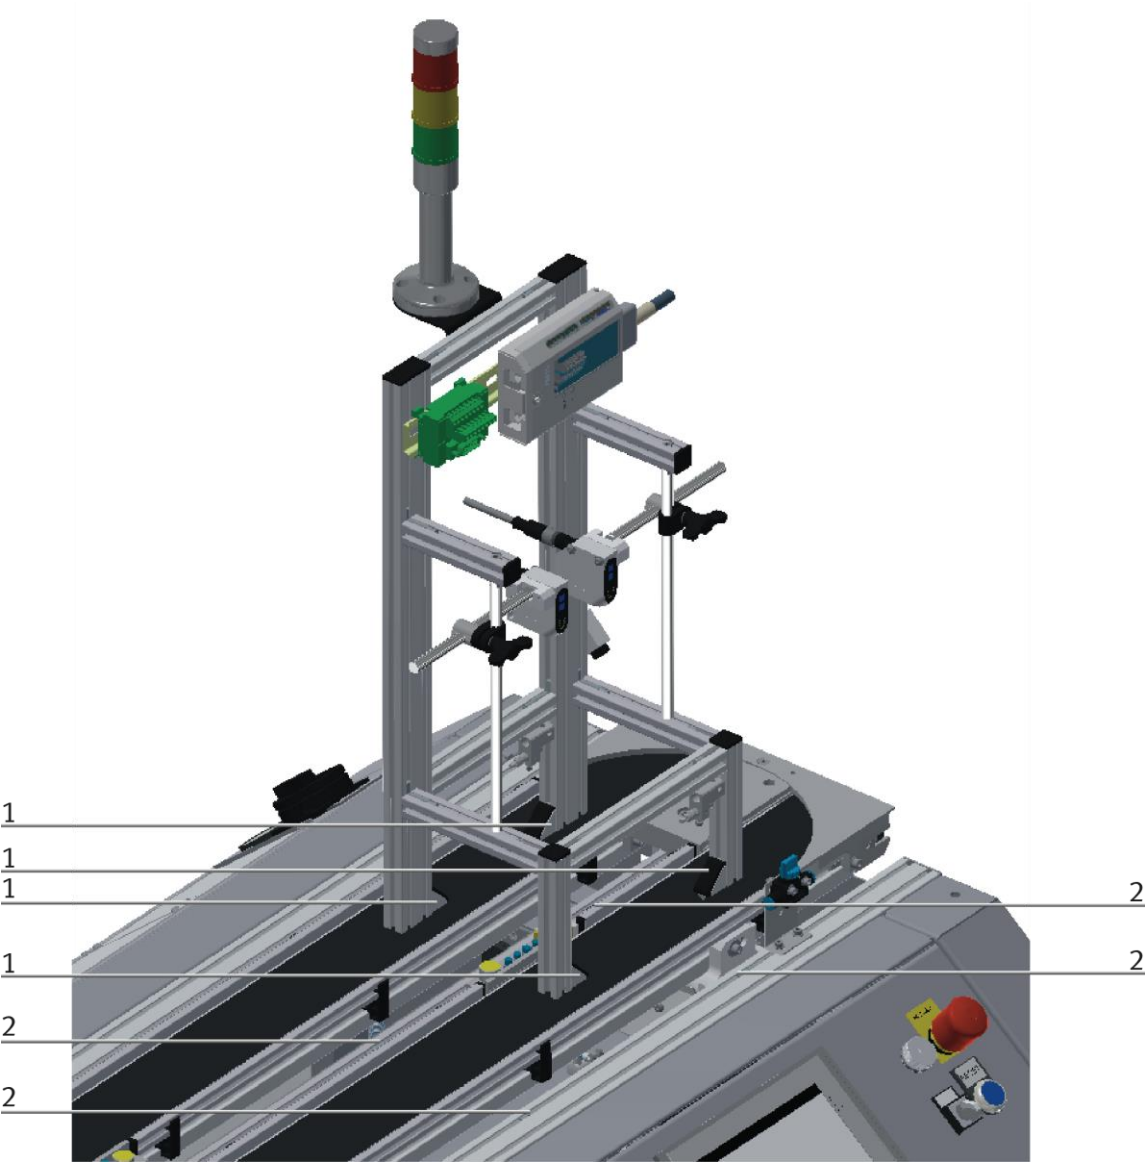


How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

Adjusting the CP application module and fixing it on the CP Factor basic module

- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the CP Factory basic module.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

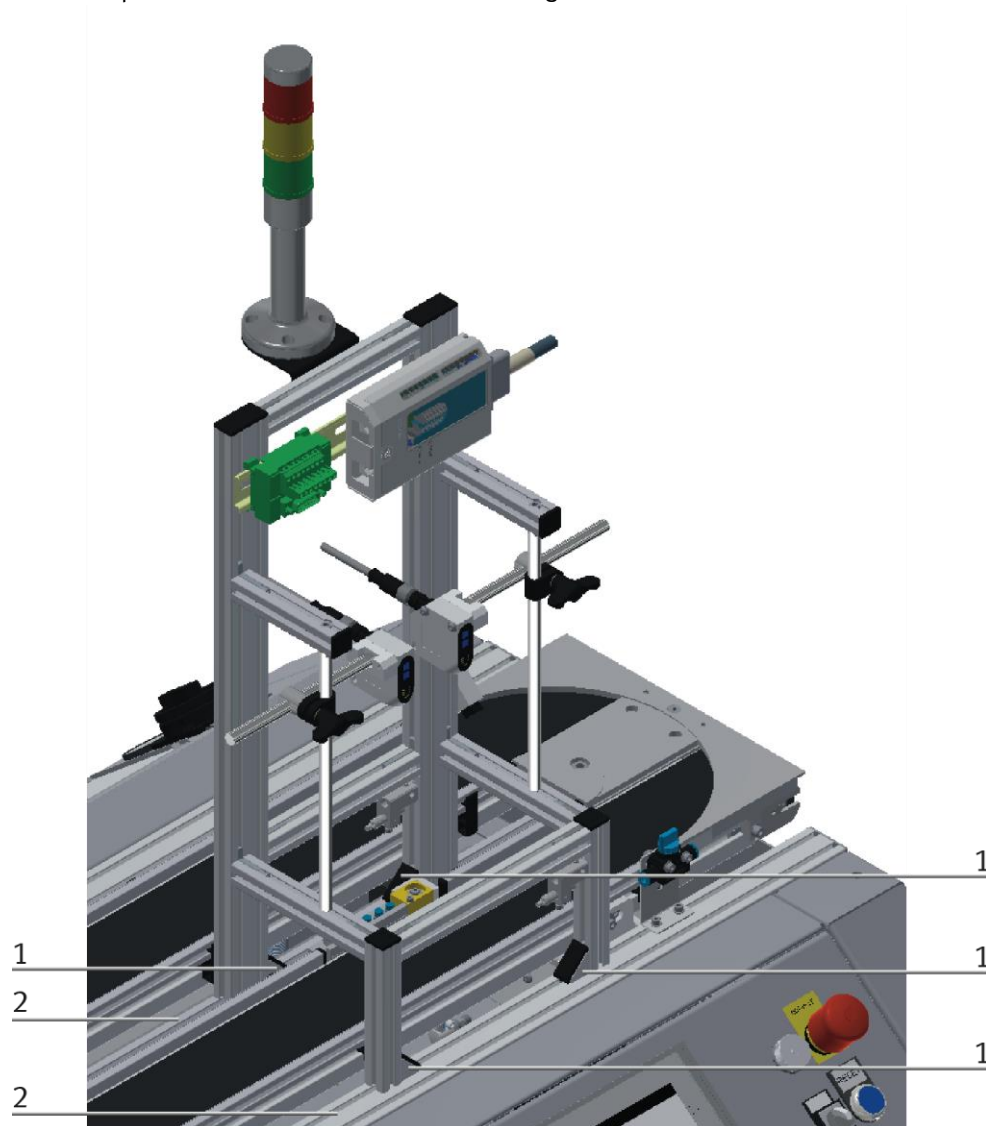

Tightening the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket with cover
2	CP Factory basic module: cross profile

7.4.5 Connecting the CP application module electrically to the CP Factory basic module

SysLink-interface for digital signals


The CP application module exchanges digital input and output signals with the basic module via the SysLink interface:

- Connect the I/O terminal (2) of the CP application module with the I/O terminal (5) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable with SysLink plugs (3).

D-Sub-interface for analogue signals (option – not available at all CP application modules)

The CP application module produces two analogue output signals with the distance sensors. These are set on the analogue terminal (1) and have to be connected with the analogue inputs of the CP Factory basic module:

- Connect the analogue terminal (1) of the CP application module with the analogue terminal (6) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable (4) with standard D-Sub plugs: 15-pin, two-rowed.

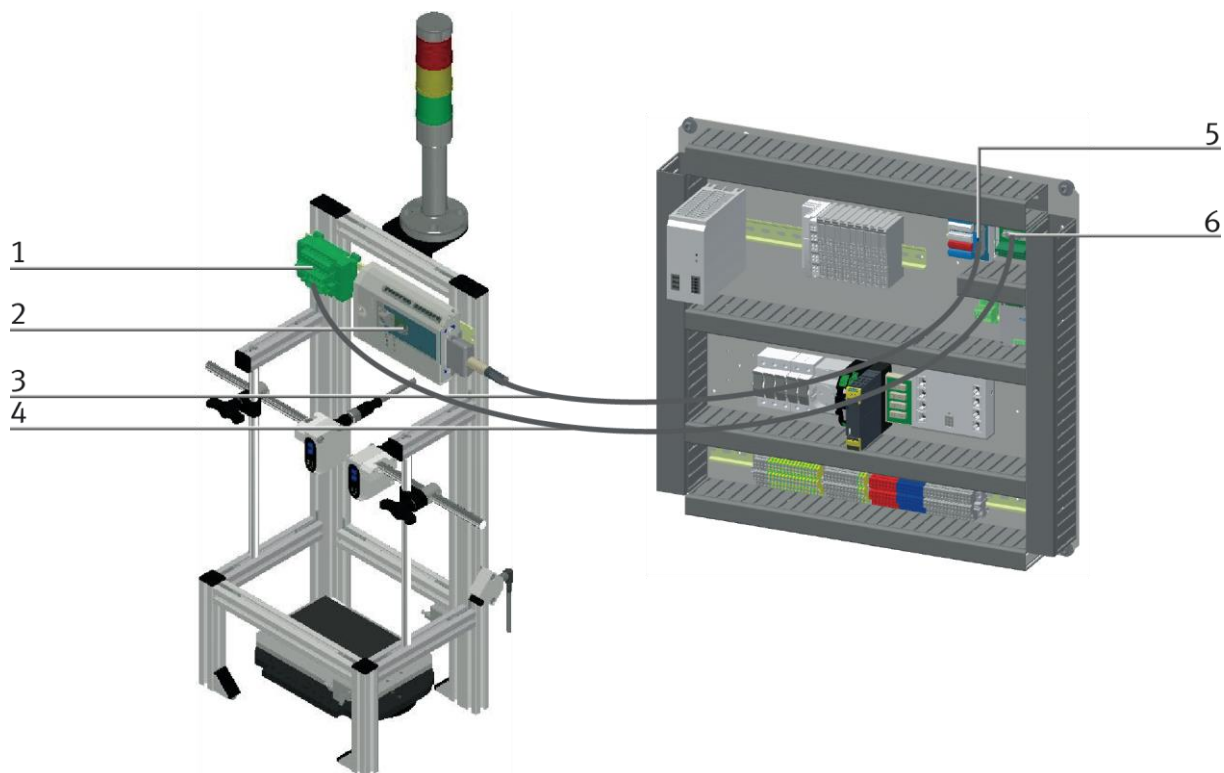


Electrical connections / illustration similar

Position	Description
1	CP application module: analogue terminal (+BG-XD2A)
2	connecting cable with 15-pin D-Sub-plugs
3	CP application module: I/O terminal (+BG-XD1)
4	connecting cable with SysLink-plugs (SysLink-cable)
5	electric board CP Factory basic module: I/O terminal (+K1-XD15)
6	electric board CP Factory basic module: analogue terminal (+K1-XD16A)

7.4.6 Pneumatic connection from application modules

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve terminal to the shut-off valve (2) on the conveyor belt. The hose (1) (nominal width 4) is simply inserted into the QS connector. The supply line (5) is plugged into the T-plug (3). The CP Lab Band is also supplied with a T-connector (4).

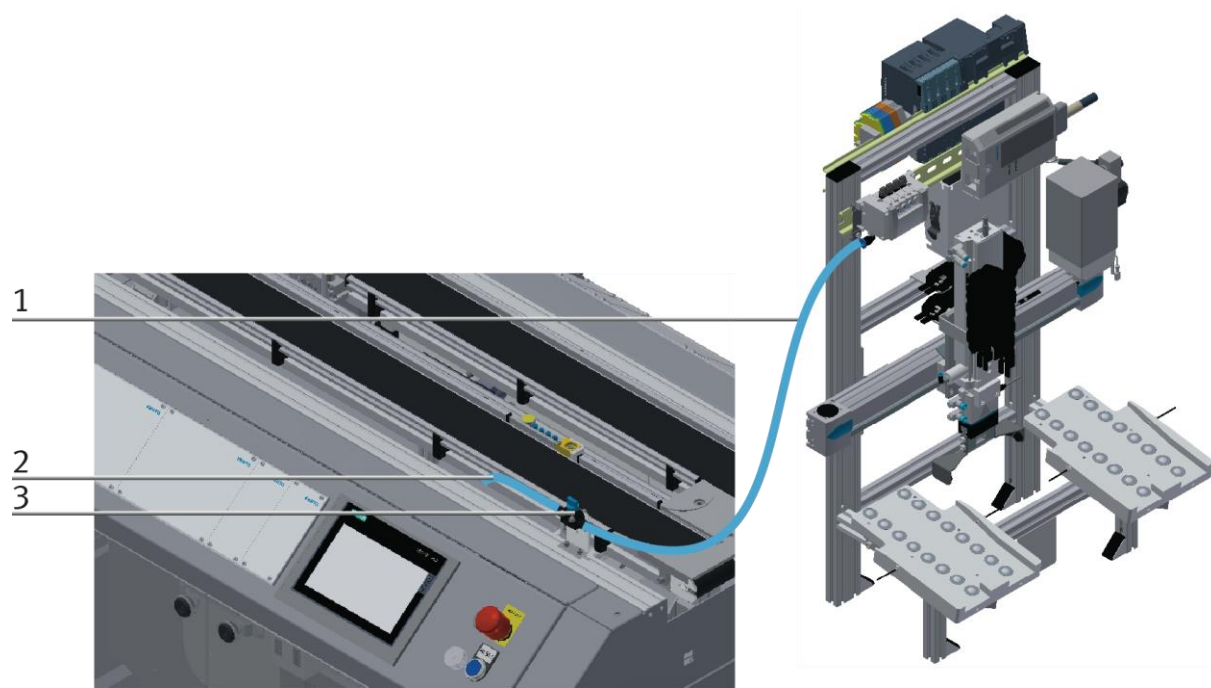

Pneumatically connect application module / illustration similar

7.5 Adjusting the sensors
7.5.1 Through-beam sensor (Workpiece detection)

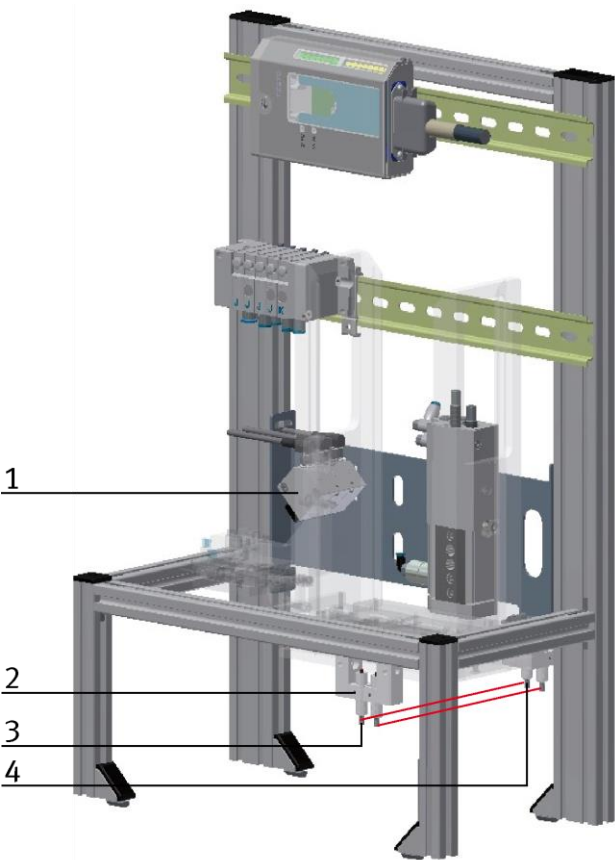


Illustration similar

Position	Description
1	fibre-optic unit / 165327 (SOEG-L-Q30-P-A-S-2L)
2	Locking screw for clamping/adjusting the sensor socket vertically
3	Sensor socket with sensor and light deflection/ 165360 (SOEZ-LLK-SE-2,0-M4)
4	Sensor holder backside complete

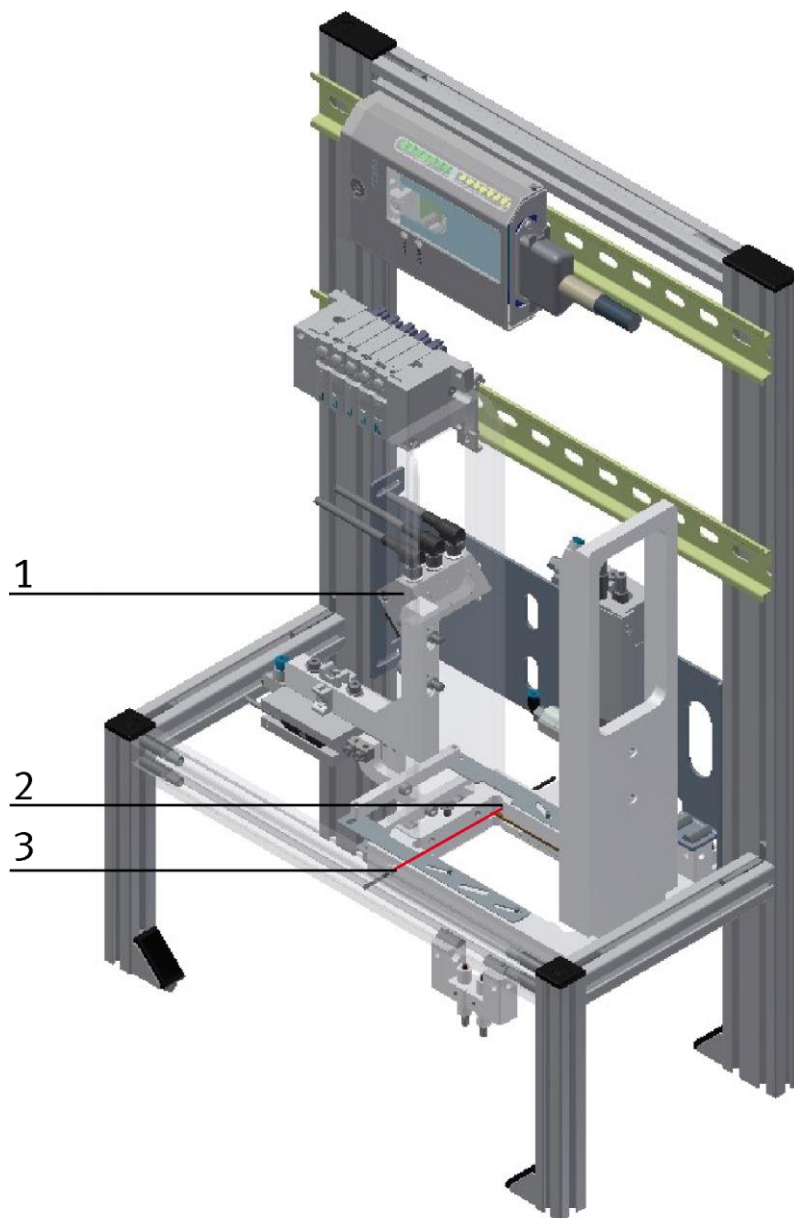


Illustration similar

Position	Description
1	fibre-optic unit / 165327 (SOEG-L-Q30-P-A-S-2L)
2	Sensor / 165360 (SOEZ-LLK-SE-2,0-M4)
3	Sensor / 165360 (SOEZ-LLK-SE-2,0-M4)

The through-beam sensor is used for detecting workpieces. Flexible fibre-optics are connected to a fibre-optic unit. The fibre-optic unit works with visible infrared. The workpiece interrupts the light barrier.

Requirements

- Fibre-optic unit has been attached.
- Electrical connection of the fibre-optic unit has been made.
- Power supply is available.

Procedure

Please attach the fibre-optic heads towards each other to the application module.

Align the transmitter- and receiver fibre optics.

Attach the fibre-optics to the fibre-optic unit.

You might have to turn the adjusting screw with a small screwdriver until the switching status display (LED) appears.

Remark

The maximum permissible number of turns of the adjusting screw is 12.

Please put a workpiece into the sensing range of the light barrier. The switching status display will disappear. You have to do this with all 3 light barriers. Please pay special attention to the corresponding function.

Documents

- Data sheets / Operating instructions
Fibre-optic unit SOEG_L (165327) and through-beam sensor SOEZ-LLK-SE-2,0-M4 (165360)

7.5.2 Proximity Switch (cylinder lifting unit)

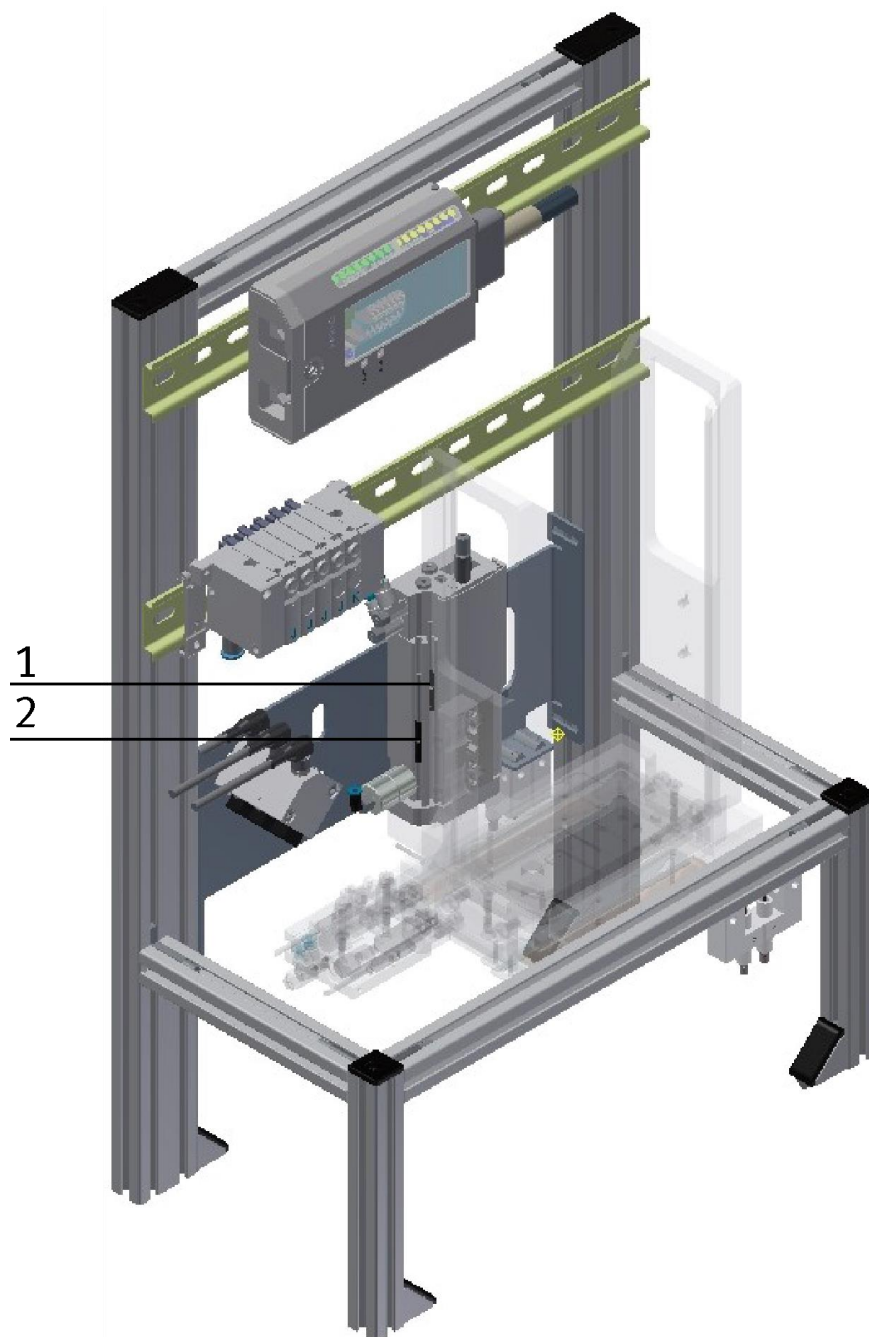


Illustration similar

Position	Beschreibung
1	Sensor lifting unit in upper position (51B1) / 551373 (SMT-10M-PS-24V-E-2,5-L-OE)
2	Sensor lifting unit in lower position (51B2) / 551373 (SMT-10M-PS-24V-E-2,5-L-OE)

The proximity switches are used for checking the end position of the lifting unit. The proximity switches react to a permanent magnet on the piston of the cylinder.

Requirements

- The lifting unit has been attached.
- Pneumatic port of the cylinder has been made.
- Electrical connection of the proximity switches has been made.
- Power supply unit is switched on.

Procedure

1. The cylinder is in the end position to be queried.
2. Move the proximity switch as far as the switching status display (LED) appears.
3. Move the proximity switch into the same direction by a few millimetres as far as the switching status display disappears.
4. Move the proximity switch halfway between the switch on and the switch off position.
5. Tighten the locking screw of the proximity switch with an Allen key SW1.3.
6. Please check the position of the proximity switch by repeated test runs of the cylinder.

Documents

- Data sheets / operating instructions
Proximity switch SMT-10M (551373)

7.5.3 Proximity Switch (separating cylinder)

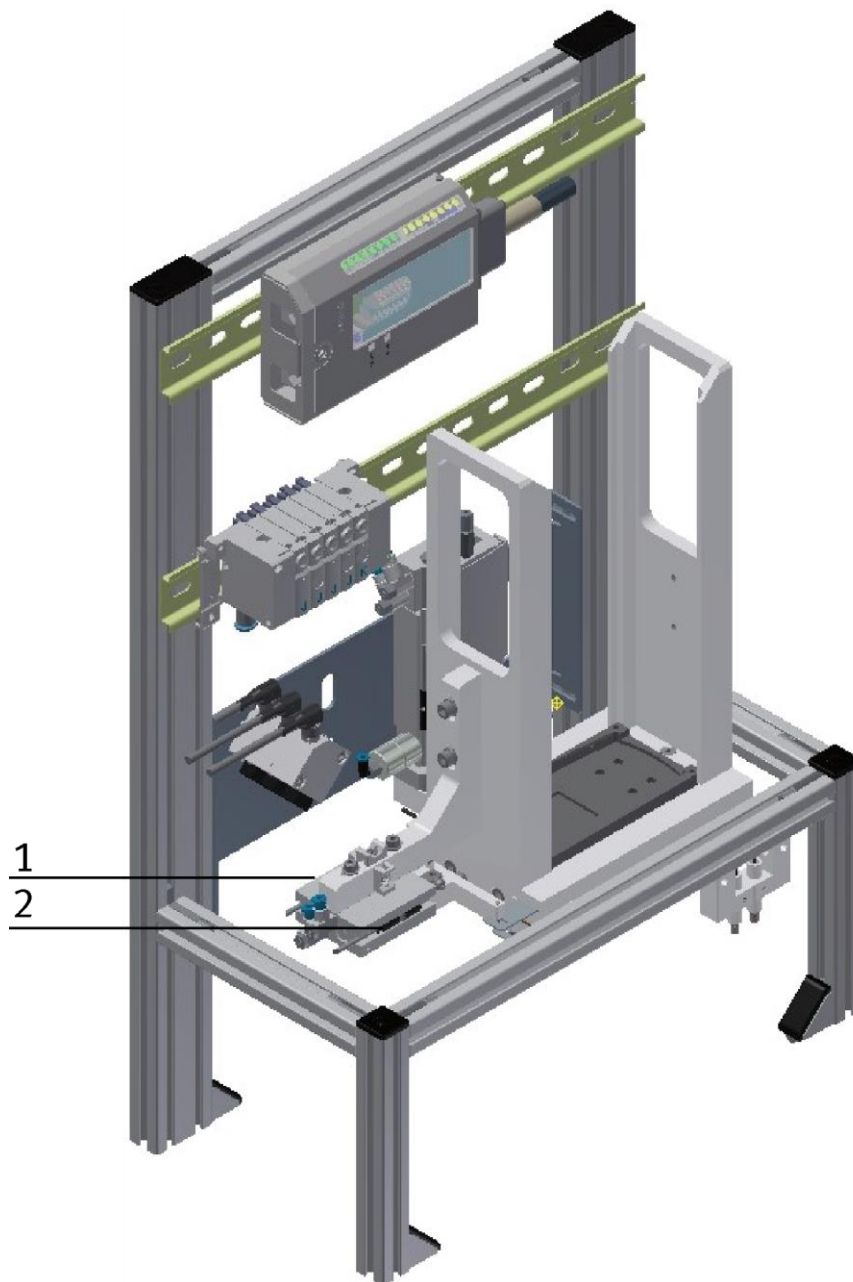


Illustration similar

Position	Description
1	Sensor gripper opened (53B1) / 574335 (SMT-8M-A-PS-24V-E-2,5-OE)
2	Sensor gripper closed (53B2) / 574335 (SMT-8M-A-PS-24V-E-2,5-OE)

The proximity switches are used for checking the end position of the lifting unit. The proximity switches react to a permanent magnet on the piston of the cylinder.

Requirements

- The lifting unit has been attached.
- Pneumatic port of the cylinder has been made.
- Electrical connection of the proximity switches has been made.
- Power supply unit is switched on.


Procedure

1. The cylinder is in the end position to be queried.
2. Move the proximity switch as far as the switching status display (LED) appears.
3. Move the proximity switch into the same direction by a few millimetres as far as the switching status display disappears.
4. Move the proximity switch halfway between the switch on and the switch off position.
5. Tighten the locking screw of the proximity switch with an Allen key SW1.3.
6. Please check the position of the proximity switch by repeated test runs of the cylinder.

Documents

- Data sheets / operating instructions
Proximity switch 574335 (SMT-8M)

7.6 Adjusting the one-way flow control valves

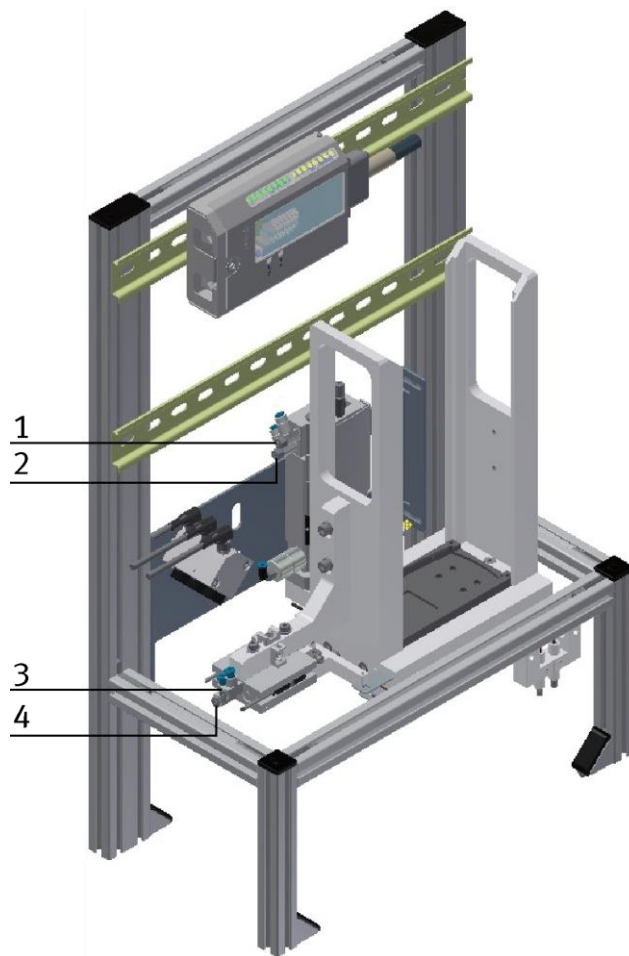

One-way flow control valves / illustration similar

Position	Designation
1	One-way flow control valves GRLA for lifting unit
2	One-way flow control valve GRLA for lifting unit
3	One-way flow control valves GRLA for separating cylinder
4	One-way flow control valves GRLA for separating cylinder

One-way flow control valves are used for regulating the exhaust air volume of double-acting drive units. In the opposite direction, the air flows through the flow control valve having a full cross-sectional flow. The piston is clamped between air cushions by free supply air and throttled exhaust air (improvement of the operating behaviour even if the load changes).

Requirements

- Pneumatic port of the cylinders has been made.
- Compressed air supply is switched on.

Procedure

1. At first, turn off the two one-way control valves completely. Then turn them on again by about one rotation.
2. Start a test run.
3. Turn on the one-way flow control valves slowly until the required piston speed has been reached.

Documents

- Data sheets
One-way flow control valve (193138)

8 Operation

Any customer can use the application module at his own discretion. Since the application modules do not have any control elements, this is done with the respective basic modules installed.

If the application module is mounted on a CP Lab transport system or on a CP Factory basic module, the general operation is described in these manuals. All application-specific information is described in the application module manual.

The general operating parameters must be adhered to.

8.1 General operating instructions

The operation requires some regulations which have to be observed strictly. If you don't observe the rules, there might occur faults in the process. Dangers to your physical health can also not be excluded.

It is strongly recommended to stick to the following rules.


8.1.1 Conduct instructions

- During operation it is not allowed to interfere manually.
- With bigger groups it is necessary to install a mechanic barrier.
- You mustn't take off any cable connections on voltage.
- Water of any kind has to be kept away.


8.1.2 Operating instructions

- The basic modules may only be operated by authorized and instructed persons.
- Operation has to be effected according to the user manual.
- Any uncontrolled pressing on different switches/pushbuttons of all control units has to be prevented.

8.2 Sequence description of the application module magazine

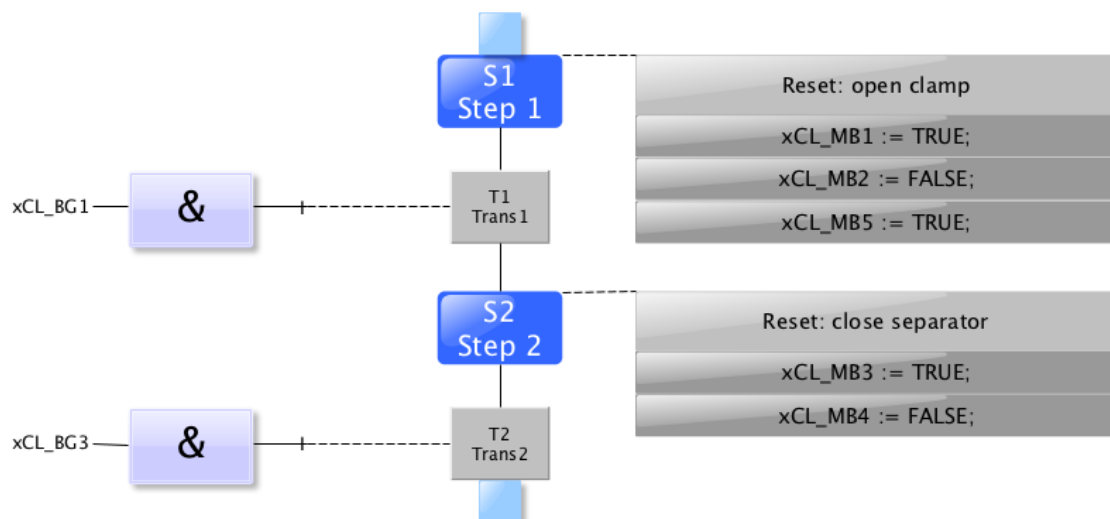



Adjusting sequence

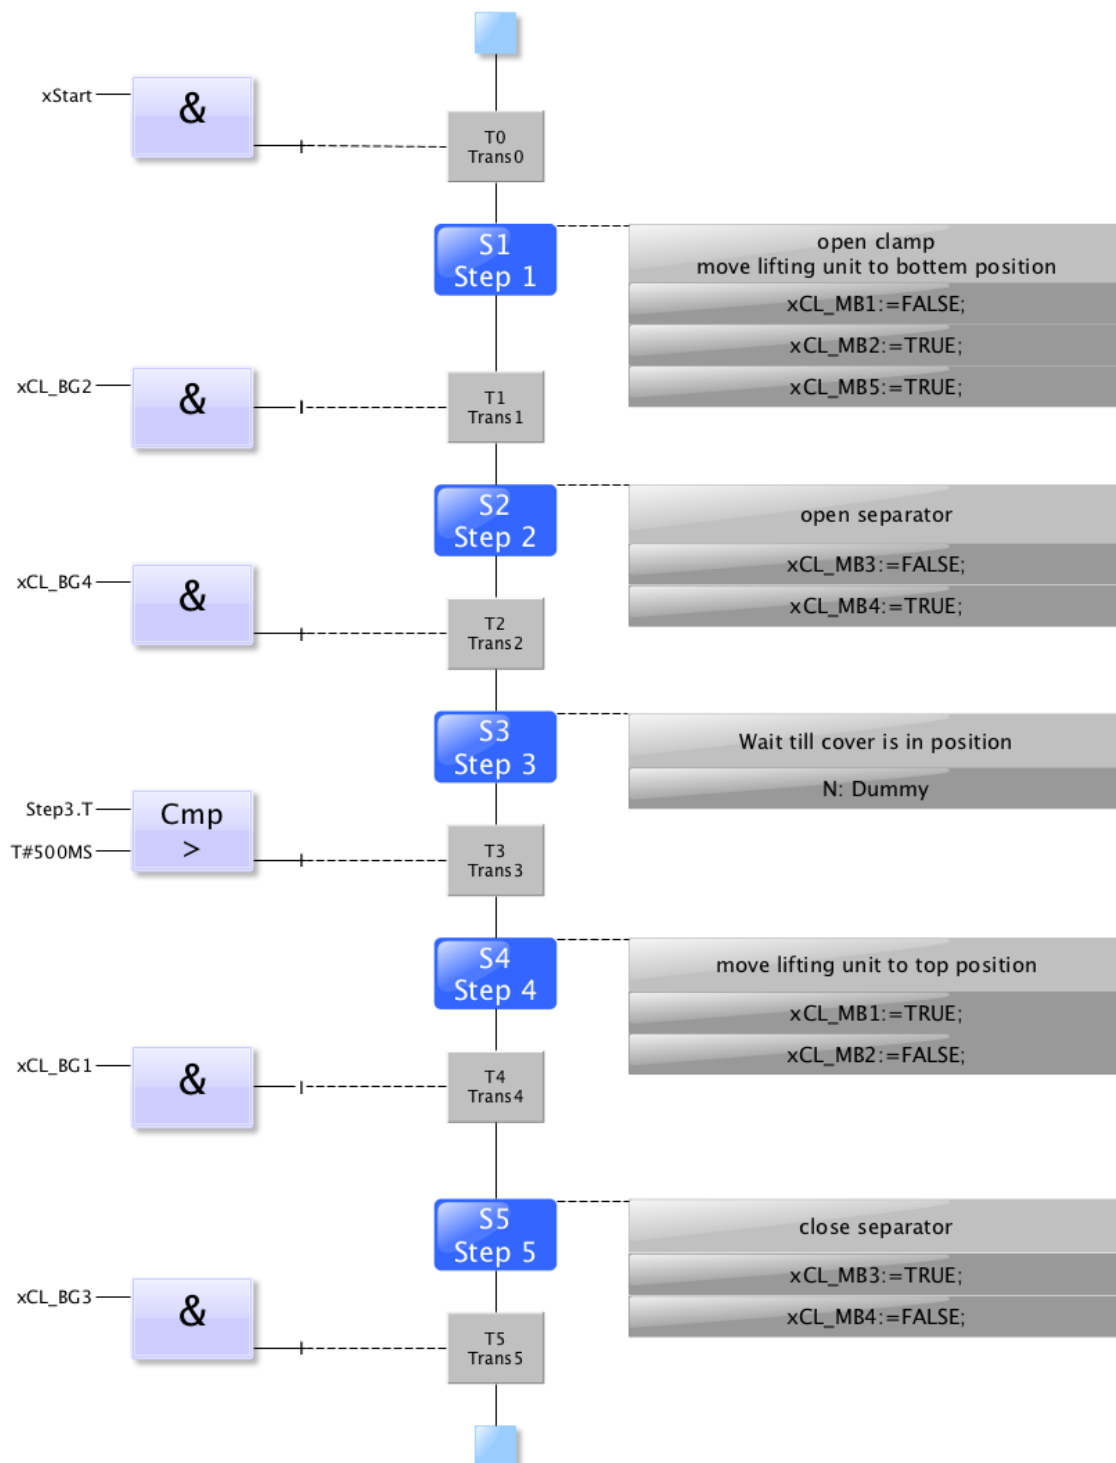

Automatic Mode sequence


8.3 Setting the application module magazine at HMI

To set the application module, the application module must be set to setup mode. The variant for the rear cover is described; the operation of the front cover is identical. The display on the HMI touch panel distinguishes between the front and rear cover, the necessary programs are also different and must be loaded accordingly into the control.

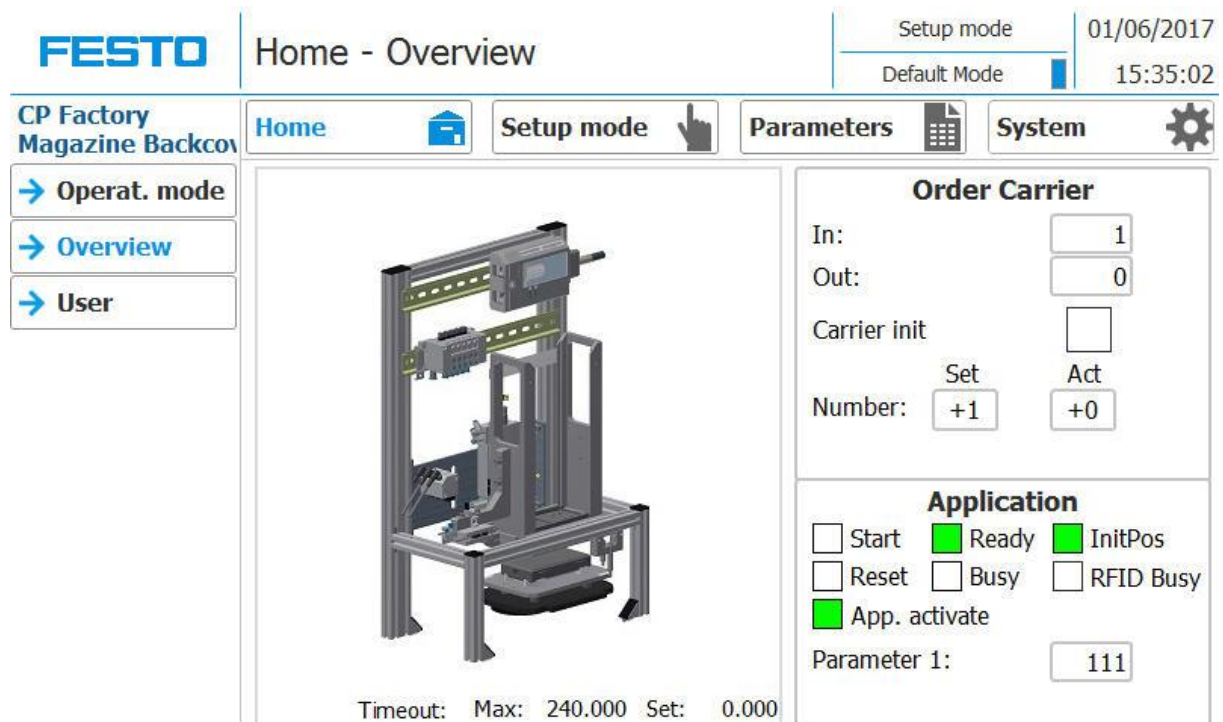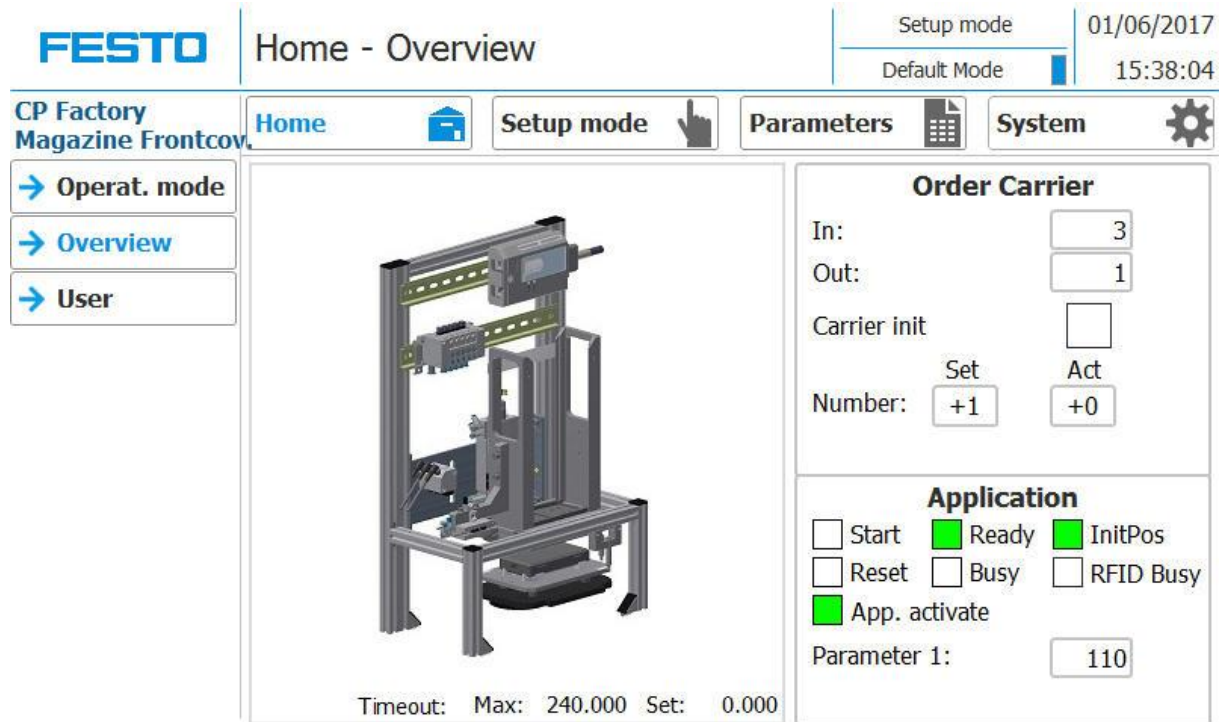


Display of the magazine type on the HMI

- On the Start screen, click Setup

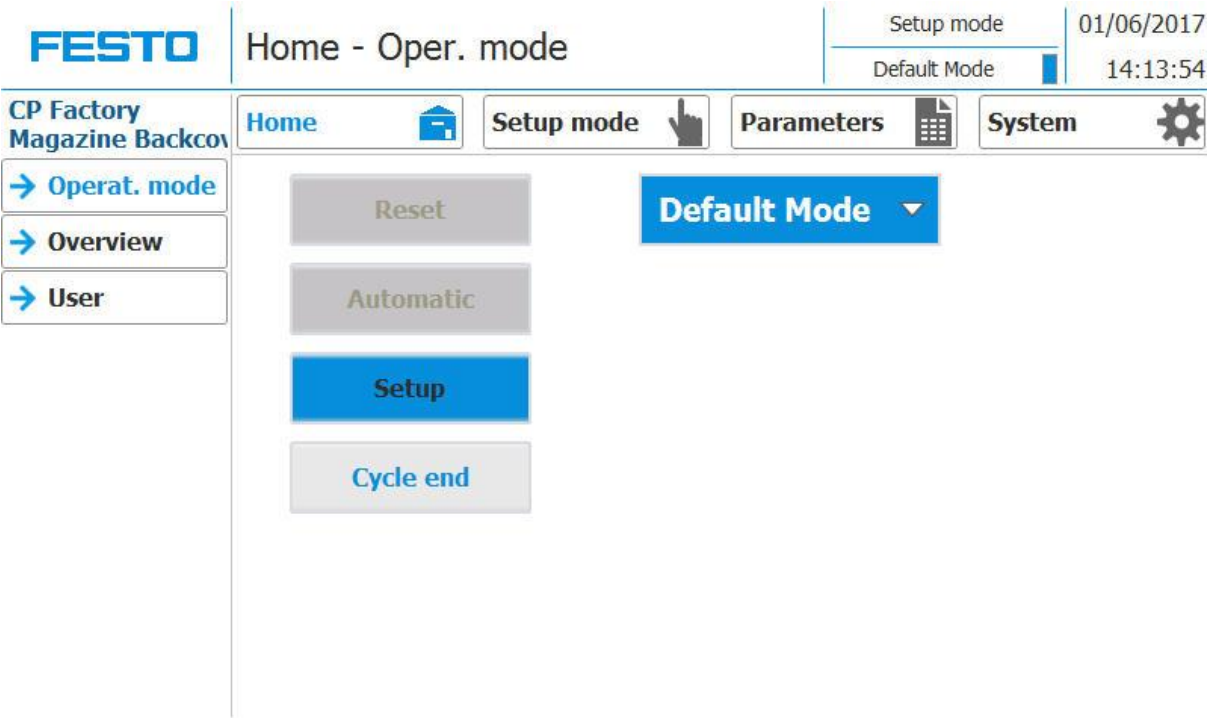

Change to setup page (1) and select application (2)

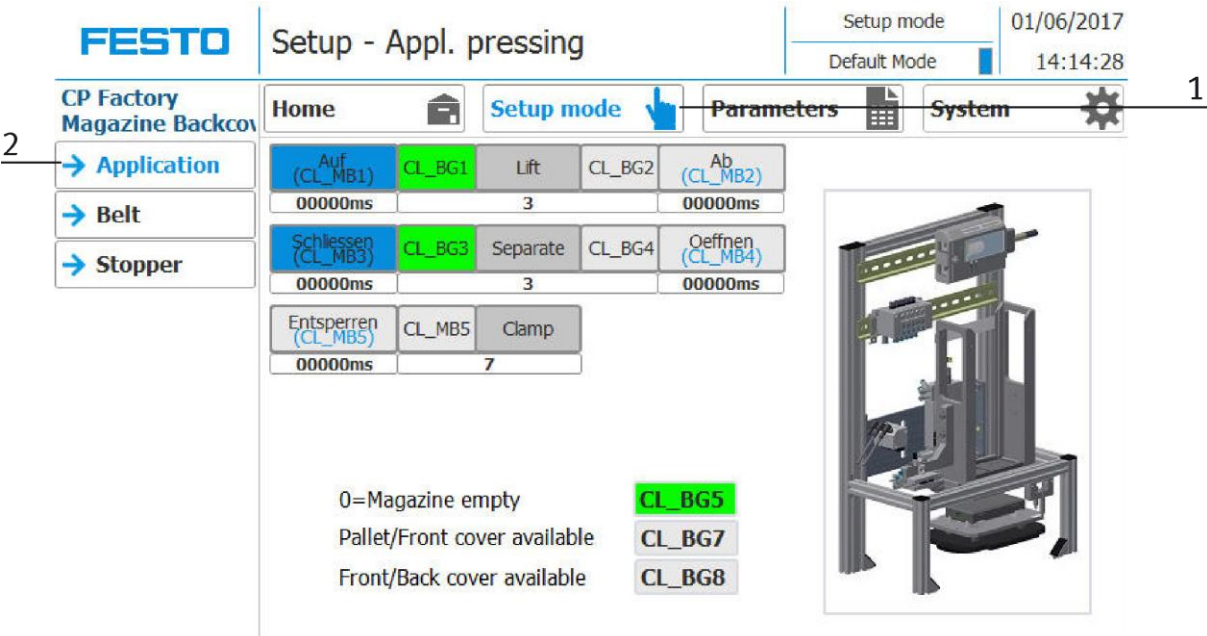

2. Application is selected to set up the application module

FESTO Setup - Appl. pressing

Setup mode 01/06/2017
Default Mode 14:14:28

CP Factory Magazine Backcover

1 → Application

2 → Belt

3 → Stopper

4

5

6


Home Setup mode Parameters System

Auf (CL_MB1) CL_BG1 Lift CL_BG2 Ab (CL_MB2)
00000ms 3 00000ms

Schliessen (CL_MB3) CL_BG3 Separate CL_BG4 Oeffnen (CL_MB4)
00000ms 3 00000ms

Entsperren (CL_MB5) CL_MB5 Clamp
00000ms 7

0=Magazine empty CL_BG5
Pallet/Front cover available CL_BG7
Front/Back cover available CL_BG8

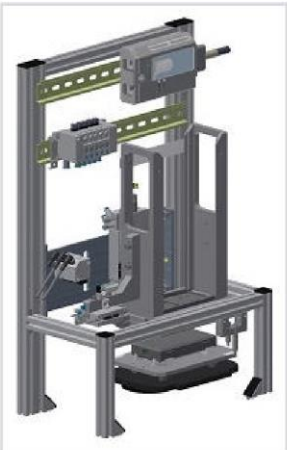

Position number	Description
1	<p>Z axis</p> <p>Auf: Move the Z axis up (actuator CL_MB1 is activated, lights up blue when active)</p> <p>CL_BG1: Sensor CL_BG1 Indicator (lights up green when Z axis is up)</p> <p>Lift: Z axis display</p> <p>CL_BG2: Sensor CL_BG2 indicator (lights up green when Z axis is down)</p> <p>Ab: Move the Z axis down (actuator CL_MB2 is activated, lights up blue when active)</p>
2	<p>Separator</p> <p>Schliessen: close the separator (actuator CL_MB2 is activated, lights up blue when active)</p> <p>CL_BG3: Sensor CL_BG3 Indicator (lights up green when separator is closed)</p> <p>Separate: Display separator</p> <p>CL_BG4: Sensor CL_BG4 Indicator (lights up green when separator is open)</p> <p>Oeffnen: open separator (actuator CL_MB4 is activated, lights up blue when active)</p>
3	<p>Release the clamp</p> <p>Unlocking: Unlocking the clamp (actuator CL_MB5 is activated, lights up blue when active)</p> <p>CL_MB5: Indicator (lights up green when clamp is declamped)</p> <p>Clamp: Display Clamp</p>
4	0 = Magazine empty: Sensor CL_BG5 Display (lights up green when the magazine is empty)
5	Palette / front cover available: Sensor CL_BG7 Indicator (lights up green when a pallet with front cover is installed)
6	Front / back cover available: Sensor CL_BG8 Indicator (lights up green when front / back cover is present)

8.4 Transitions of the application module

The transitions are located in the Parameters submenu

Parameters - Transitions

Setup mode 01/06/2017

Default Mode 14:14:53

CP Factory Magazine Backcov

→ Application

→ Transitions

→ Conveyor

Home

Setup mode

Parameters

System

No.	Start condition	Application execute		Parameter		End condition
Init	none	<input type="checkbox"/>	<input type="checkbox"/>	0	0	1
1	1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	0	0	2
2	2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	0	0	3
3	3	<input checked="" type="checkbox"/>	<input type="checkbox"/>	0	0	1
4	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0
5	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0
6	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0
7	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0
8	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0
9	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0
10	0	<input type="checkbox"/>	<input type="checkbox"/>	0	0	0

The transitions can be displayed or changed here. The transitions are used in the default mode, see also the following chapter.

64

© Festo Didactic 8032508 en

8.4.1 Parameter (MAGFRONT)

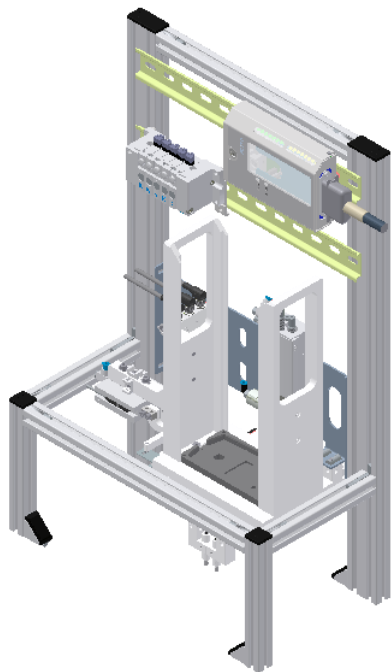


Illustration similar

Default:

Parameter-No.		Description
1		Not used
2		Not used
3		Not used
4		Not used

MES:

Operation		Parameter	Description
200	Feed front cover	1	Part number Value: 110 (front cover) Type: changeable

8.4.2 Parameter (MAGBACK)

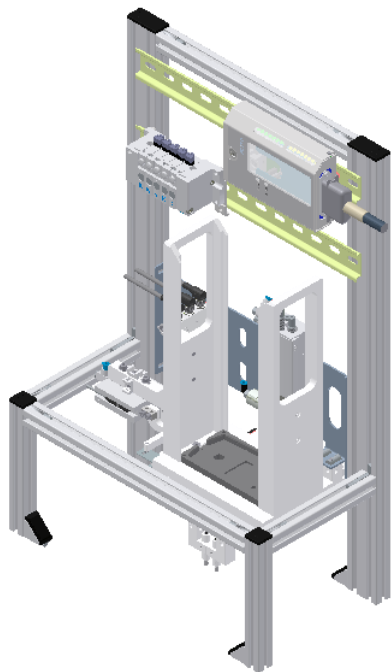


Illustration similar

Default:

Parameter-No.	Description
1	Not used
2	Not used
3	Not used
4	Not used

MES:

Operation		Parameter	Description
201	Feed back cover	1	Part number Value: 111 (back cober) Type: changeable

9 Error messages and message texts at the HMI

In general, there are three different reporting classes. These are designed as follows

- Message class 0 (displayed red in the message line)
 - the program is immediately stopped and the automatic mode is terminated
 - the cause of the error has to be fixed
 - Then acknowledge the fault and restart the station
- Message class 1 (displayed red in the message line)
 - the program and the automatic mode are stopped at the end of the cycle
 - the cause of the error has to be fixed
 - Then acknowledge the fault and restart the station
- Message class 2 (displayed yellow in the message line)
 - the program and the automatic mode are executed further
 - If the cause of the fault is fixed, the paler is automatically acknowledged
- Note
 - Displayed on the HMI but not processed in MES

9.1 Reporting texts

9.1.1 General remediation texts

The "XXX" values are variables and change depending on the application. These texts can occur on all applications and modules.

Report class	Location	Alarm name	Report text	Fix error
0	ActMon_1M0B	prgSysAlarmActv	Time monitoring "XXX" Activation actuator:: "XXX" / PLC: "XXX" / instance: "XXX"	Check the actuation of the actuator
0	ActMon_1M0B_noHold	prgSysAlarmActv	Time monitoring "XXX" Activation actuator:: "XXX" / PLC: "XXX" / instance: "XXX"	Check the actuation of the actuator
0	ActMon_1M1B	prgSysAlarmExtd	No feedback of the sensor "XXX" on trigger of the activation actuator:: "XXX" / PLC: "XXX" / instance: "XXX" /	Check control / feedback!
0	ActMon_1M1B	prgSysAlarmRtrd	Feedback from sensor "XXX" without control of the actuator "XXX" PLC: <field ref = "0" />; Instance: "XXX"	Check control / feedback!
0	HeatMon	prgSysAlarmActv	Time monitoring heating. Setpoint not reached. PLC: "XXX" / instance: "XXX"	Check temperature sensor Heating not enabled by the selector switch Heating resistors defective
0	CylMon_1M1B	prgSysAlarmExtd	Time monitoring movement of the cylinder. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path (exiting)
0	CylMon_1M1B	prgSysAlarmRtrd	Time monitoring movement of the cylinder. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path (retraction)
0	CylMon_2M1B	prgSysAlarmExtd	Time monitoring movement of the cylinder. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check travers path (exiting)
0	CylMon_2M1B	prgSysAlarmRtrd	Time monitoring Reset movement of the cylinder. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path (retraction)

Report class	Location	Alarm name	Report text	Fix error
0	CylMon_2M1B	prgSysAlarmSens	Time monitoring divergence cylinder sensors. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path
0	CylMon_2M2B	prgSysAlarmExtd	Time monitoring movement of the cylinder. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path (exiting)
0	CylMon_2M2B	prgSysAlarmRtrd	Time monitoring Reset movement of the cylinder. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path (retraction)
0	CylMon_2M2B	prgSysAlarmSens	Time monitoring divergence cylinder sensors. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check the air pressure Check the limit switch / setting Check traverse path
0	DriveMon_4Q	prgSysAlarmA	Time monitoring: Motor clockwise (rapid) defective. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check transducer disk / sensor motor Check the motor cable
0	DriveMon_4Q	prgSysAlarmB	Time monitoring: Motor left run (rapid traverse) defective. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check transducer disk / sensor motor Check the motor cable
0	DriveMon_4Q	prgSysAlarmC	Time monitoring: Motor clockwise (slow speed) defective. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check transducer disk / sensor motor Check the motor cable
0	DriveMon_4Q	prgSysAlarmD	Time monitoring: Motor left run (slow speed) defective. Initiator: "XXX" / PLC: "XXX" / instance: "XXX"	Check transducer disk / sensor motor Check the motor cable

Report class	Location	Alarm name	Report text	Fix error
0	Error	ErrNotAus	EMERGENCY STOP is actuated!	Check emergency stop button - F2-FQ1 and confirm with button -F2-SF1.
2	Error	WarnMES4	Communication to MES4 interrupted!	Please check connection
0	Error	ErrAppTimeout	Application Timeout!	
0	Error	PnErrKF80	PROFINET Connection to subscriber "+ K2-KF80" is interrupted	
0	Error	PnErrKF81	PROFINET Connection to subscriber "+ K2-KF81" is interrupted	
0	Error	ErrProgramm	Programming errors! OB121 was called.	Check program
2	Error	WarnRfidTout	RFID time monitoring is active!	Please check the RFID sensor and the chip.
2	Error	WarnRfidErr	RFID writing / reading with error ended!	Please check the RFID sensor and the chip.
2	Error	WarnConvStop	Conveyor start / stop by sensors Energy saving mode: conveyor is stopped!	Place the workpiece carrier at the beginning of the conveyor Waiting until a workpiece carrier comes automatically from predecessor station

9.1.2 RFID detection messages

Report class	Location	Alarm name	Report text	Fix error
0	RFID_Control	fbErrRfidTout	Timeout at RFID writing / reading to RFID- Instance: "Calling function block!"	Check workpiece carrier / RFID Chip
0	RFID_Control	fbErrRfidErr	Error at RFID writing / reading to RFID- Instance: "Calling function block!"	Check workpiece carrier / RFID Chip
0	Stopper_Default	fbErrCarrier	No RFID tag identified at RFID- Instance: "Calling function block!"	Check workpiece carrier / RFID Chip
0	Stopper_Mes	fbErrCarrier	No RFID tag identified at RFID- Instance: "Calling function block!"	Check workpiece carrier / RFID Chip

9.1.3 Message texts of the application module magazine

Report class	Location	Alarm name	Report text	Fix error
2	Error	WarnMagEmp	Magazine empty, please refill. Initiator: "XXX"; PLC: <field ref = "0" />; Instance: <field ref = "1"	Fill up magazine

9.2 Interactive message texts

Interactive messages are displayed via a pop-up window. Pop Up has two buttons

Retry - Try to redo the action

Abort - The action is aborted and directed to the Cell Controller. There can also be a retry executed or cancelled. In this case, the order would be stored with errors in MES.

9.2.1 General

Value	Text	Fix error
100	Order aborted with errors!	Start order again

9.2.1 Application module magazine

Value	Text	Fix error
1020	Magazine is empty	refill or check sensor BG5
5001	No pallet present	Check pallet / sensor BG7
5002	Front cover is already present	Check workpiece / sensor BG8.
5003	Back cover already present	Check workpiece / sensor BG8.
5004	No front cover present	Check pallet / sensor BG7.

10 Spare part list

- Key 8027302
- 24V cable 381525

11 Service and cleaning

The components and systems from Festo Didactic are maintenance-free.

At regular intervals you should have checked:

- the lenses of the optical sensors, fibre optics and reflectors
- the active surface of the proximity switch
- the entire station

can be cleaned with a soft, lint-free cloth or brush.



NOTE

Do not use aggressive or abrasive cleaners.

Protective covers must not be cleaned with alcoholic cleaning agents, there is a risk of embrittlement.


12 Further information and updating

Further information and updates on the technical documentation of Festo Didactic components and systems can be found on the Internet at:

www.ip.festo-didactic.com



13 Disposal

	<div data-bbox="379 286 1406 358"><i>NOTE</i></div> <div data-bbox="379 358 1406 492"><p>Electronic waste contains recyclable materials and must not be disposed of with the domestic waste. Bring electronic waste to a designated municipal collection point.</p></div>
---	---

Festo Didactic SE

Rechbergstraße 3
73770 Denkendorf
Germany



+49 711 3467-0



+49 711 34754-88500



www.festo-didactic.com



did@festo.com