


8038567

Muscle press

FESTO

CP Factory/CP Lab

Original operating
instructions

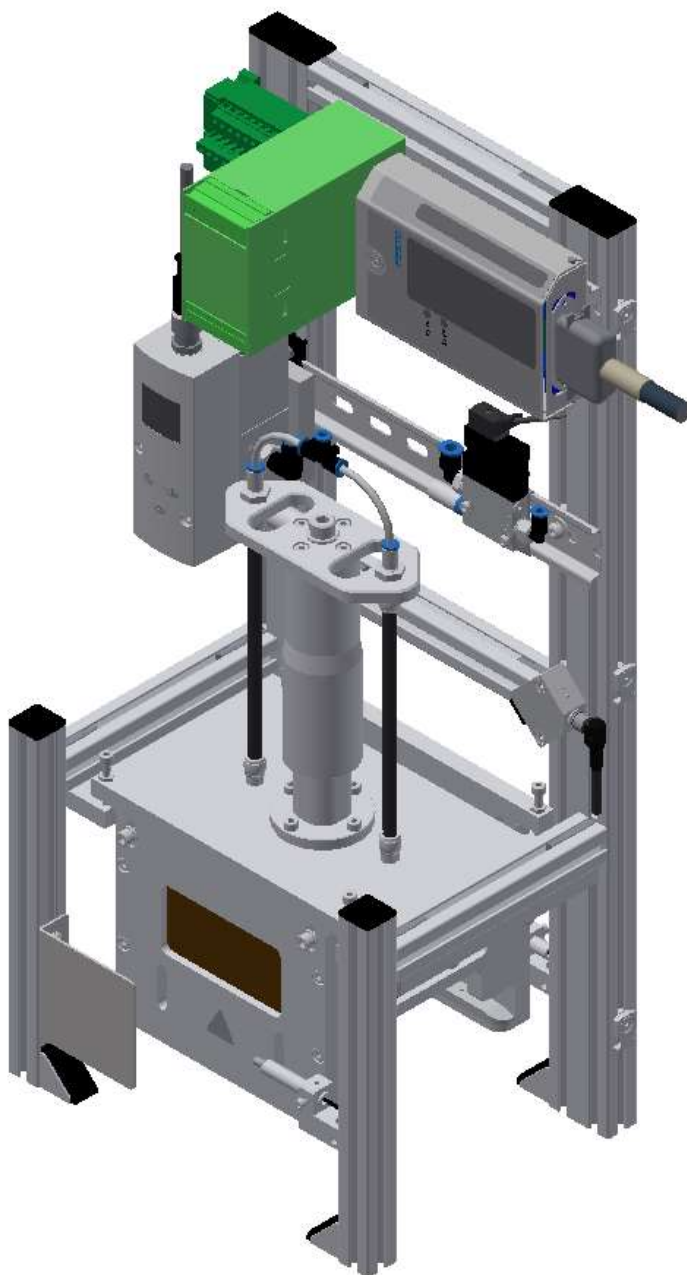

Festo Didactic
8038567 en
03/2022

Order number: 8038567
Revision Level: 03/2022
Authors: Schober, Weiss
Layout: Frank Ebel
File Name: CP-AM-MPRESS-GB-8038567-A001.doc

© Festo Didactic SE, Rechbergstr. 3, 73770 Denkendorf, Germany, 2022



+49 711 3467-0



www.festo-didactic.com



+49 711 34754-88500





did@festo.com

Original operating instructions

© 2022 all rights reserved to Festo Didactic SE.



Where only pronouns such as he and him are used in these operating instructions, these pronouns are of course intended to refer to both male and female persons. The use of a single gender (e.g. he, him) should not be construed as gender discrimination; it is intended solely to make the manual easier to read and the formulations easier to understand.

	<div data-bbox="762 1126 1021 1189"> CAUTION</div> <p>These operating instructions must be available to the user at all times. The operating instructions must be read before commissioning. The safety instructions must be observed. Non-observance may result in severe personal injury or damage to property.</p>
---	---

Main document

Associated documents attached:

Safety instructions concerning transport (print/electronic)

Component datasheets (print/electronic)

Circuit diagram (print/electronic)

Contents

1 Safety instructions	5
1.1 Warning notice system	5
1.2 Pictograms	6
1.3 General prerequisites for installing the product.....	7
1.4 General prerequisites for operating the devices	7
2 Intended use	8
3 For your safety	9
3.1 Important information	9
3.2 Qualified persons	10
3.3 Obligations of the operating company	10
3.4 Obligations of the trainees	10
4 Basic safety instructions	11
4.1 General information	11
4.2 Mechanical components	11
4.3 Electrical components	12
4.4 Pneumatic components.....	14
4.5 Guarantee and liability for application examples	16
4.6 Cyber security	16
4.7 Additional safety instructions	17
4.8 Guarantee and liability	18
4.9 Transport.....	19
4.10 Name plates	20
4.11 CE Declaration of Conformity	21
4.12 General product safety	24
4.13 Protective devices	25
4.13.1 Emergency stop.....	25
4.13.2 Additional protective devices	25
5 Technical data.....	26
6 Design and Function	28
6.1 Transport.....	28
6.2 Overview of the System.....	30
6.3 The application module muscle press	31
6.3.1 Electrical.....	33
6.3.2 Pneumatic	36
6.4 Function	38
6.5 Sequence description.....	38
6.6 Electrical Connections	39
6.6.1 Connection application module at CP-Factory basic module	39
6.6.2 Connection application module at CP-Lab conveyor.....	40
6.6.3 I/O module XD1.....	41
6.6.4 Analog Terminal XD2A	42
7 Commissioning	43
7.1 Workplace	43
7.2 Visual Inspection	44

7.3 Safety Regulations	44
7.4 Assembly	45
7.4.1 Assembly of an CP application module to basic module CP Lab Conveyor	46
7.4.2 Connecting the CP application module electrically to basic module CP Lab Conveyor	49
7.4.3 Pneumatic connection from application modules to basic module CP Lab Conveyor (option – not available at all application modules)	51
7.4.4 Assembly of an CP application module to a CP Factory basic module	52
7.4.5 Connecting the CP application module electrically to the CP Factory basic module	55
7.4.6 Pneumatic connection from application modules to CP Factory basic module	56
7.5 Adjusting the sensors.....	57
7.5.1 Through-beam sensor (Workpiece detection)	57
7.5.2 Proportional pressure control valve	58
7.6 Commissioning muscle press.....	59
8 Operation	63
8.1 Setting the application module muscle press at HMI	63
8.2 Transitions of the application module	67
8.3 Process of application module	68
8.4 Flow chart.....	70
8.4.1 Parameter (MPRESS)	71
9 Message texts and interactive error messages at the HMI	72
9.1 Message texts	72
9.2 Interactive error messages	73
9.2.1 Default operation	73
9.2.2 MES Operation	74
9.2.3 General.....	75
9.2.4 Application module Press/muscle press	75
10 Spare part list	76
10.1 Electrical parts	76
10.2 Pneumatische Teile	76
11 Service and cleaning	77
12 Further information and updating	78
13 Disposal	79



1 Safety instructions



1.1 Warning notice system



These operating instructions contain notes that must be observed for your personal safety and in order to prevent property damage. The notes concerning your personal safety are indicated by a safety symbol.


Notes that only concern property damage are not indicated by a safety symbol.

The notes below are listed in order of hazard level.

	<div data-bbox="762 533 1018 600">  DANGER </div> <p>... indicates an imminently hazardous situation that will result in fatal or severe personal injury if not avoided.</p>
---	---

	<div data-bbox="750 819 1029 887">  WARNING </div> <p>... indicates a potentially hazardous situation which may result in fatal or severe personal injury if not avoided.</p>
---	--

	<div data-bbox="756 1108 1021 1176">  CAUTION </div> <p>... indicates a potentially hazardous situation that may result in moderate or slight personal injury or severe property damage if not avoided.</p>
---	--

	<div data-bbox="837 1393 949 1460">NOTE</div> <p>... indicates a potentially hazardous situation that may result in property damage or loss of function if not avoided.</p>
---	---

In cases where more than one hazard level applies, the safety note with the highest hazard level will be shown. A safety note may concern both personal injury and property damage.

Hazards that will only result in property damage are indicated with the word "Note".

1.2 Pictograms

This document and the hardware described in it include warnings concerning possible hazards which may arise if the system is used incorrectly.

The following pictograms are used:



Hazard warning



Warning - dangerous electric voltage



Read and observe the operating and safety instructions prior to commissioning.



Switch off the device and unplug the connection for power supply from the plug socket before commencing installation, repair, maintenance or cleaning work.



Warning – hand injuries



Warning – lifting heavy loads



Information and/or references to other documentation

1.3 General prerequisites for installing the product

- Festo Didactic products must only be used for the applications specified in their respective operating instructions. Products or components supplied by other manufacturers must only be used if recommended or approved by Festo.
- The products must be transported, stored, installed, assembled, commissioned, operated and maintained properly in order to ensure their safe operation.
- The approved ambient conditions must be observed. The specifications in the relevant operating instructions must be observed.
- The safety equipment must be tested every working day.
- Connecting cables must be checked for damage before each use. In case of damage, they must be replaced.

Connecting cables must correspond to the minimum specifications.

1.4 General prerequisites for operating the devices

General requirements for safe operation of the system:

- In industrial facilities, the national accident prevention regulations must be observed.
- The laboratory or classroom must be overseen by a supervisor.
 - A supervisor is a qualified electrician or a person who has been trained in electrical engineering, knows the respective safety requirements and safety regulations, and whose training has been documented accordingly.

The laboratory or the classroom must be equipped with the following devices:

- An emergency-off device must be provided.
 - At least one emergency-off device must be located inside the laboratory or the classroom, and at least one outside it.
- The laboratory or classroom must be secured so that the operating voltage and compressed air supply cannot be activated by any unauthorized persons, for example by means of:
 - e.g. a keyswitch
 - e.g. lockable shut off valves
- The laboratory or classroom must be protected by residual current devices (RCDs).
 - RCDs with a differential current of ≤ 30 mA, Type B. When operating machinery with unavoidable leakage current, suitable measures must be implemented and documented in the corresponding workplace risk assessment.
- The laboratory or classroom must be protected by overcurrent protection devices.
 - Fuses or circuit breakers
- Devices must not be used if they are damaged or defective.
 - Damaged devices must be barred from further use and removed from the laboratory or classroom.
 - Damaged connecting cables, pneumatic tubing and hydraulic hoses represent a safety risk and must be removed from the laboratory or classroom.
- Safety devices must be checked every working day to ensure that they are fully functional.
- Connecting cables and accessories must be checked for damage before each use.

2 Intended use

Festo Didactic systems and components must only be used:

- For their intended use in teaching and training applications
- When their safety functions are in perfect condition

The components and systems are designed in accordance with the latest technology and recognized safety rules. However, life and limb of the user and third parties may be endangered and the components may be impaired if they are used incorrectly.

The Festo Didactic learning system has been developed and produced exclusively for education and training in the field of automation technology. The training company and/or trainers must ensure that all trainees observe the safety precautions described in these operating instructions.

Training with complex machinery is a highly hazardous activity. The operating company must draw up and document a workplace risk assessment. The trainees must be briefed on all the relevant safety aspects before work commences.

Festo Didactic hereby excludes any and all liability for damages suffered by apprentices, the training company and/or any third parties, which occur during use of the device in situations which serve any purpose other than training and/or vocational education, unless such damages have been caused by Festo Didactic due to malicious intent or gross negligence.

All extensions and accessories must be approved by Festo Didactic, and are only permitted for use for their intended purpose.

The machine fulfils the requirements of the European directives that applied when it was commissioned. Any modification to the machine shall render the manufacturer's CE Declaration of Conformity null and void. The CE Declaration of Conformity must be renewed following each major modification.



3 For your safety

3.1 Important information

Knowledge of the basic safety instructions and safety regulations is a fundamental prerequisite for safe handling and trouble-free operation of Festo Didactic components and systems.

These operating instructions include the most important instructions for safe use of the components and systems. In particular, the safety instructions must be adhered to by all persons who work with these components and systems. Furthermore, all pertinent accident prevention rules and regulations that are applicable at the respective place of use must be adhered to.

	<div data-bbox="754 651 818 707"></div> <div data-bbox="855 667 1026 707">WARNING</div> <ul data-bbox="395 757 1278 786" style="list-style-type: none">• Malfunctions which could impair safety must be eliminated immediately!
---	--

	<div data-bbox="762 900 826 956"></div> <div data-bbox="863 918 1018 958">CAUTION</div> <ul data-bbox="395 1005 1382 1115" style="list-style-type: none">• Improper repairs or modifications may result in unforeseeable operating statuses. Do not carry out any repair or alternation work on components or systems that is not described in these operating instructions.
--	---

3.2 Qualified persons

- The product described in these operating instructions is only permitted for operation by persons who are qualified for the task in question in accordance with the operating instructions, especially the safety instructions.
- Qualified persons are defined as persons whose training and experience enables them to recognize risks and avoid potential dangers when working with this product.

3.3 Obligations of the operating company

It is the responsibility of the operating company to ensure that the station is operated safely.

The operating company undertakes to allow only those persons to work with the components and systems who:

- Are familiar with the basic regulations regarding occupational safety, with the safety instructions, and with the accident prevention regulations, and who have been instructed in the use of the components and systems
- Have read and understood the safety chapter and warnings in these operating instructions
- Are qualified to operate the components and systems in question
- Are governed by and trained in suitable organizational measures to ensure safe training

Personnel should be tested at regular intervals to ensure that they are safety-conscious in their work habits.



3.4 Obligations of the trainees

All persons who have been entrusted to work with the components and systems undertake to complete the following steps before beginning work:



- Read the chapter concerning safety and the warnings in these operating instructions
- Familiarize themselves with the basic regulations regarding occupational safety and accident prevention



4 Basic safety instructions

4.1 General information



	<div style="background-color: #FFD700; text-align: center; padding: 5px;">  CAUTION </div> <ul style="list-style-type: none"> Trainees must be supervised by an instructor at all times when working with the components and systems. Observe the specifications included in the technical data for the individual components, and in particular all the safety instructions! Wear your personal protective equipment (safety goggles, safety shoes). Never leave objects lying on the top of protective enclosures. Vibrations could cause such objects to fall off.
---	---



4.2 Mechanical components



	<div style="background-color: #D2691E; text-align: center; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> Switch off the power supply! <ul style="list-style-type: none"> – Switch off both the operating power and the control power before commencing work on the circuit. – Never reach into the setup unless it is at a complete standstill. – Be aware of potential overtravel times for the actuators. Risk of injury during troubleshooting! <ul style="list-style-type: none"> – Use a tool such as a screwdriver for actuating sensors.
--	--

	<div style="background-color: #FFD700; text-align: center; padding: 5px;">  CAUTION </div> <ul style="list-style-type: none"> Risk of burns due to hot surfaces <ul style="list-style-type: none"> – Devices can reach high temperatures during operation, as a result of which they can cause burns if touched. Measures to take when maintenance is required. <ul style="list-style-type: none"> – Allow the device to cool off before commencing work. – Use suitable personal protective clothing, e.g. safety safety gloves.
---	--



4.3 Electrical components



	 WARNING
	<ul style="list-style-type: none"> • Disconnect from all sources of electrical power! <ul style="list-style-type: none"> – Switch off the power supply before working on the circuit. – Please note that electrical energy may be stored in individual components. Further information on this issue is available in the datasheets and operating instructions included with the components. – Warning! Capacitors inside the device may still be charged even after being disconnected from all sources of voltage. • Danger due to malfunction <ul style="list-style-type: none"> – Never place or leave liquids (e.g. drinks) on the station in open containers. – The machine must not be switched on if there is condensation (moisture) on its surface. – Never lay pipes/hoses designed to carry liquid media near the machine. • Electric shock due to connection to unsuitable power supply! <ul style="list-style-type: none"> – When devices are connected to an unsuitable power supply, exposed components can cause dangerous electrical voltage that can lead to severe or fatal injury. – Always use power supplies that provide SELV (safety extra-low voltage) or PELV (protective extra-low voltage) output voltages for all the connections and terminals on the electronics modules. • Electric shock when there is no protective grounding in place <ul style="list-style-type: none"> – If there is no protective grounding terminal in place for a Protection Class I device, or if the protective grounding terminal has not been installed correctly, exposed, conductive parts may carry high voltages, thus causing severe or fatal injury if touched. – Ground the device in accordance with the applicable regulations.

	 WARNING
	<ul style="list-style-type: none"> • Risk of fire due to use of unsuitable power supply <ul style="list-style-type: none"> – If a device is connected to an unsuitable power supply, this can cause components to overheat, leading to a breakout of fire. – Always use limited power supplies (LPSs) for all the connections and terminals on the electronics modules.

	 CAUTION
	<ul style="list-style-type: none"> • Always ensure that your connecting cables are designed for use with the electrical connections in question. • When laying connecting cables, make sure they are not kinked, sheared or pinched. Cables laid on the floor must be covered with a cable bridge to protect them. • Do not lay cables over hot surfaces. <ul style="list-style-type: none"> – Hot surfaces are identified with a corresponding warning symbol. • Make sure that connecting cables are not subjected to continuous tensile loads. • Devices with a grounding terminal must always be grounded. <ul style="list-style-type: none"> – If a ground connection (green-yellow laboratory socket) is available, it must always be connected to the protective grounding. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage). – Some devices have high leakage current. These devices must be fitted with a grounding conductor for additional grounding. • When replacing fuses, always use specified fuses with the correct current rating and tripping characteristics. • The device is not equipped with a built-in fuse unless otherwise specified in the technical data. • Safe operation of the device is not possible in the event of any of the following circumstances: <ul style="list-style-type: none"> – Visible damage – Malfunction – Inappropriate storage – Incorrect transport <p>Switch off the power supply immediately.</p> • Protect the device to prevent it from being restarted accidentally.

4.4 Pneumatic components

	<div style="background-color: #e67e22; color: white; padding: 5px; text-align: center;">  WARNING </div> <ul style="list-style-type: none"> • Depressurize the system! <ul style="list-style-type: none"> – Switch off the compressed air supply before working on the circuit. – Check the system using pressure gauges to make sure that the entire circuit is fully depressurized. – Please note that energy may be stored in reservoirs. Further information on this issue is available in the datasheets and operating instructions included with the components. • Risk of injury when switching on compressed air! Cylinders may advance and retract automatically. • Risk of accident due to advancing cylinders! <ul style="list-style-type: none"> – Always position pneumatic cylinders so that the piston rod's working space is unobstructed along its entire stroke range. – Make sure that the piston rod cannot collide with any of the rigid components in the setup. • Risk of accident due to pneumatic tubing slipping off! <ul style="list-style-type: none"> – Use shortest barbed tubing connectors possible. – If pneumatic tubing slips off, switch off the compressed air supply immediately. • Do not exceed the maximum permissible pressure of 600 kPa (6 bar). • Do not switch on the compressed air until all the barbed tubing connectors have been connected and secured. • Do not disconnect pneumatic tubing while it is under pressure. <ul style="list-style-type: none"> – Do not attempt to seal or plug pneumatic tubing or plug connectors with your hands or fingers. • Check the condition of the condensate in the service unit regularly. If necessary, drain the condensate and dispose of it properly.
---	---

	<div data-bbox="762 192 1021 259"> CAUTION</div> <ul style="list-style-type: none">• Setting up pneumatic circuits<ul style="list-style-type: none">– Connect the devices with plastic tubing with an outside diameter of 4 or 6 mm.– Push the pneumatic tubing into the push-in connector as far as it will go.• Dismantling pneumatic circuits<ul style="list-style-type: none">– Switch off the compressed air supply before dismantling the circuit.– Press the blue release ring down so that the tubing can be pulled out.• Noise due to escaping compressed air<ul style="list-style-type: none">– Noise caused by escaping compressed air may damage your hearing. Reduce noise by using mufflers, or wear hearing protection if the noise cannot be avoided.– All of the exhaust ports on the components included in the equipment set are equipped with mufflers. Do not remove these mufflers.
---	---

4.5 Guarantee and liability for application examples



The application examples are not legally binding, and we cannot guarantee their completeness in terms of their configuration, their equipment or any events that may occur. The application examples are not representations of any specific customer solution; they are merely intended to illustrate typical tasks for which the product in question could be used. You bear the responsibility for ensuring that the products described here are operated properly. These application examples do not in any way relieve you of your responsibility to ensure that the system is handled safely when it is being used, installed, operated or maintained.

4.6 Cyber security

Note

Festo Didactic offers products with industrial security functions that aid the safe operation of plants, systems, machines and networks. In order to protect plants, systems, machines and networks from cyber threats, a comprehensive industrial security concept must be implemented and continuously updated. Festo's products and services only constitute one part of such a concept.

The customer is responsible for preventing unauthorized access to their plants, systems, machines and networks. Systems, machines and components should only be connected to a company's network or the Internet if and as necessary, and only when the suitable security measures (e.g. firewalls and network segmentation) are in place. Furthermore, Festo's guidelines on suitable security measures should be observed. Festo products and solutions are constantly being developed further in order to make them more secure. Festo strongly recommends that customers install product updates as soon as they become available and always use the latest versions of its products. Any use of product versions that are no longer supported or any failure to install the latest updates may render the customer vulnerable to cyber attacks.

	 WARNING
	<ul style="list-style-type: none"> • Unsecure operating conditions due to software tampering <ul style="list-style-type: none"> – Forms of software tampering (e.g. viruses, Trojans, malware and worms) can lead to unsecure operating conditions in your system, which may in turn lead to severe or fatal injury or property damage. – Keep your software up to date. – Integrate the automation and actuator components into an overarching and comprehensive industrial security concept for the installation or machine in question that is in line with the latest technological developments. – Make sure that all the products you have installed are incorporated into your overarching industrial security concept. – Use suitable measures, such as a virus scanner, to protect files save on exchangeable storage media from malware.

4.7 Additional safety instructions

General requirements for safe operation of the devices:

- Do not lay cables over hot surfaces.
 - Hot surfaces are identified with a corresponding warning symbol.
- Maximum permissible current loads for connector cables and devices must not be exceeded.
 - Always compare the current ratings of the device, the cable and the fuse to ensure that they match.
 - If they do not match, use a separate upstream fuse in order to provide appropriate overcurrent protection.
- Devices with a grounding terminal must always be grounded.
 - If a ground terminal (green-yellow laboratory socket) is available, it must always be connected to protective ground. The protective grounding must always be connected first (before voltage) and disconnected last (after disconnecting the voltage).
- The device is not equipped with a built-in circuit unless otherwise specified in the technical data.

	<div data-bbox="751 792 815 851"></div> <div data-bbox="847 808 1027 851">WARNING</div> <ul style="list-style-type: none">• This product is designed for use in industrial environments, and may cause malfunctions if used in domestic or small commercial environments.
---	--


4.8 Guarantee and liability


Our General Terms and Conditions of Sale and Delivery shall apply at all times. These shall be made available to the operating company no later than upon conclusion of the sales contract. Guarantee and liability claims resulting from personal injury and/or property damage are excluded if they can be traced back to one or more of the following causes:

- Use of the equipment for purposes other than its intended use
- Improper installation, commissioning, operation or maintenance of the system
- Operation of the system with defective safety equipment, or with improperly attached or non-functional safety equipment and protective guards
- Non-compliance with directions included in the operating instructions with regard to transport, storage, installation, commissioning, operation, maintenance and setup of the system
- Unauthorized modifications to the system
- Improperly executed repairs
- Disasters resulting from the influence of foreign bodies and acts of God
- Dust generated during construction work must be kept away from the system (use coverings).

See the Environmental Requirements section (contamination level) for more details.

4.9 Transport

	<div data-bbox="751 315 815 371" style="text-align: center;"></div> <div data-bbox="852 331 1027 371" style="text-align: center;">WARNING</div> <ul style="list-style-type: none"> • Danger due to tipping over <ul style="list-style-type: none"> – Suitable packaging and transport equipment must be used when transporting the station. The station can be lifted from underneath using a forklift truck. Please note that eccentric centers of gravity can cause the station to tip over. – Stations with attachments at height will have a high center of gravity. – Take care to avoid tipping over during transportation.
---	--

	<div data-bbox="842 779 946 819" style="text-align: center;"><i>NOTE</i></div> <ul style="list-style-type: none"> • Station contains delicate components! <ul style="list-style-type: none"> – Take care not to shake during transportation • The station is only permitted for installation on solid, non-vibrating surfaces. <ul style="list-style-type: none"> – Make sure that the ground underneath the station has sufficient load-bearing capacity.
---	---

FESTO

1	D: 8061184	12
2	M-110704	13
3	2022-03-16	14
4	24 V DC, 0,2 A	15
5	p max: 0,6 MPa (6 bar, 87 psi)	16
6	9,5 kg	17
7	use only with SELV or PELV supply!	
8	Festo Didactic SE, Rechbergstrasse 3, DE-73770 Denkendorf	
9	UK Importer: Festo Ltd, Brackmills, NN4 7PY	
10	Made in Canada,	
11	https://ip.festo-didactic.com	

CE UK CA

Warning symbols: Exclamation mark, Information icon, No open flame, QR code.

© Festo Didactic 8038567 en

(DE) Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller. Der beschriebene Gegenstand der Erklärung erfüllt die einschlägigen Harmonisierungsrechtsvorschriften der Union.

(EN) This declaration of conformity is issued under the sole responsibility of the manufacturer. The object of the declaration described is in conformity with the relevant Union harmonisation legislation.

(BG) Настоящата декларация за съответствие е издадена на отговорността на производителя. Предметът на описаната декларация отговаря на съответното законодателство на Съюза за класифициране.

(CS) Toto prohlášení o shodě se vydává na výhradní odpovědnost výrobce. Popsaný předmět prohlášení je ve shodě s příslušnými harmonizačními právními předpisy Unie.

(DA) Denne overensstemmelseserklæring udstedes på fabrikantens ansvar. Genstanden for erklæringen, som beskrevet, er i overensstemmelse med den relevante EU-harmoniseringsdirektiv.

(Ε) Η παρούσα δήλωση συμπληρώθηκε εκδόχως με αποδοστική γνώση των καταστάσεων. Ο παρωφόμενος στόχος της δήλωσης είναι σύμφωνος με τη στοιχή οικονομική κατάσταση του/των υποψήφιων.

(ES) La presente declaración de conformidad se expide bajo la exclusiva responsabilidad del fabricante. El objeto de la declaración descrita es conforme con la legislación de armonización pertinente de la Unión.

(ET) Käesolev vastavusdeklaratsioon on välja antud tootja ainuvastutusel. Kirjeldataud deklareeritava toode on kooskõlas asjaomaste liidu õhtustamisaktidega.

(F) Tämä vaatimustenmukaisuusvakuutus on annettu valmistajan yksinomaisella vastuulla. Kuvattu vakuutus on kohde on asiaa koskevan unionin yhdenmukais-tamisalainsäädännön vaatimusten mukainen.

(FR) La présente déclaration de conformité est établie sous la seule responsabilité du fabricant. L'objet décrit de la déclaration est conforme à la législation d'harmonisation de l'Union applicable.

(HU) Ezt a megfelelőségi nyilatkozatot a gyártó kizárólagos felelőssége mellett adják ki. Az ismertetett nyilatkozat tárgya megfelel a vonatkozó uniós harmonizációs előírásoknak.

(IT) La presente dichiarazione di conformità è rilasciata sotto la responsabilità esclusiva del fabbricante. L'oggetto della dichiarazione descritto è conforme alla pertinente normativa di armonizzazione dell'Unione.

(LT) Ši atitiktis deklaracija išduota tik gamintojo atsakomybe. Aprašytas deklaracijos objektas atitinka susijusius derinamuosius Sąjungos teisės aktus.

(IV) Šī atbilstības deklarācija ir izdota vienīgi uz ražotāja atbildību. Aprakstītais deklarācijas objekts atbilst attiecīgajām Savienības saistojošās tiesību aktam.

(NU) Deze conformiteitsverklaring wordt verstrekt onder volledige verantwoordelijkheid van de fabrikant. Het beschreven voorwerp is in overeenstemming met de desbetreffende harmonisatiewetgeving van de Unie.

(PL) Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta. Wymieniony przedmiot niniejszej deklaracji jest zgodny z odpowiednimi wymaganiami unijnego prawodawstwa harmonizacyjnego.

(PT) A presente declaração de conformidade é emitida sob a exclusiva responsabilidade do fabricante. O objeto da declaração descrito está em conformidade com a legislação aplicável de harmonização da União.

(RO) Prezența declarației de conformitate este emisă pe răspunderea exclusivă a producătorului. Obiectul descris al declarației este în conformitate cu legislația relevantă de armonizare a Uniunii.

(54) Toto vyhlásenie o zhode sa vydáva na vlastnú zodpovednosť výrobcu. Uvedený predmet vyhlásenia je zhode s príslušnými harmonizačnými právnymi predpismi.

(5) Za izdajo te izjave o skladnosti je odgovoren izključno proizvajalec. Opisani predmet izjave je v skladu z ustrežno zakonodajo Unije o harmonizaciji.

(SV) Denna försäkras om överensstämmelse utfärdas på tillverkarens eget ansvar. Föremålet för försäkras överensstämmer med den relevanta harmoniserade unionslagstiftningen.

(TR) Bu Uygunluk Belgesi tamamen Üreticinin sorumluluğu altındadır. Belgede açıklanan obje, Birliğin ilgili uyum mevzuatına uygundur.

EG-Konformitätserklärung

EU Declaration of Conformity

Декларация за съответствие на ЕС

Prohibiční a šedé ES

EF-overensstemmelseserklæring

အသက် ၁၀ နှစ်အောက် ကလေးများ

Declaración de conformidad CE

E) vastavuse deklaratsioon

EY-zaatimuster mukaisi usakurufu

Déclaration CE de conformité

EK megfélelősségi politikázzal

Dichiarazione di conformità EU

ED activities delinquent

EK atbilstības deklarācija

EG-verklaring van

over new systems and new

Deklaracja zgodności WE

Declaración de conformidad CE

Declaratie de conformitate CE

Wahlserie n. runde ES

Izjava ES o skladnosti

EG-Fürsorge im Überwachungsmaß

The installation instructions according to the manual have to be followed. The person authorized to compile the technical documents is Philippe Drolet, Product conformity, Festo Didactic Ltée/Ltd. Canada.

FESTO

2022-03-02

8032510	CP-AM-DRILL
8032507	CP-AM-PRESS
8032508	CP-AM-MAG
8032509	CP-AM-TURNOVER
8032511	CP-AM-CAM
8038567	CP-AM-MPRESS
8043598	CP-AM-IDRILL-C21
8050101*	CP-L-LINEAR-C11-M0
8050102*	CP-L-LINEAR-C13-M0
8058667*	CP-L-BRANCH-C21
8061184	CP-AM-OUT
8068413	CP-AM-iPICK-C21
8088783	CP-AM-OVEN-230V
8091107	CP Lab HMI Panel
8092833*	SC CP LAB STD CFG 4
8092834*	SC CP LAB STD CFG 6
8092835*	SC CP LAB STD CFG 8
8092836*	SC CP LAB STD CFG 10
8108237*	CP-L-LINEAR-C11-M6
8129428	CP-Lab/MPS HMI Panel
8132970*	CP-L-LINEAR-C11-M0-V2
8146023*	CP-L-LINEAR-C13-M0-V2
8146024*	CP-L-LINEAR-C11-M6-V2
8152450	CP-AM-LABEL-V2
8154245	CP-AM-MEASURE-V2
8155207	CP-AM-CAM-V2
8167762*	CP-L-LINEAR-C11-M0 V2
8167762*	CP-L-LINEAR-C11-M0 V2
8167764*	CP-L-LINEAR-C11-M6 V2
8172797*	CP-L-LINEAR-NO-PLC-M0

2006/42/EC	EN 60204-1:2018
2014/30/EU	EN 61326-1:2013-01
2011/65/EU	EN 63000:2016-10
2014/53/EU*	See Appendix A for details

Festo Didactic Ltée/Ltd. · 675 rue du Carbone · Québec, QC G2N 2K7 · CANADA · www.festo-didactic.com

8101137 – DoC0039

FESTO

Festo Didactic Ltée/Ltd

675 rue du Carbone
Québec, QC G2N 2K7
Canada
www.festo-didactic.com

Francis Larrivée
Francis Larrivée, ing.
Engineering

Philippe Drolet
Philippe Drolet, ing.
Product Compliance

Appendix A:

Extracted from: Siemens EU-Declaration of Conformity No. A5E50679864A; REV.: 001 /
[CE-DoC_A5E50679864A_RF200R_RF300R_RED_RoHS_2020-12-11.pdf \(siemens.com\)](#)

SIEMENS

Anhang RED & RoHS / Annex RED & RoHS zur EU-Konformitätserklärung / to EU-Declaration of Conformity

Nr./No. A5E50679864A; REV.: 001

Produktgruppenbezeichnung/-modell SIMATIC RF200R / RF300R HF RFID READERS
Product group identification/-model (13.56 MHz)

Die Übereinstimmung der bezeichneten Produkte (unter Verwendung des Zubehörs) des oben genannten Gegenstandes mit den Vorschriften der angewandten Richtlinie(n) wird nachgewiesen durch die vollständige Einhaltung folgender Normen / Vorschriften (variantenabhängig, siehe Anhang Produkte - Tabelle 1. Angewandte Normen werden durch ein „x“ gekennzeichnet, wofür gegebenenfalls nicht angewandte Normen durch ein „-“ gekennzeichnet werden.)

The conformity of the designated products (using the accessory) of the object described above with the provisions of the applied Directive(s) is proved by full compliance with the following standards / regulations (depending on versions, see annex Products - Table 1. Applicable Standards are marked by a "x" whereas not applicable Standards are marked by a "-").

Art. 3(1) a) Schutz der Gesundheit und Sicherheit - Normen / Health and Safety - standards:

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
EN 60954 - A1	2014/03/17	EN 60954	2018

Art. 3(1) b) EMV Normen / EMC standards:

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
ETSI EN 301 489-1	V2.2.3	EN IEC 61000-6-1	2019
ETSI EN 301 489-3	V2.1.1	EN IEC 61000-6-2	2019
EN 50119 - A1 - A11	2016/02/17/2020	EN 61000-6-2 - A1	2007/2011
EN 50322 - A11 Class A/B	2015/03/26	EN IEC 61000-6-4	2019
EN 50320 - A11	2011/03/25	EN IEC 61000-6-3	2020

Art. 3(2) Effiziente Nutzung des Funkpektrums Harmonisierte Normen / Efficient usage of spectrum Harmonized standards:

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue
ETSI EN 300 330	V2.1.1		



Art. 3(3) a) Delegierte Rechtsakte für Funkanlagen / Delegated acts for Radio equipment

Referenznummer Reference number	Ausgabedatum Date of issue	Referenznummer Reference number	Ausgabedatum Date of issue

Festo Didactic Ltée/Ltd. · 675 rue du Carbone · Québec, QC G2N 2K7 · CANADA · www.festo-didactic.com



8101137 – DoC0039

4.12 General product safety

	<div data-bbox="751 315 818 371"></div> <div data-bbox="855 331 1027 376">WARNING</div> <ul style="list-style-type: none">• General product safety, CE conformity<ul style="list-style-type: none">– The product fulfills the requirements of all applicable EU directives. We confirm this with the CE mark.– As a consequence of Changes (hardware / software) Additions or improper use– Product safety can no longer be guaranteed by the operator.– In this case, the manufacturer's CE declaration of conformity expires. The operator must re-evaluate the safety and determine the CE conformity.
---	---

4.13 Protective devices

In order to reduce risks, this machine contains guards to prevent access to dangerous areas. These guards must not be removed or tampered with.

	 WARNING
	<ul style="list-style-type: none"> • Damage to the safety window <ul style="list-style-type: none"> – Windows must not be cleaned using aggressive or alcoholic cleaning agents. Risk of brittleness and breakage! – This protective device must be replaced if it shows any signs of damage. Please contact our Service department to arrange this.

4.13.1 Emergency stop

If a station has an emergency stop button, the emergency stop signal switches off all actuators. An acknowledgment by the operator is required for a restart, there is no automatic restart.

4.13.2 Additional protective devices

The individual components, such as the power supplies and the controllers, possess built-in safety functions such as short-circuit protection, overcurrent protection, overvoltage protection and thermal monitoring. If necessary, consult the instruction manual for the device in question for more information.

5 Technical data

Parameter	Value
Electrics	
Power supply	24 V DC, 4.5 A protective extra low voltage (PELV)
Digital inputs	1
Digital outputs	1
Analog inputs	1
Analog outputs	2
Compressed air	
Supply pressure	6 bar, 90 psi
Supply rate	≥ 40 l/min
Compressed air quality	EN ISO 8573-1
Pressure dew point (Class 4)	≤ +3°C
Ambient conditions	
Operating environment	Use inside building only
Ambient temperature	5°C ... 40°C
Rel. air humidity	80% up to 31°C
Pollution degree	2, Dry, non-conductive contamination
Operating height	Up to 2000 m above NN (sea level)
Noise emission level	L _{pA} < 70 dB
Certification	
CE marking in accordance with:	Machinery Directive EMC Directive RoHS Directive
EMC environment	Industrial environment, Class A (in acc. with EN 55011)
Measurements	
Length	267 mm
Width	186 mm
Height	523 mm
Weight	Approx 5,9 kg
Subject to change	

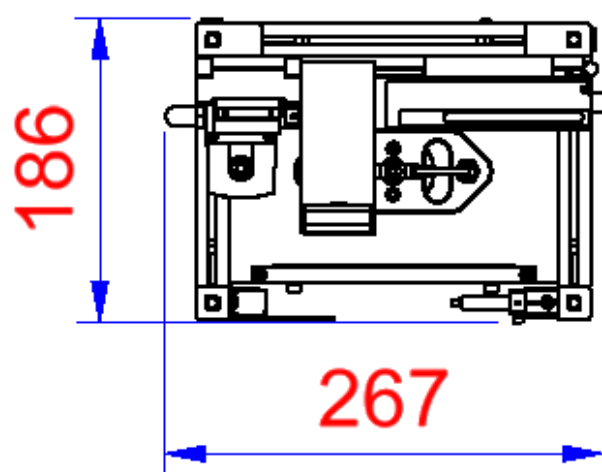
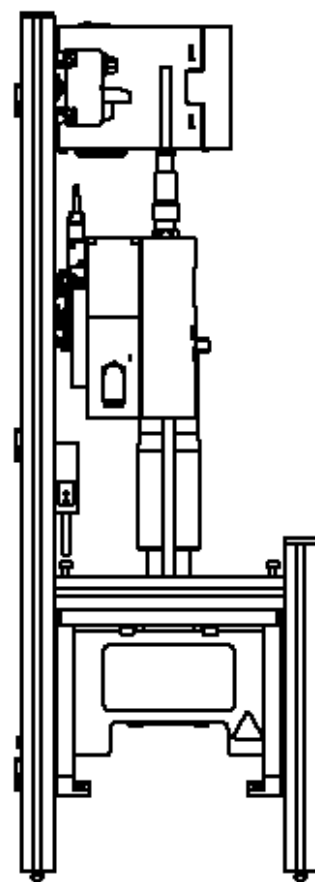
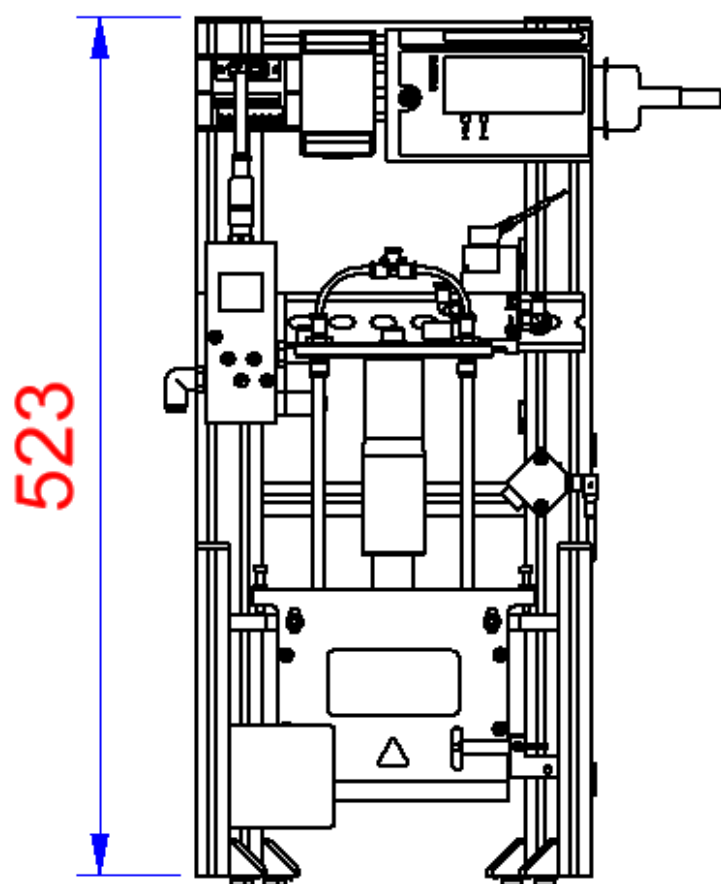








Illustration similar


6 Design and Function

6.1 Transport

	<div style="text-align: center; background-color: #e67e22; color: white; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> • Damage to transport equipment when moving heavy machines/machine sections <ul style="list-style-type: none"> – When the stations are shipped out, extra care must be taken to ensure that heavy machines/machine sections are always transported using a suitable fork-lift truck. A single station can weigh up to 50 kg. – Always use suitable transport equipment. – Always use the lifting points provided to move the machine/machine sections. – Always use the designated load take-up point.
---	---

	<div style="text-align: center; background-color: #e67e22; color: white; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> • Securing transit routes <ul style="list-style-type: none"> – The supply routes must be cleared prior to transport, and must be suitable for the forklift truck to pass through. If necessary, warning signs or barrier tape must be set up to keep the routes clear. • Caution <ul style="list-style-type: none"> – When opening transport boxes, care must be taken to ensure that any additional components delivered in the same box, such as computers, do not fall out.
--	--


	<div style="text-align: center; background-color: #e67e22; color: white; padding: 5px;">  WARNING </div> <ul style="list-style-type: none"> • Danger of crushing for hands/feet <ul style="list-style-type: none"> – It is not permitted to grip onto or under the feet when handling the machine, as there is an increased risk of hands or feet getting crushed or trapped in these areas. – When setting down the station, make sure no persons have their feet under the machine's feet.
---	---

	<i>NOTE</i>
	<ul style="list-style-type: none">– When opening the transport box, any additional components must be secured to prevent them from falling out, and removed first.– Once this is done, the transport box can be removed/opened up fully, and the station can be taken out and moved to its intended location.– Care must be taken with all components projecting from the machine, as sensors and similar small parts can easily be damaged if the machine is not transported correctly.– Check that all the profile connectors are seated correctly using a size 4 – 6 Allen key. Unavoidable vibrations can loosen the connectors during transport.

6.2 Overview of the System

CP Lab Conveyor, CP Factory Linear, CP Factory Shunt and CP Factory Bypass are called basic modules. If an application module, e.g. the CP Application Module muscle press is attached to a basic module, it becomes a station.

Example

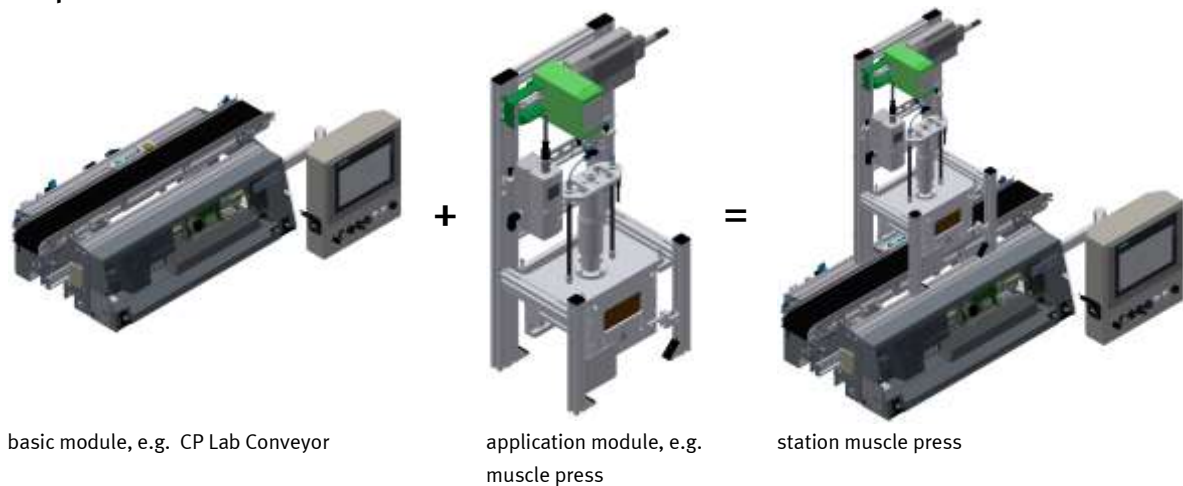


If several stations are put in a row one behind the other, this will form a production line.



Carriers are transported on the conveyors of the basic modules. And on the carriers, there are pallets with a fixed workpiece reception placed. The workpieces are placed on the workpiece reception or taken from it. Pallets can also be placed on a carrier in some stations or gripped from there.

The typical workpiece of a CP Factory/Lab System is the roughly simplified version of a mobile phone. The workpiece consists of a front cover, of a back cover, of a board and of a maximum of two fuses.

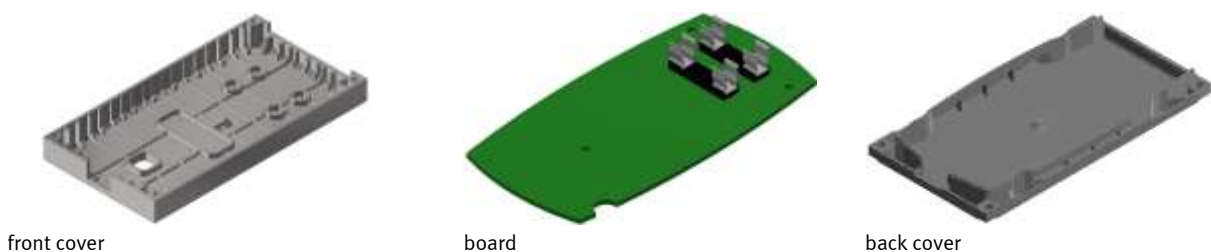

6.3 The application module muscle press

The application module muscle press is designed for

- Pressing a front cover and a back cover together.

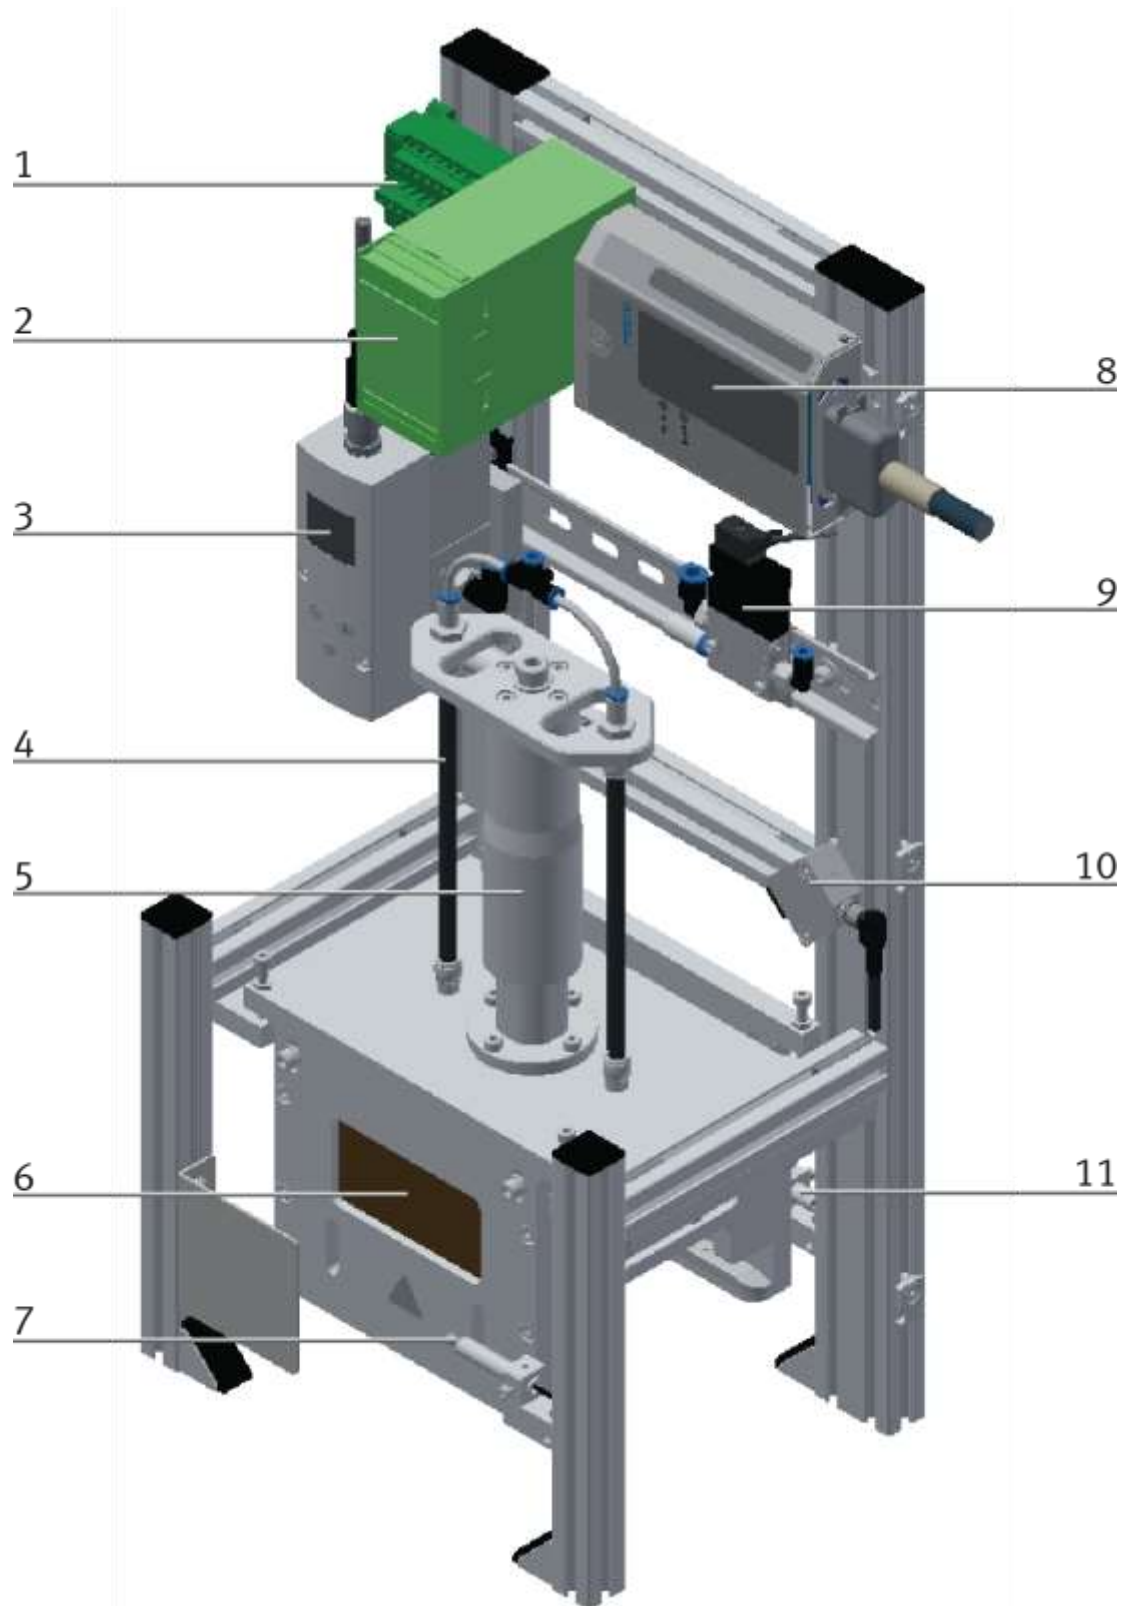


Illustration similar

Position	Designation
1	Analog terminal
2	Amplifier for force sensor
3	Proportional pressure control valve
4	Fluidic Muscle
5	Guidance z-axle
6	Safety cover press
7	Workpiece request
8	I/O module
9	Valve
10	Workpiece request
11	Workpiece request

6.3.1 Electrical

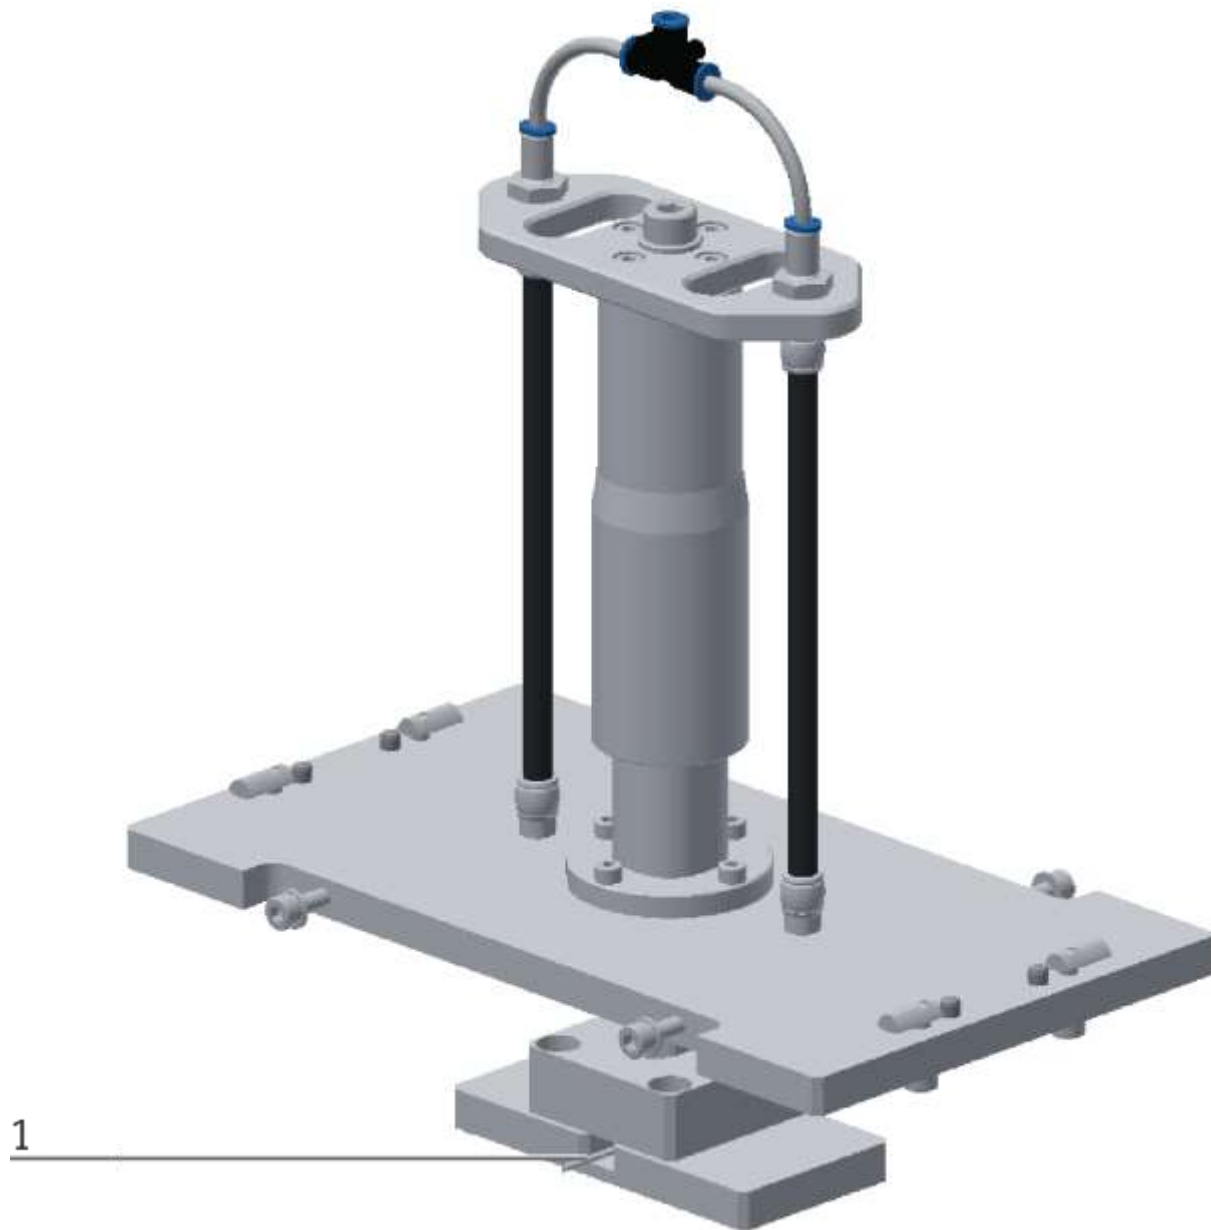


Illustration similar

Position	Designation	Part number	Resource identifier	Use
1	Burster force sensor	8415	BG10	Force measuring


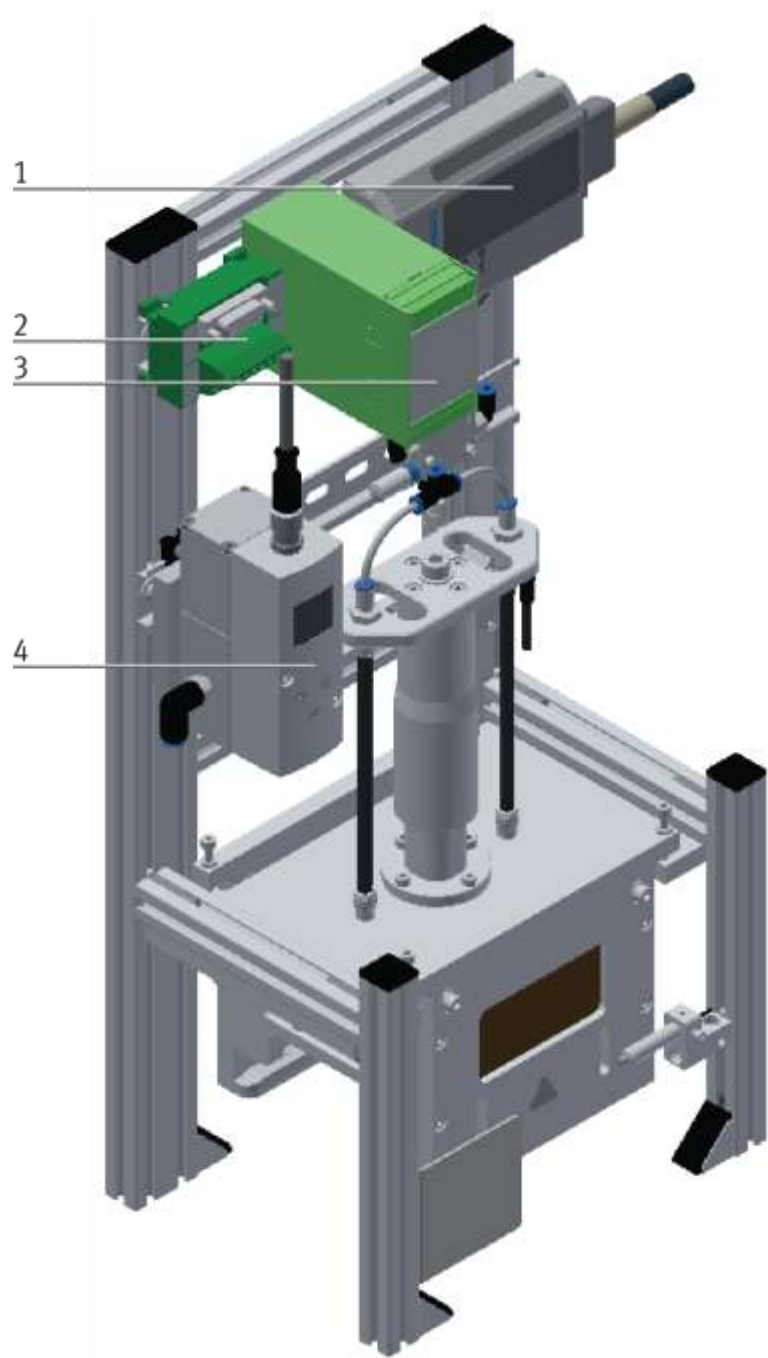


Illustration similar

Position	Designation	Part number	Resource identifier	Use
1	I/O Module	8027412	XD1	
2	Analog terminal UM 45-D15SUB/B	PXC 2962735	XD2A	
3	Amplifier Burster IMA2-DMS	9243	KF10	
4	Proportional pressure control valve VPPM-6L-L-1-G18-0L6H-V1P-C1	558337	KF11	

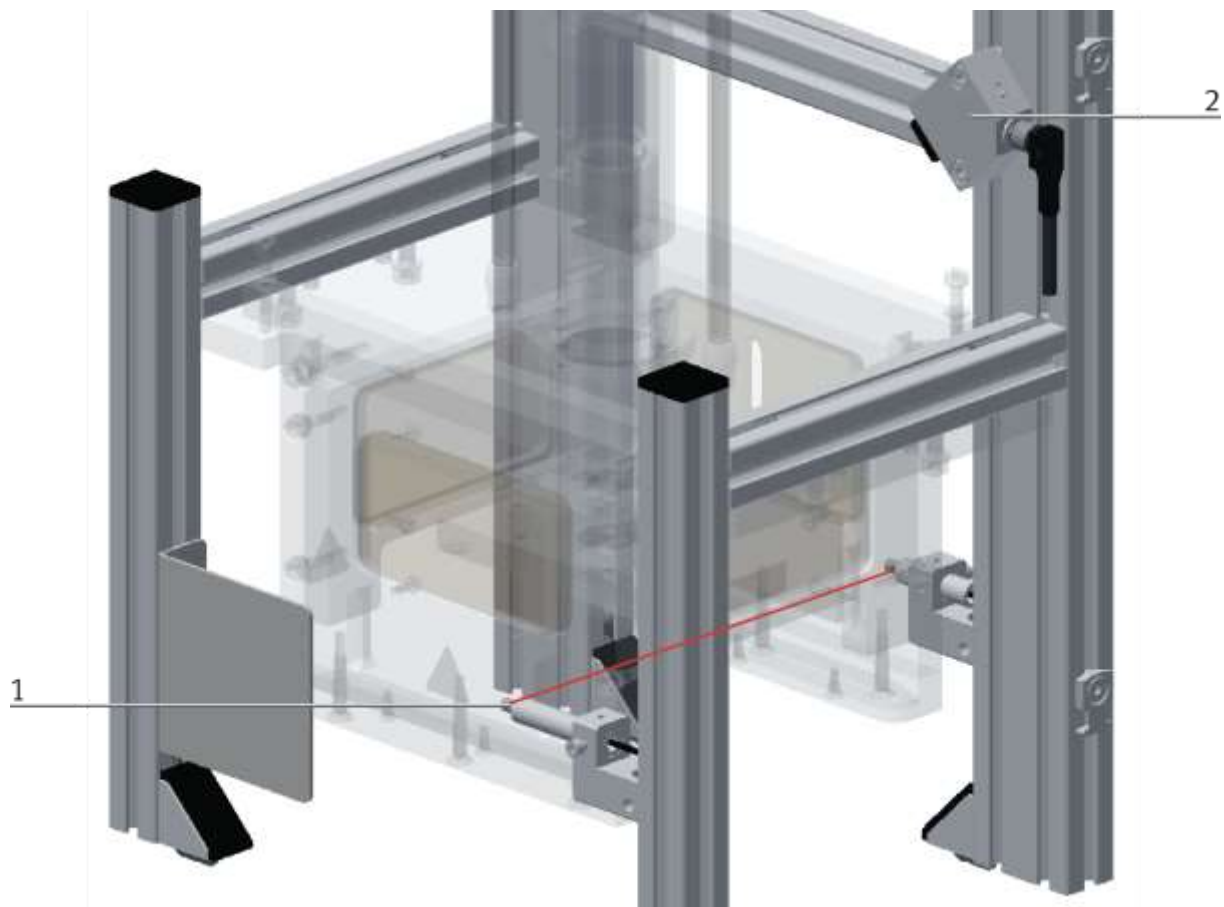

Light guides – illustration similar

Position	Designation	Part number	Resource identifier	Use
1	Light guide SOOC-TB-M4-2-R25	552812	BG1	Workpiece available
2	Light guide device D: SOEG-L-Q30-P-A-S-2L	8127556	BG1	Workpiece available

6.3.2 Pneumatic

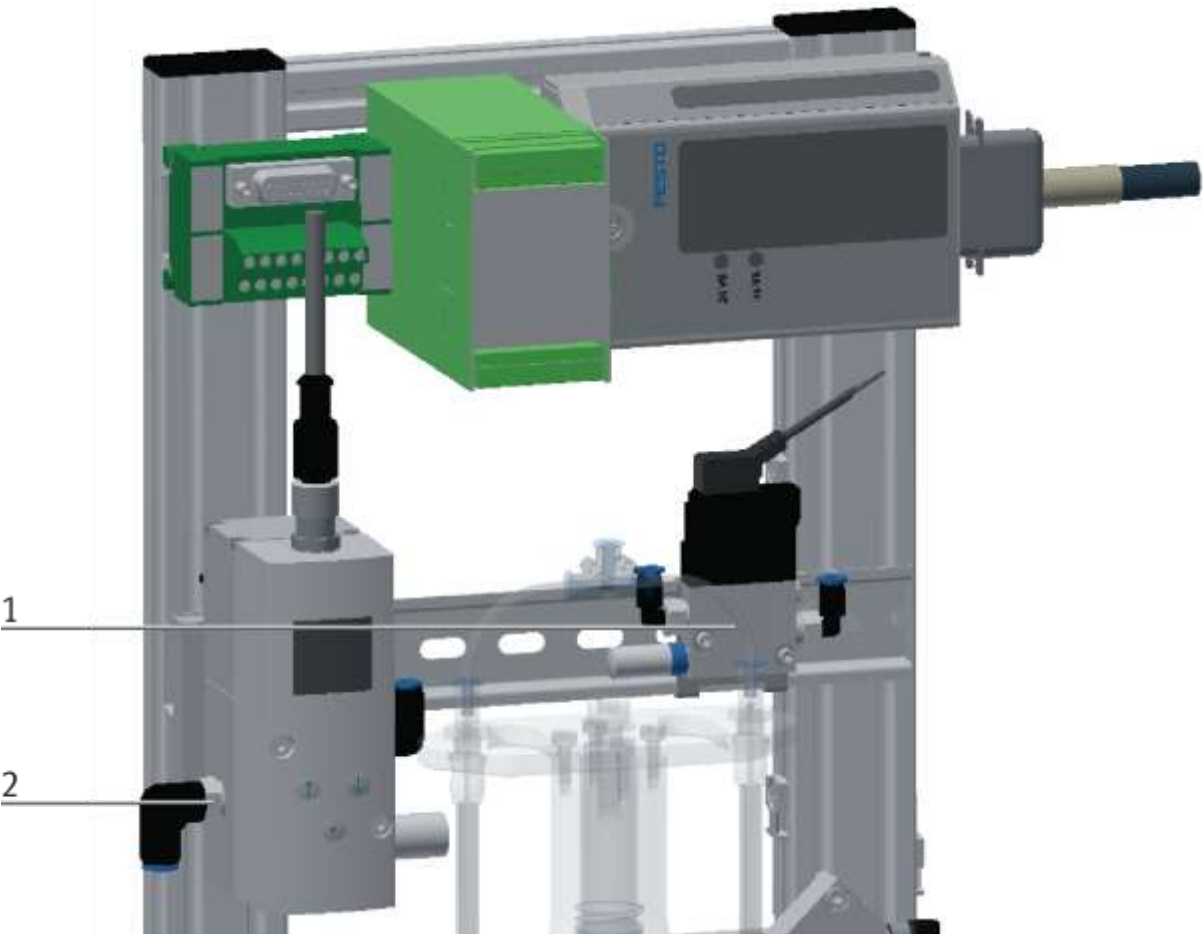


Illustration similar

Position	Designation	Part number	Resource identifier	Use
1	manifold block CPE10-M1BH-3GL-M7	916915	MB 1	Emergency stop valve
2	Proportional pressure control valve VPPM-6L-L-1-G18-0L6H-V1P-C1	558337	KF11	

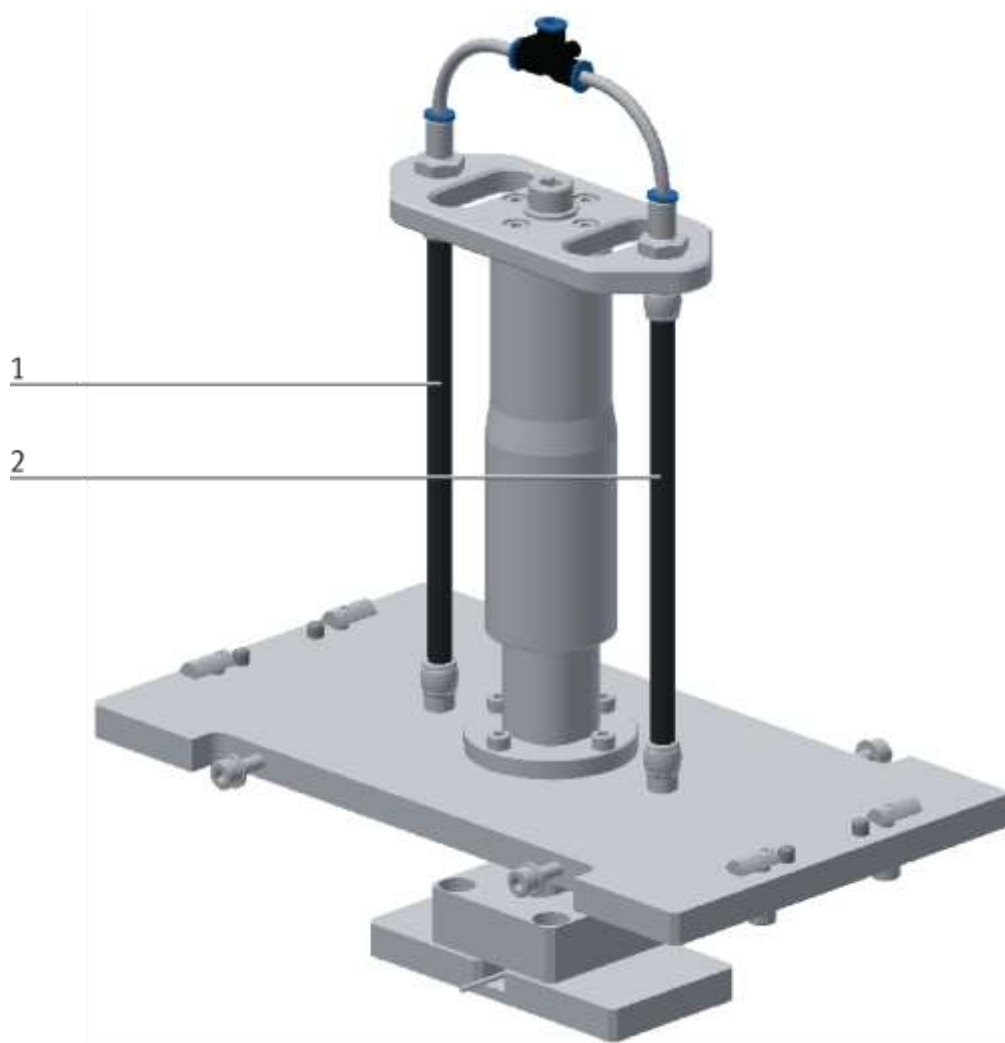


Illustration similar

Position	Designation	Part number	Resource identifier	Use
1	fluidic muscleDMSP-5-130N-AM-CM	3733012		
2	fluidic muscleDMSP-5-130N-AM-CM	3733012		

6.4 Function

The application module presses a front cover and a back cover. When moving into the application module, the workpieces are recognized by a light barrier, and the carrier is stopped. The covers on it are pressed together with the help of the muscle. Then the carrier leaves the application module.

6.5 Sequence description

Start conditions

- All connections have been established properly.

Start position

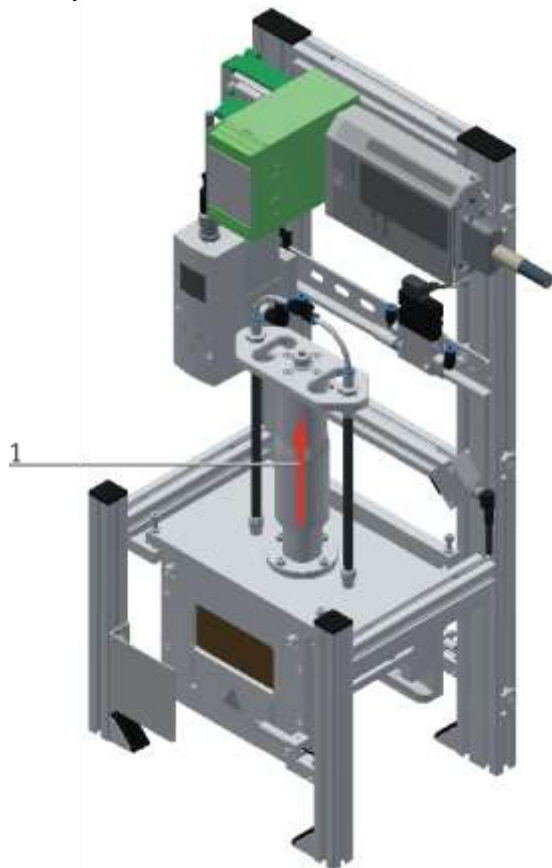


Illustration similar

1. The muscle of the pressing unit must be without pressure in its upper end position.

Process

1. If a carrier is transported with a workpiece through the light barrier of the application module muscle press, the carrier will be stopped and an automatic mode will be started.
2. The pressing unit runs downward.
3. The upper part and the lower part are pressed together.
4. The pressing unit runs back to the top.
5. When the pressing unit has arrived at the top, the carrier is released and leaves the application module.

6.6 Electrical Connections

6.6.1 Connection application module at CP-Factory basic module

Connection with syslink connectors

The applications are connected to the electrical board of the module via I/O. The I/O box (2) of the application is connected to the I/O terminal (4) on the electrical board of the module. If an application has more than 8 I/O, the second I/O box cable is connected to another I/O terminal on the electrical board. The example refers to the connection to a basic module linear, it is possible that the terminal names of the I/O terminal differ when connected to another module.

Analog connection

The analogue connection of the application is connected to the electrical board of the module. The analogue terminal (2) of the application is connected to the analogue terminal (4) on the electrical board of the module.

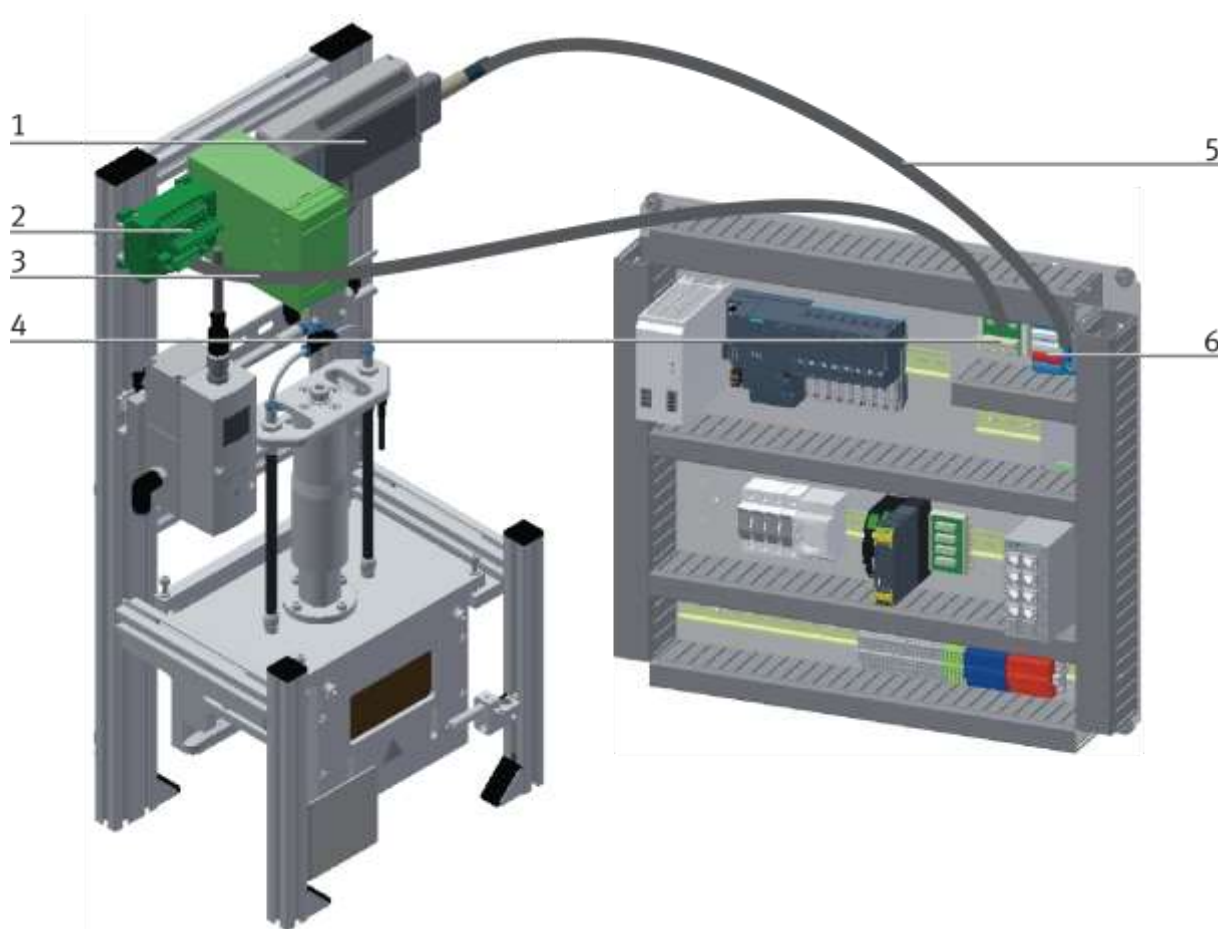


Illustration similar

6.6.2 Connection application module at CP-Lab conveyor

Connection with syslink connectors

The application module is connected to the front board (XZ1) of the CP Lab conveyor.

For this purpose, the I/O box (1) of the application module is connected to the circuit board (5) of the CP Lab conveyor using a Sys-Link I/O cable (4). The cable is hardwired to the board (X11) of the CP Lab conveyor.

Analog connection

The analog connection of the application module is connected to the rear panel (XZ2) of the CP Lab conveyor.

The analog terminal (2) of the application module is connected to the board / slot X5 (6) of the CP Lab conveyor, using an analog cable (3).

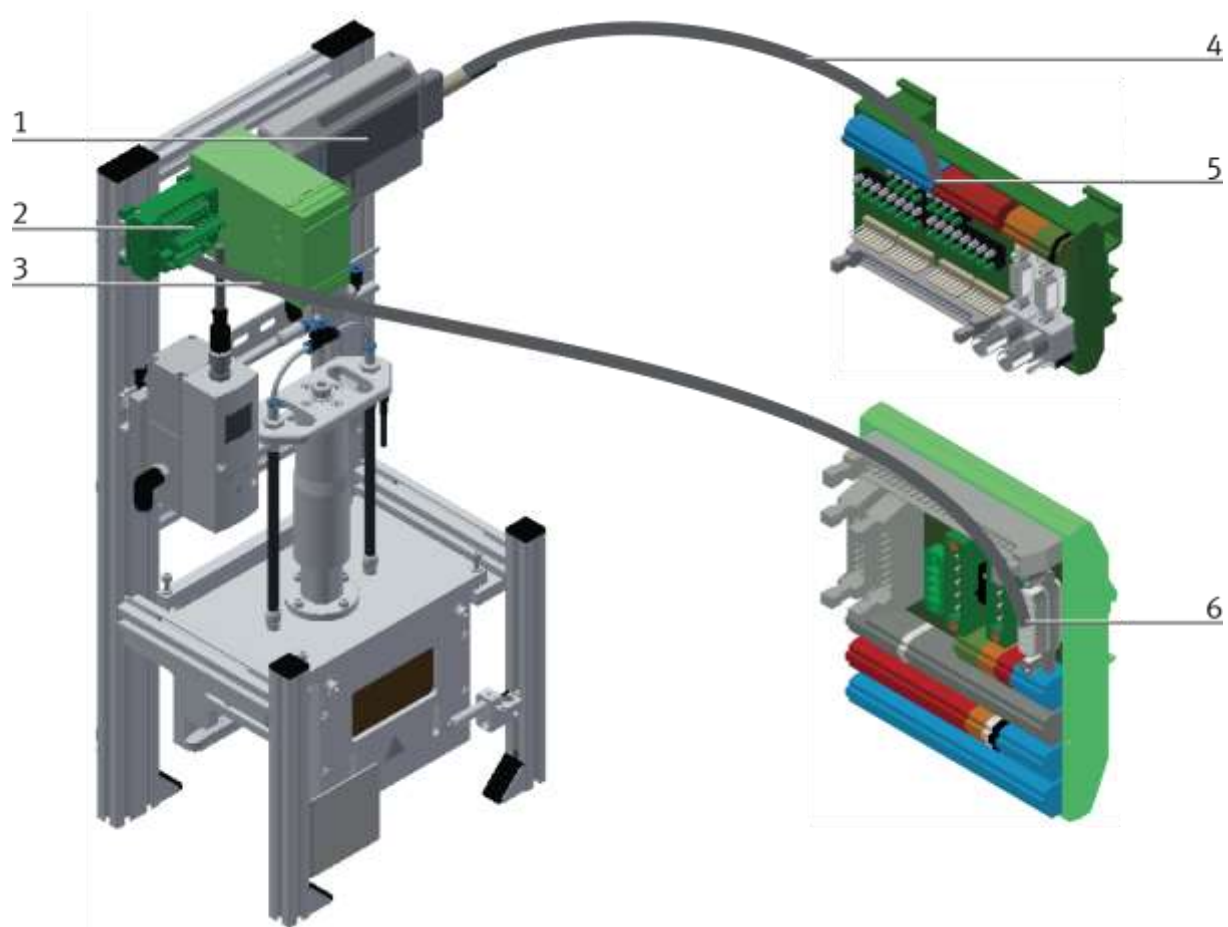


Illustration similar

6.6.3 I/O module XD1



Illustration similar

Inputs

Designation	Equipment identifier	Application	Application SysLink
Workpiece available	BG1	XD1 / XK:I0	XD1:XS13
Reserve		XD1 / XK:I1	XD1:XS14
Reserve		XD1 / XK:I2	XD1:XS15
Reserve		XD1 / XK:I3	XD1:XS16
Pressure regulator reached print	KF11 / DQ3	XD1 / XK:I4	XD1:XS17
Reserve		XD1 / XK:I5	XD1:XS18
Reserve		XD1 / XK:I6	XD1:XS19
Reserve		XD1 / XK:I7	XD1:XS20

Outputs

Designation	Equipment identifier	Application	Application SysLink
Emergency stop valve	MB1	XMA2 / XK:O0	XMA2:XS1
Reserve		XMA2 / XK:O1	XMA2:XS2
Reserve		XMA2 / XK:O2	XMA2:XS3
Reserve		XMA2 / XK:O3	XMA2:XS4
Pressure regulator options entrance DI1	KF11 / DI1	XMA2 / XK:O4	XMA2:XS5
Pressure regulator options entrance DI2	KF11 / DI2	XMA2 / XK:O5	XMA2:XS6
Reserve		XMA2 / XK:O6	XMA2:XS7
Reserve		XMA2 / XK:O7	XMA2:XS8

6.6.4 Analog Terminal XD2A

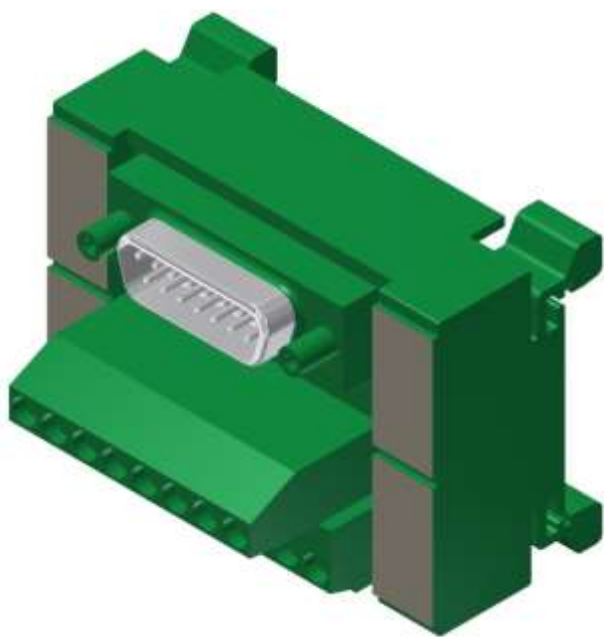




Illustration similar

Designation	Clamp valve / power sensor	Clamp analog Terminal
Ans. Input +	KF11 / X1:4 – W+	XDA2 / XK:1
		XDA2 / XK:2
	KF11 / X1:3 – W-	XDA2 / XK:3
		XDA2 / XK:4
		XDA2 / XK:5
	KF10 / 11 – GND (Ausgang)	XDA2 / XK:6
	KF11 / X1:6 – X	XDA2 / XK:7
	KF10 / 12 – Signalausgang	XDA2 / XK:8
		XDA2 / XK:9
		XDA2 / XK:10
		XDA2 / XK:11
		XDA2 / XK:12
		XDA2 / XK:13
		XDA2 / XK:14
		XDA2 / XK:15

7 Commissioning

	<p style="text-align: center;"><i>NOTE</i></p> <ul style="list-style-type: none"> – The following applies to the start-up as well as to the restart.
---	--

- The CP Application Module is delivered pre-assembled.
- All attachment parts are individually packaged.
- All components, tubings and cabling have been clearly marked in order to guarantee a problem-free retrieving of all connections.
- For the operation within a CP Factory/Lab System, the CP Application Module has to be put on and attached to a basic module.

	<p style="text-align: center;"><i>NOTE</i></p> <ul style="list-style-type: none"> – You can read the general installation instructions in the manual of your basic module. The following instructions apply particularly to the CP Application Module.
---	--

7.1 Workplace

The commissioning of the CP Application Module requires:

- a CP Application Module
- a basic module CP Factory or a basic module CP Lab Conveyor for the installation of the CP Application Module
- a SysLink cable for the connection between the I/O terminal of the CP Application Module and the basic module CP Factory
- an Ethernet cable for the connection of the motor controller (option)
- an on-site electrical connection in the room, see data sheet basic module
- an on-site pneumatically connection in the room, see data sheet basic module

7.2 Visual Inspection

	 WARNING
	<ul style="list-style-type: none"> • Any damages must always be repaired instantly.

Visual inspection has to be carried out prior to every commissioning!

Before you start the CP Application Module, you must always inspect the following parts regarding visual damages and function:

- Electrical connections
- Mechanical components and connections
- Emergency Stop devices

7.3 Safety Regulations

	 WARNING
	<ul style="list-style-type: none"> • Any damages must always be repaired instantly.


The CP Application Module may only be operated on the following conditions:

- The technical condition – mechanically and electrically – of the CP Application Module is perfect.
- The CP Application Module is used in accordance with the regulations.
- The operating instructions have been read and understood.
- All safety devices are available and active.

7.4 Assembly


The application module is mounted on the basic module with the following distance (see picture): the distance between the stopper edge and the profile edge is the same with a CP-Lab conveyor as with a CP-Factory basic module.

The assembly process is explained in the following chapter as an example. The displayed dimension is an approximation, it is possible that a fine adjustment is necessary for error-free processing.

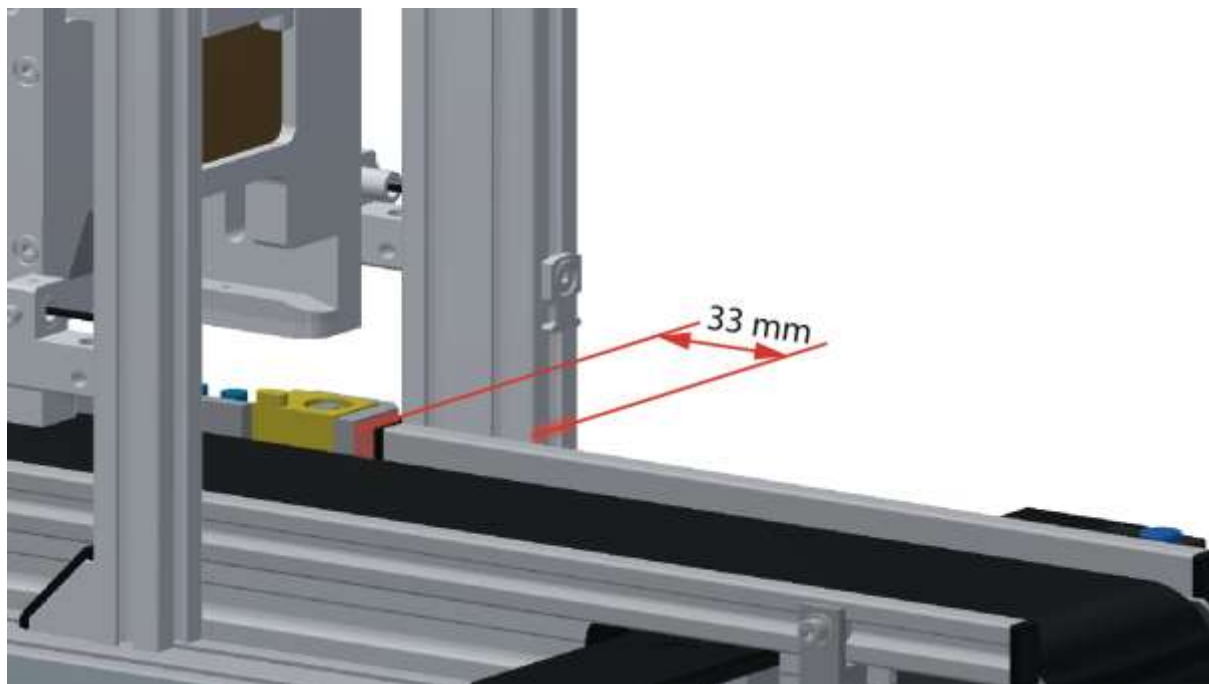

Example distance between application module and stopper / illustration similar

7.4.1 Assembly of an CP application module to basic module CP Lab Conveyor



NOTE

The procedure of attaching the CP application module to a basic module is the same as with all basic modules. The following description for the attachment to a basic module. CP Lab Conveyor is an example for all basic modules and all application modules.

Positioning slot nuts in the cross profiles of the basic module CP Lab Conveyor

Mounting the CP application module is very easy:

- Two M5-slot nuts (2) have to be put into the inner front slot of the cross profile (4) of the basic module CP Lab Conveyor.
- Then put two additional M5-slot nuts (2) into the inner back slot of the cross profile (3) of the basic module CP Lab conveyor.
- Then you have to position the slot nuts (2) approximately to the distance of the vertical cross profiles of the CP application module.



Positioning slot nuts / illustration similar

Position	Description
1	back cross profile
2	slot nut
3	Inner slot (back cross profile)
4	Inner slot (front cross profile)
5	front cross profile


Attaching the application module to the basic module CP Lab Conveyor

- Put the CP application module on the basic module CP Lab Conveyor.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.



NOTE

Use Allen keys for lateral adjustment of the slot nuts.

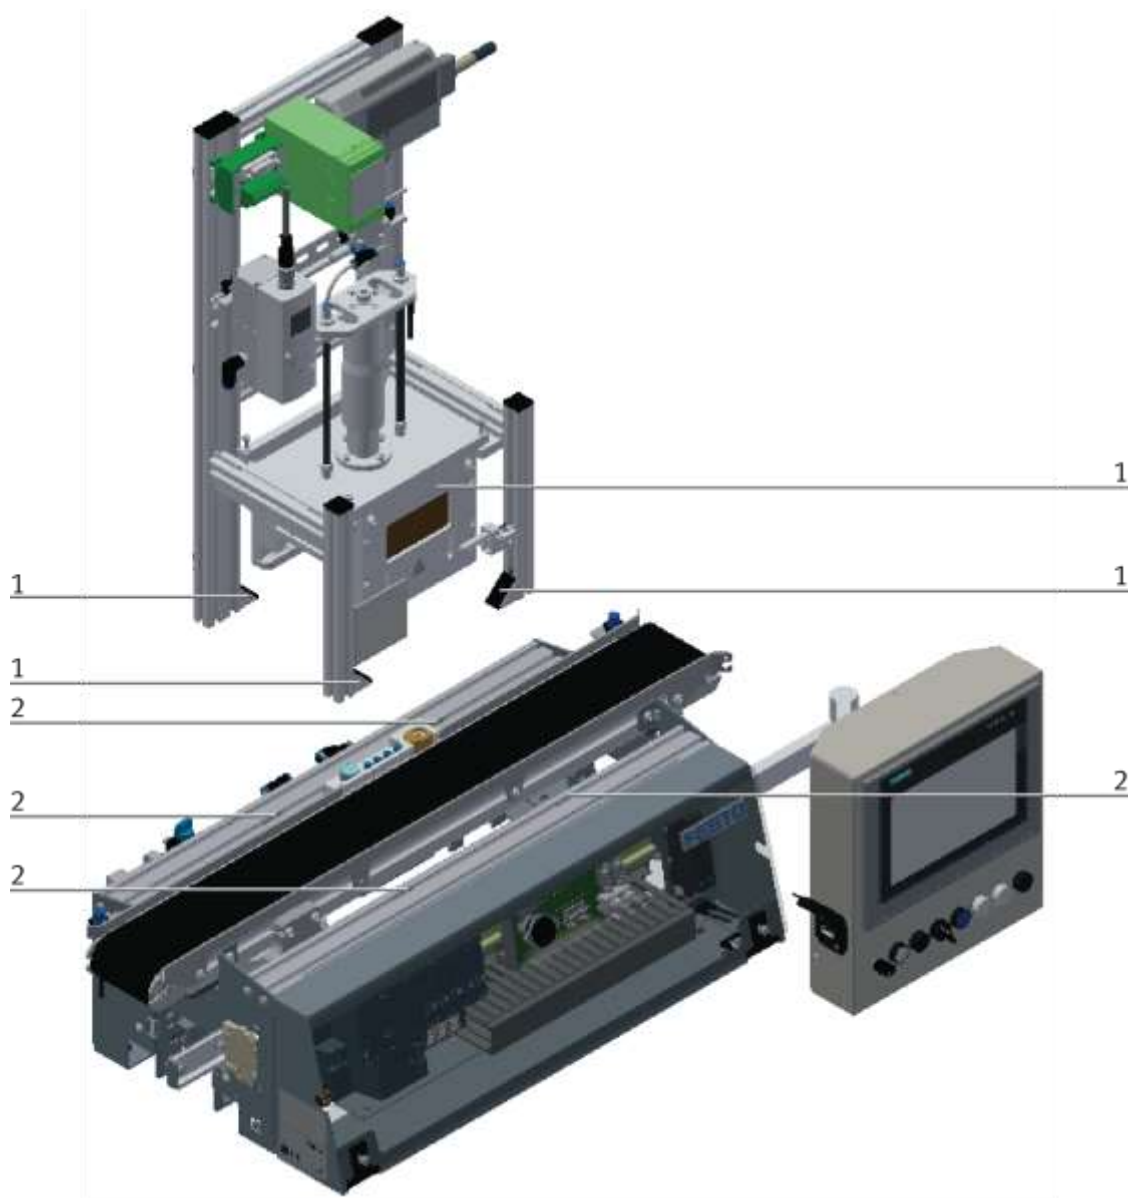


How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

Adjusting the CP application module and fixing it on the basic module CP Lab Conveyor

- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the basic module CP Lab Conveyor.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

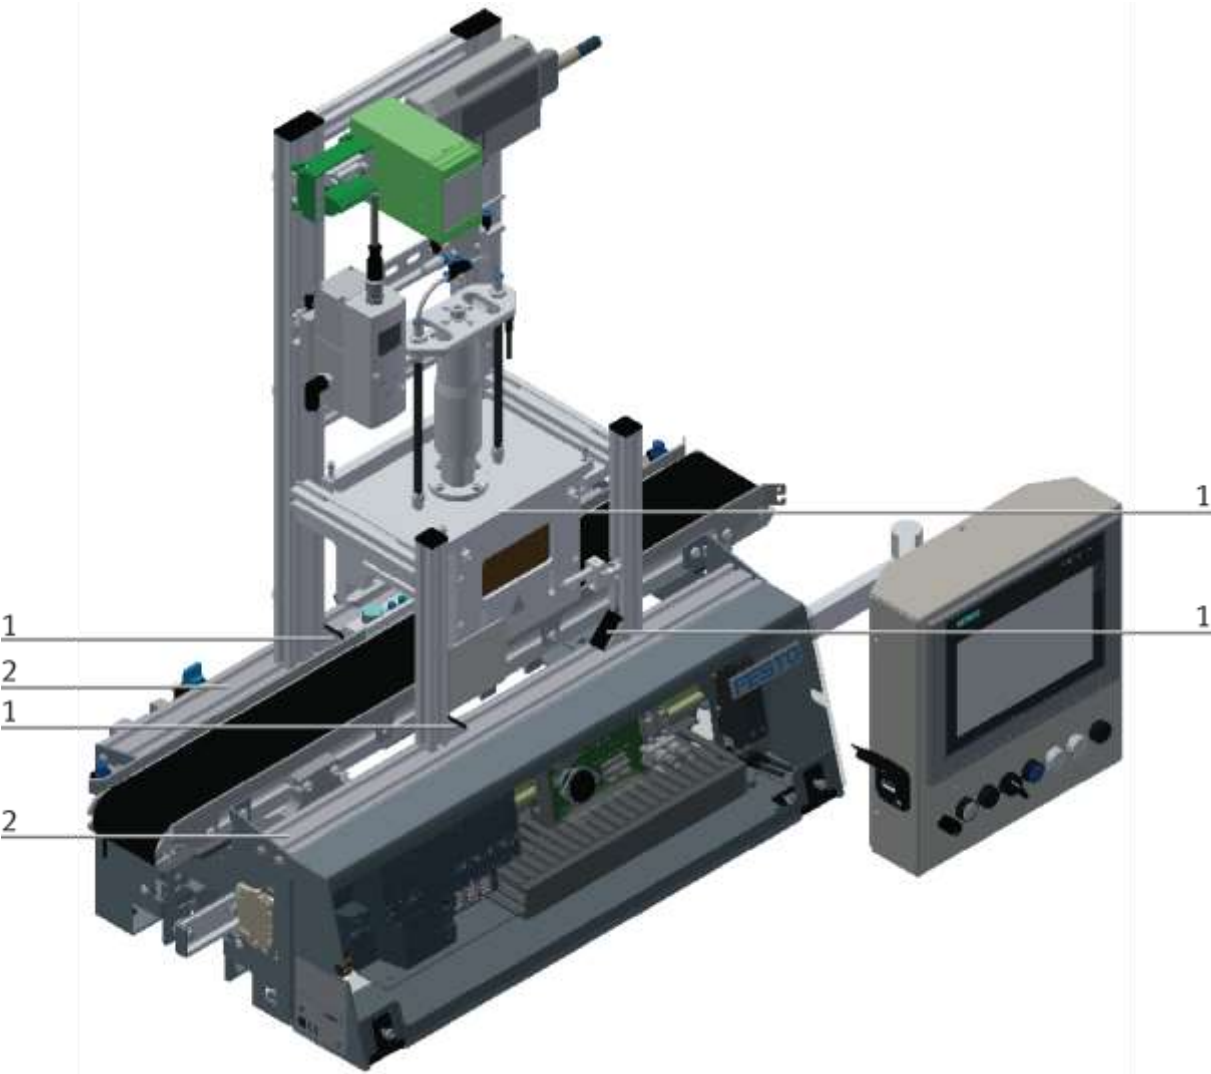

Tightening the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket with cover
2	basic module CP Lab Conveyor: cross profile

7.4.2 Connecting the CP application module electrically to basic module CP Lab Conveyor SysLink-interface for digital signals




NOTE

With special variants of the basic module CP Lab Conveyor, you absolutely have to observe the corresponding operation instructions of the basic module CP Lab Conveyor!

The CP application module exchanges digital input and output signals with the basic module via the SysLink interface:

- Connect the I/O terminal (3) of the CP application module with the control (1) of the basic module CP Lab Conveyor. Therefore use the connecting cable with SysLink plugs (5) which has already been attached to the control and is led out on the back side of the basic module CP Lab Conveyor.

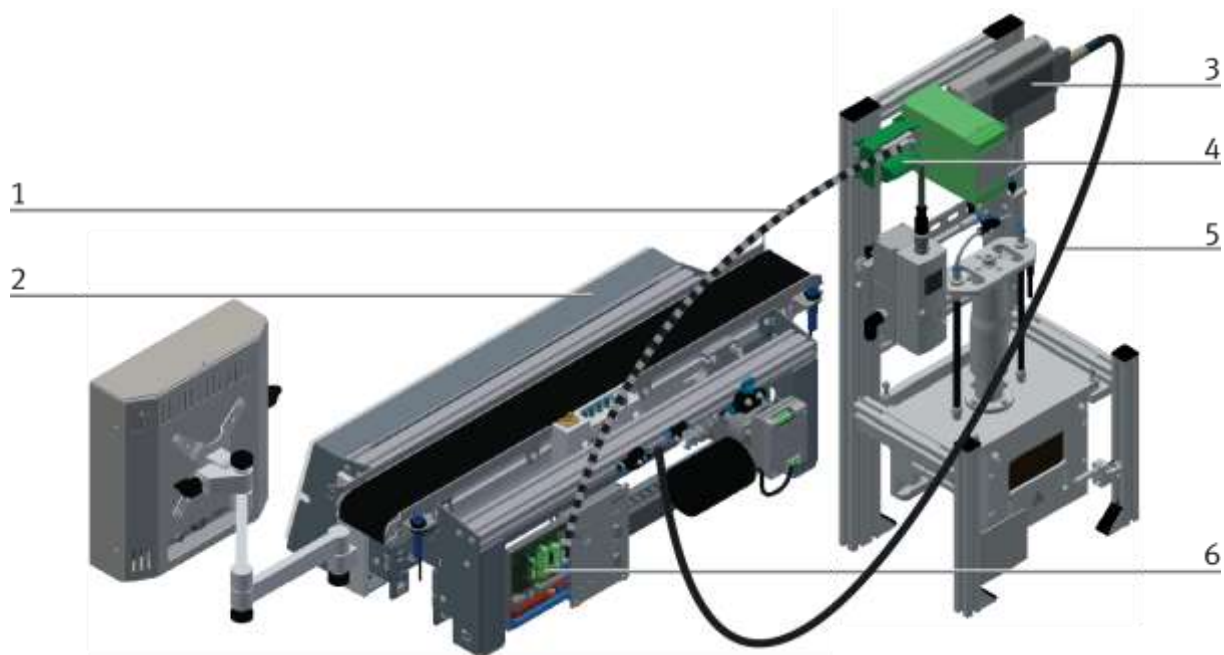


Electrical connections / illustration similar

Position	Description
1	connecting cable with 15-pin standard D-Sub-plugs
2	basic module CP Lab Conveyor: control or decentralized periphery
3	CP application module: I/O terminal (+BG-XD1)
4	CP application module: analogue terminal (+BG-XD2A)
5	connecting cable with a SysLink-plug (SysLink-cable)
6	basic module CP Lab Conveyor: board at the back (+G1-XZ2)

D-Sub-interface for analogue signals (option – not available at all application modules)

The CP application module produces a analogue output signal. These is put on the analogue terminal (4) and must be connected with the analogue inputs of the basic module:

- Connect the analogue terminal (4) of the CP application module with the D-Sub-interface for analogue signals (6) on the rear board of the basic module CP Lab Conveyor. Therefore use the provided connecting cable (1) with standard D-Sub plugs: 15-pin, two-rowed.

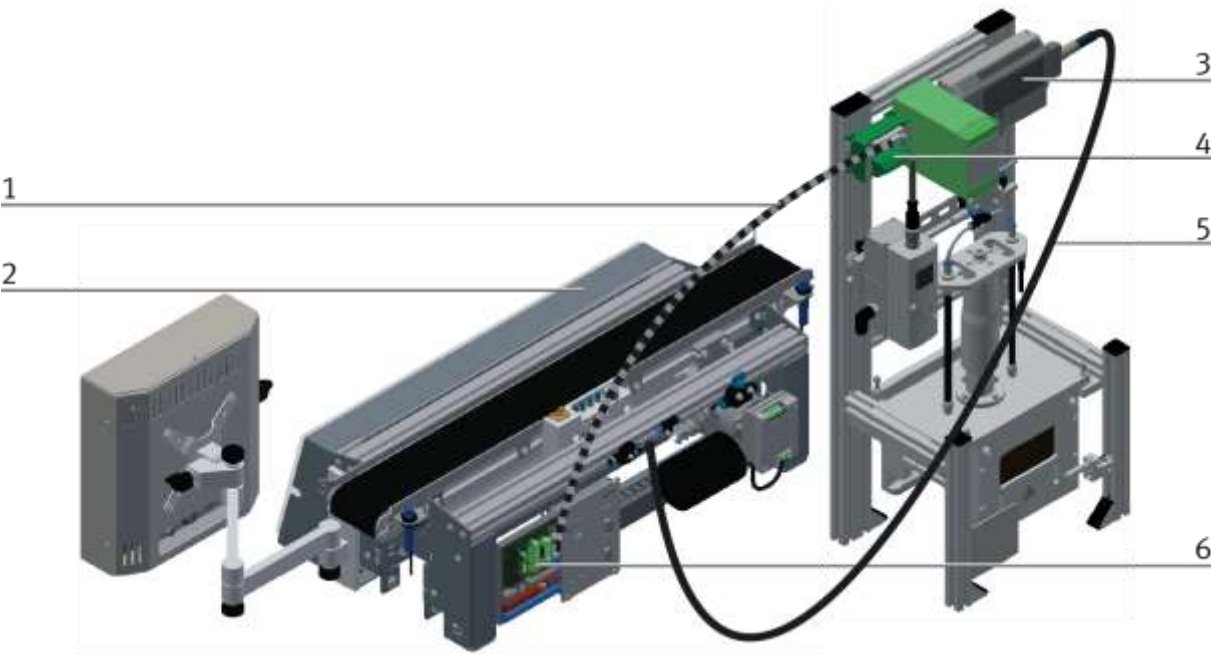


Electrical connections / illustration similar

Position	Description
1	connecting cable with15-pin standard D-Sub-plugs
2	basic module CP Lab Conveyor: control or decentralized periphery
3	CP application module: I/O terminal (+BG-XD1)
4	CP application module: analogue terminal (+BG-XD2A)
5	connecting cable with a SysLink-plug (SysLink-cable)
6	basic module CP Lab Conveyor: board at the back (+G1-XZ2)


7.4.3 Pneumatic connection from application modules to basic module CP Lab Conveyor (option – not available at all application modules)

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve terminal to the shut-off valve (2) on the conveyor belt. The hose (1) (nominal width 4) is simply inserted into the QS connector. The supply line (5) is plugged into the T-plug (3). The CP Lab Band is also supplied with a T-connector (4).

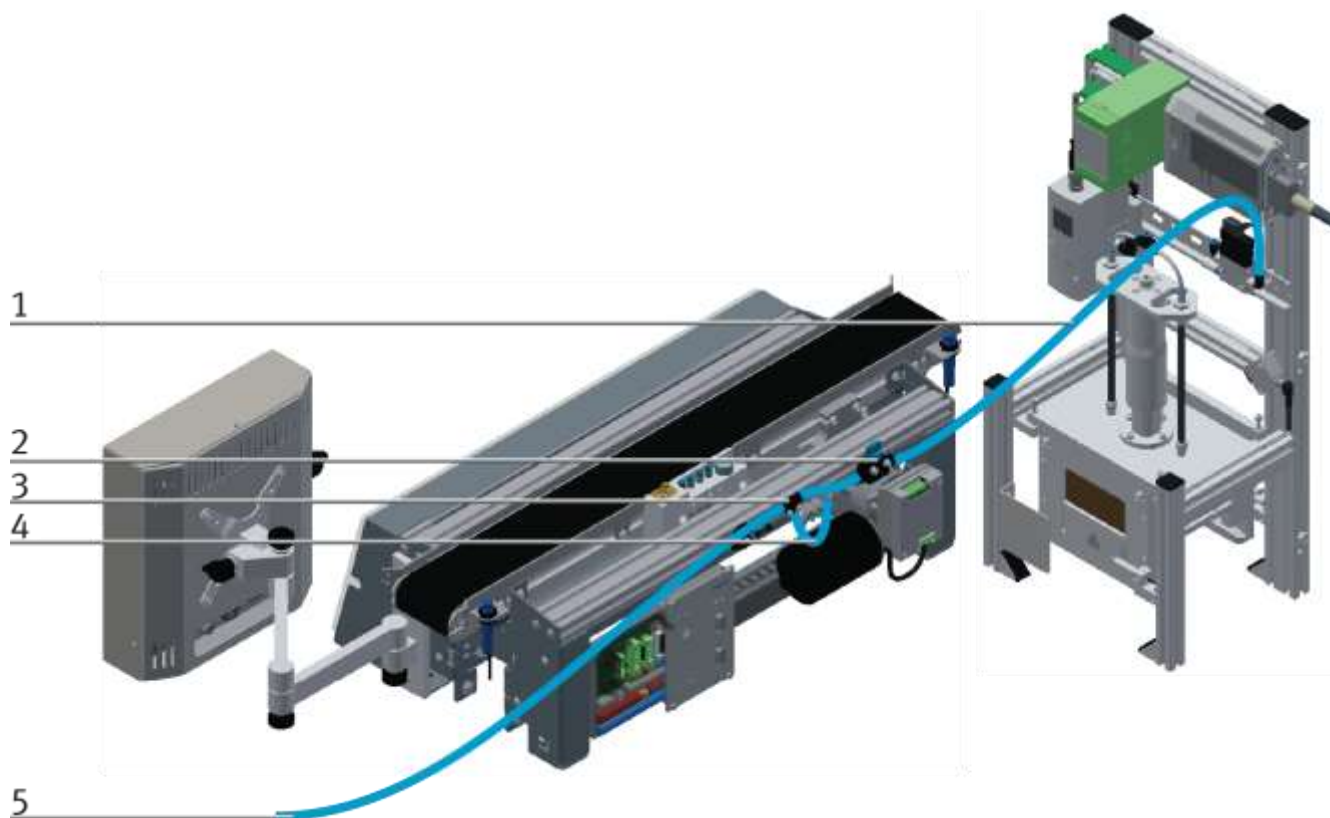

Pneumatically connect application module / illustration similar

7.4.4 Assembly of an CP application module to a CP Factory basic module



NOTE

The procedure for installing a CP application module on a basic module is identical for all basic modules. The following example is an example for all basic modules and applications.

Positioning slot nuts in the cross profiles of the CP Factory basic module

Mounting the CP application module is very easy:

- Two M5-slot nuts (1) have to be put into the inner front slot of the cross profile (4) of the CP Factory basic module.
- Then put two additional M5-slot nuts (1) into the inner back slot of the cross profile (2) of the basic module.
- Then you have to position the slot nuts (1) approximately to the distance of the vertical cross profiles of the CP application module.




Positioning slot nuts / illustration similar

Position	Description
1	slot nut
2	back cross profile
3	Inner slot (front cross profile)
4	front cross profile


Attaching the application module to the CP Factory basic module

- Put the CP application module on the CP Factory basic module.
- Position the slot nuts (2) underneath the mounting brackets (1) of the CP application module so that the internal threads of the slot nuts are visible underneath the elongated holes of the mounting brackets.



NOTE

Use Allen keys for lateral adjustment of the slot nuts.

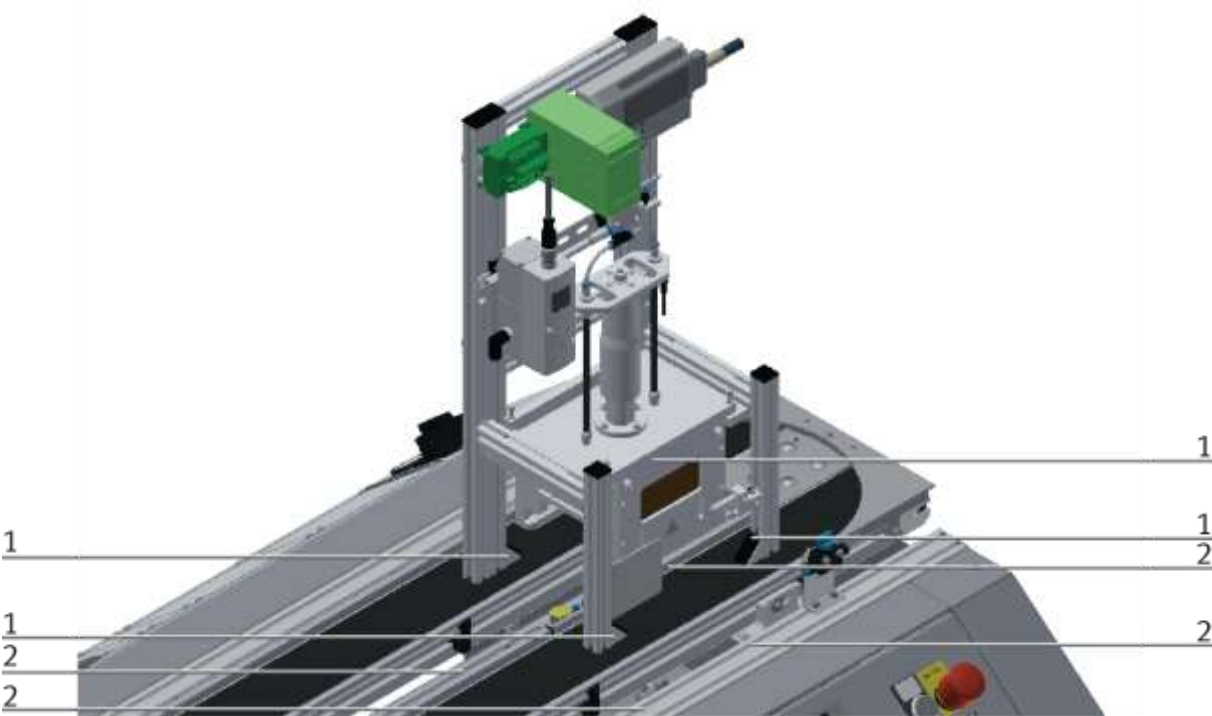


How to put on the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket
2	slot nut

Adjusting the CP application module and fixing it on the CP Factor basic module

- Use raised head screws M5x8, in order to connect the mounting brackets (1) of the CP application module Measuring, at first loosely, with the cross profiles (2) of the CP Factory basic module.
- After setting all raised head screws, you can still move the CP application module to the position required.
- Push a carrier with pallet and front cover to the stopper position. The front cover points with its inside upwards. The drilled hole of the front cover is on the left side.
- Have a visual inspection to make sure that the two distance sensors are capable of registering the front cover more or less in medium range.
- Now tighten the raised head screws.
- Then put the black covers onto the mounting brackets.

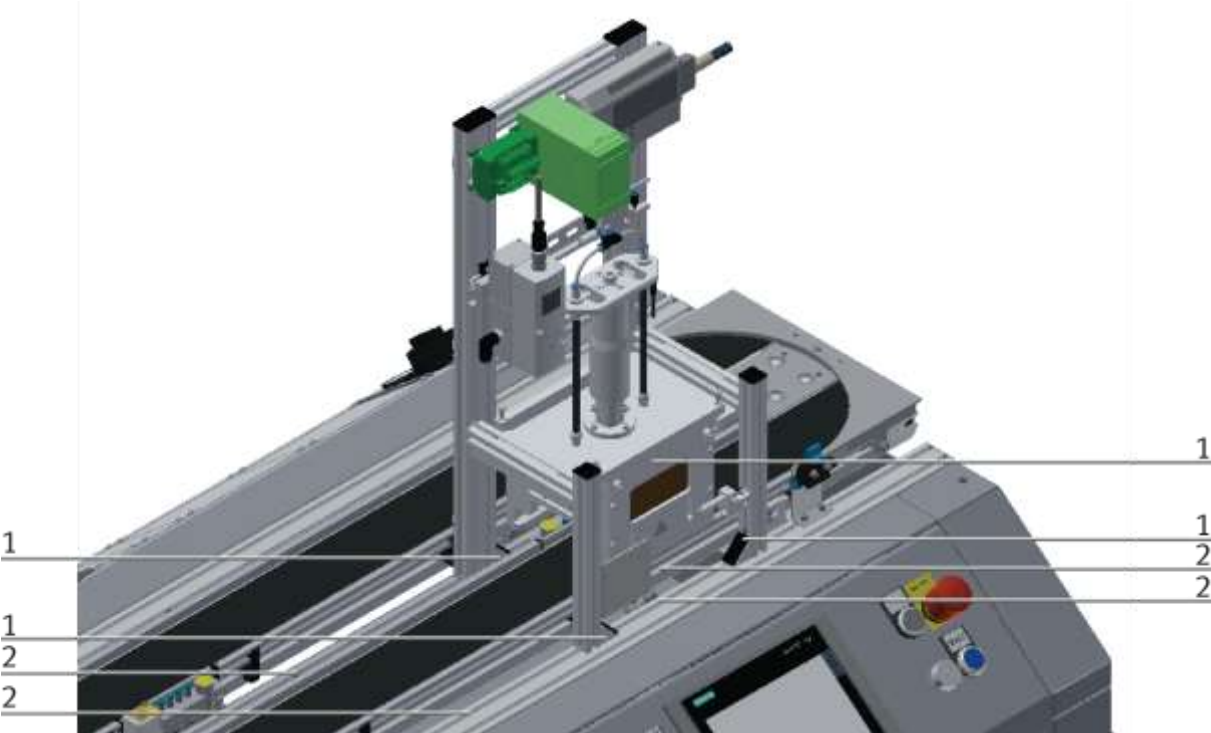

Tightening the CP application module / illustration similar

Position	Description
1	CP application module: mounting bracket with cover
2	CP Factory basic module: cross profile

7.4.5 Connecting the CP application module electrically to the CP Factory basic module

SysLink-interface for digital signals


The CP application module exchanges digital input and output signals with the basic module via the SysLink interface:

- Connect the I/O terminal (1) of the CP application module with the I/O terminal (6) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable with SysLink plugs (5).

D-Sub-interface for analogue signals (option – not available at all CP application modules)

The CP application module produces two analogue output signals with the distance sensors. These are set on the analogue terminal and have to be connected with the analogue inputs of the CP Factory basic module:

- Connect the analogue terminal (2) of the CP application module with the analogue terminal (4) on the electric board of the CP Factory basic module. Therefore use the provided connecting cable (3) with standard D-Sub plugs: 15-pin, two-rowed.

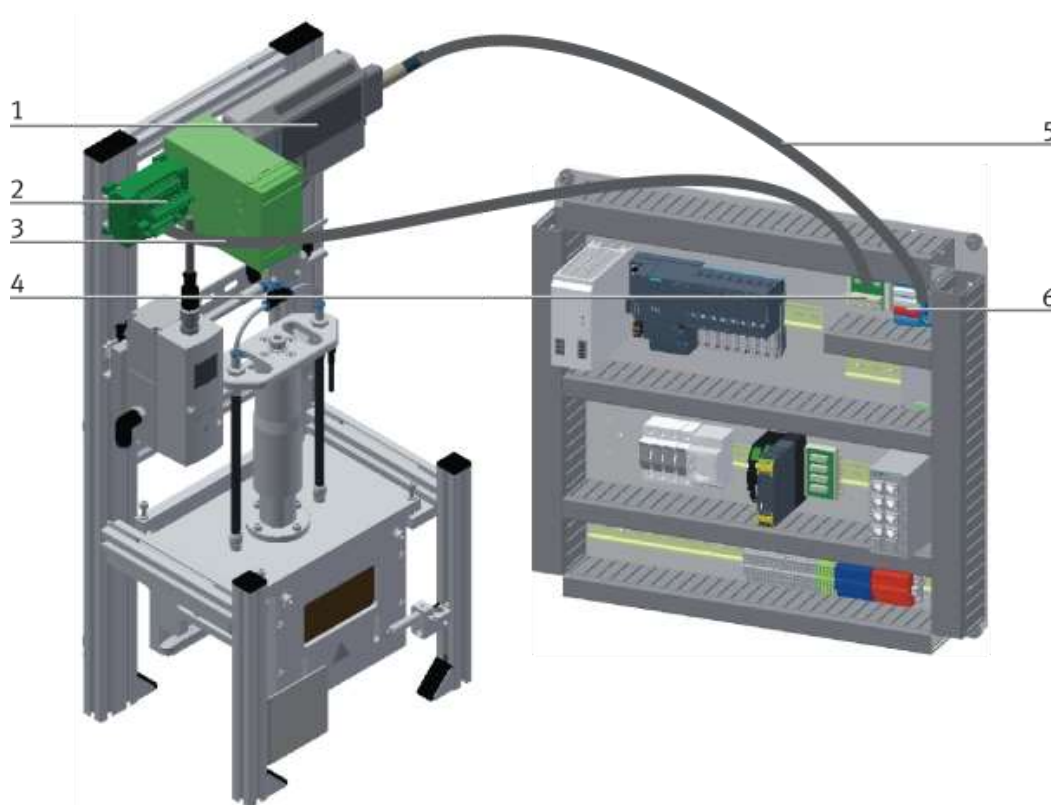

Electrical connections / illustration similar


Position	Description
1	CP application module: I/O terminal (+BG-XD1)
2	CP application module: analogue terminal (+BG-XD2A)
3	connecting cable with 15-pin D-Sub-plugs
4	electric board CP Factory basic module: analogue terminal (+K1-XD16A)
5	connecting cable with SysLink-plugs (SysLink-cable)
6	electric board CP Factory basic module: I/O terminal (+K1-XD15)

7.4.6 Pneumatic connection from application modules to CP Factory basic module

The pneumatic connection is based on the principle of the following sketch. The application module is connected from the valve (terminal) to the shut-off valve (3) on the conveyor belt.

The hose (nominal width 4) is simply inserted into the QS connector.

The supply line (2) is plugged into the shut off-valve (3).

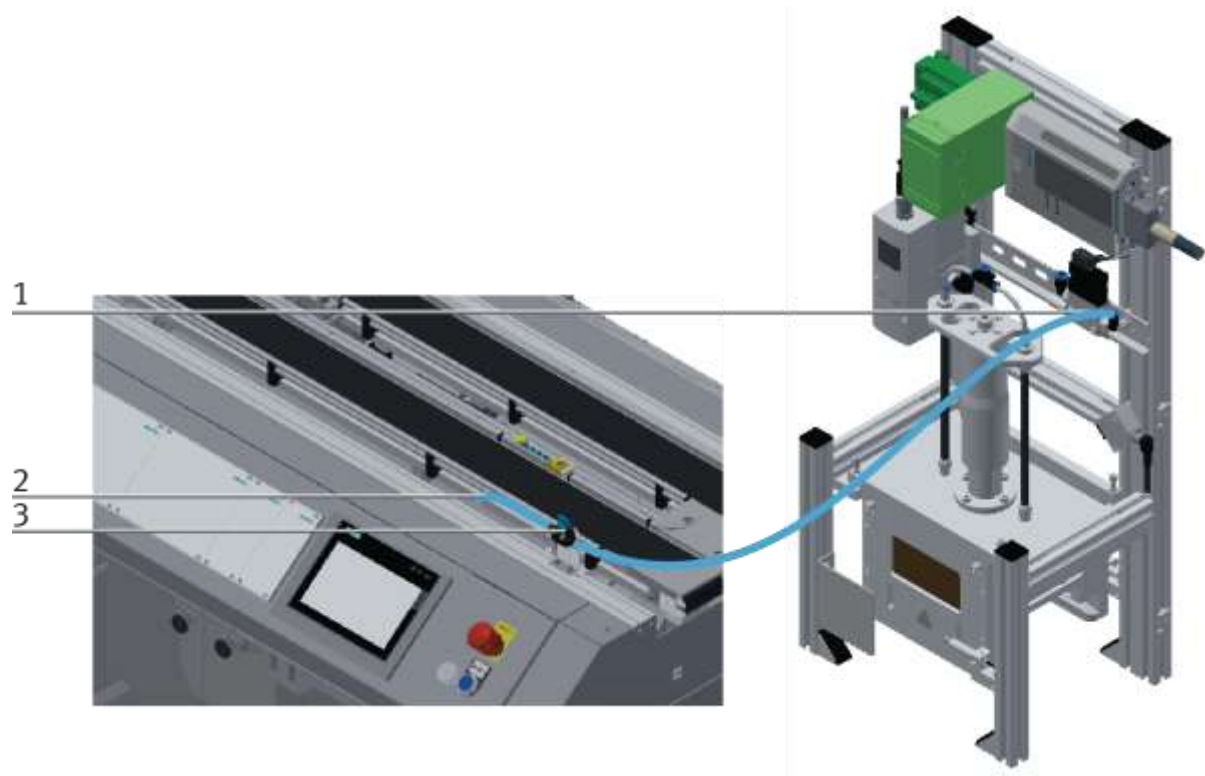

Pneumatically connect application module / illustration similar

7.5 Adjusting the sensors

7.5.1 Through-beam sensor (Workpiece detection)

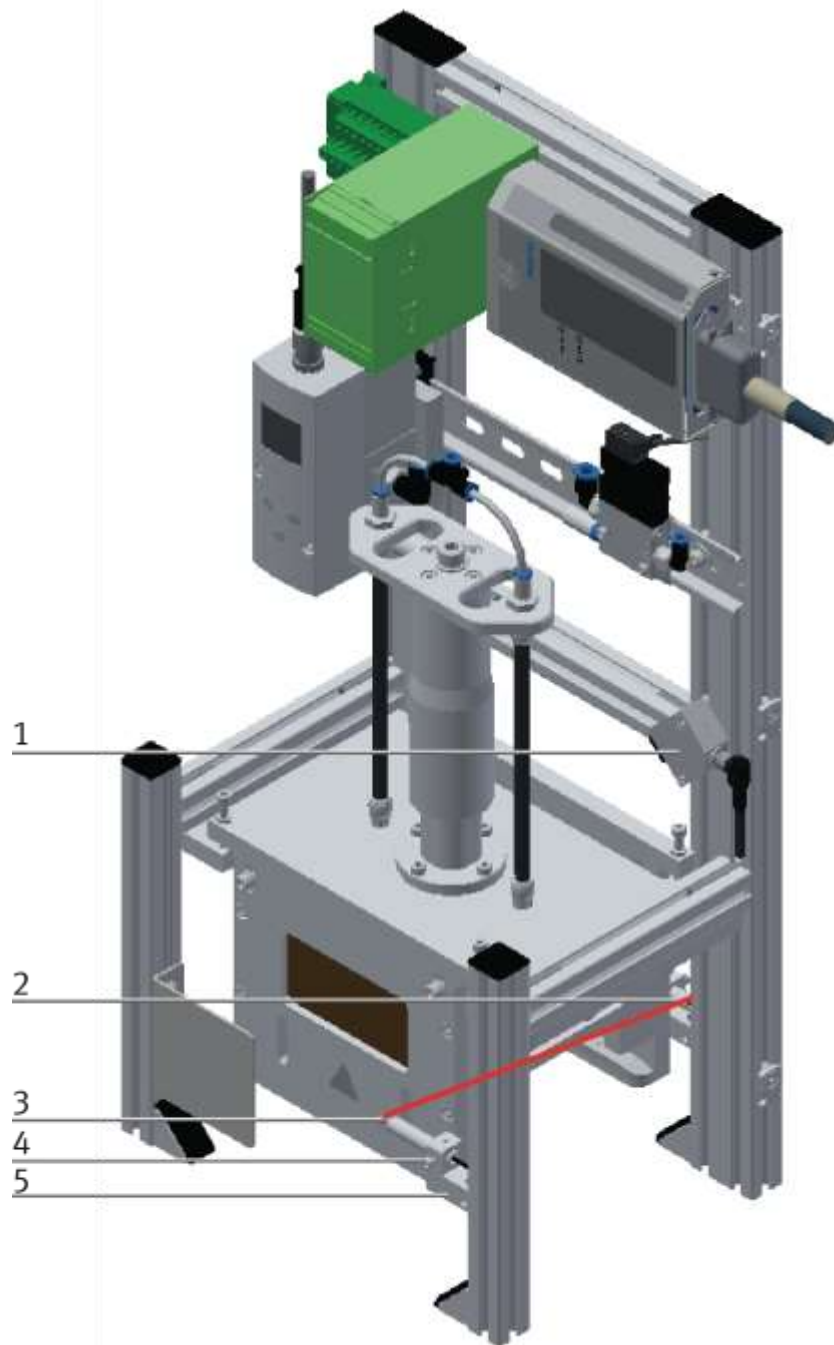


Illustration similar

Position	Designation
1	fibre-optic unit 8127556 (D: SOEG-L-Q30-P-A-S-2L)
2	Sensor 552812 (SOOC-TB-M4-2-R25) back side complete
3	Sensor sleeve with sensor and light deflection
4	Sensor socket with locking screw for clamping/adjusting the sensor socket vertically
5	Sensor holder, the sensor can be adjusted horizontally

The through-beam sensor is used for detecting workpieces. Flexible fibre-optics are connected to a fibre-optic unit. The fibre-optic unit works with visible infrared. The workpiece interrupts the light barrier.

Requirements

- Fibre-optic unit has been attached.
- Electrical connection of the fibre-optic unit has been made.
- Power supply is available.

Procedure

Please attach the fibre-optic heads towards each other to the application.

Align the transmitter- and receiver fibre optics.

Attach the fibre-optics to the fibre-optic unit.

You might have to turn the adjusting screw with a small screwdriver until the switching status display (LED) appears.

Remark

The maximum permissible number of turns of the adjusting screw is 12.

Please put a workpiece into the sensing range of the light barrier. The switching status display will disappear. You have to do this with all 3 light barriers. Please pay special attention to the corresponding function.

Documents


- Data sheets / Operating instructions
Fibre-optic unit D: SOEG_L (8127556) and through-beam sensor SOOC-TB-M4-2-R25 (552812)

7.5.2 Proportional pressure control valve

See manual of valve.

7.6 Commissioning muscle press

1. Check whether the measuring booster has been correctly connected to its terminals

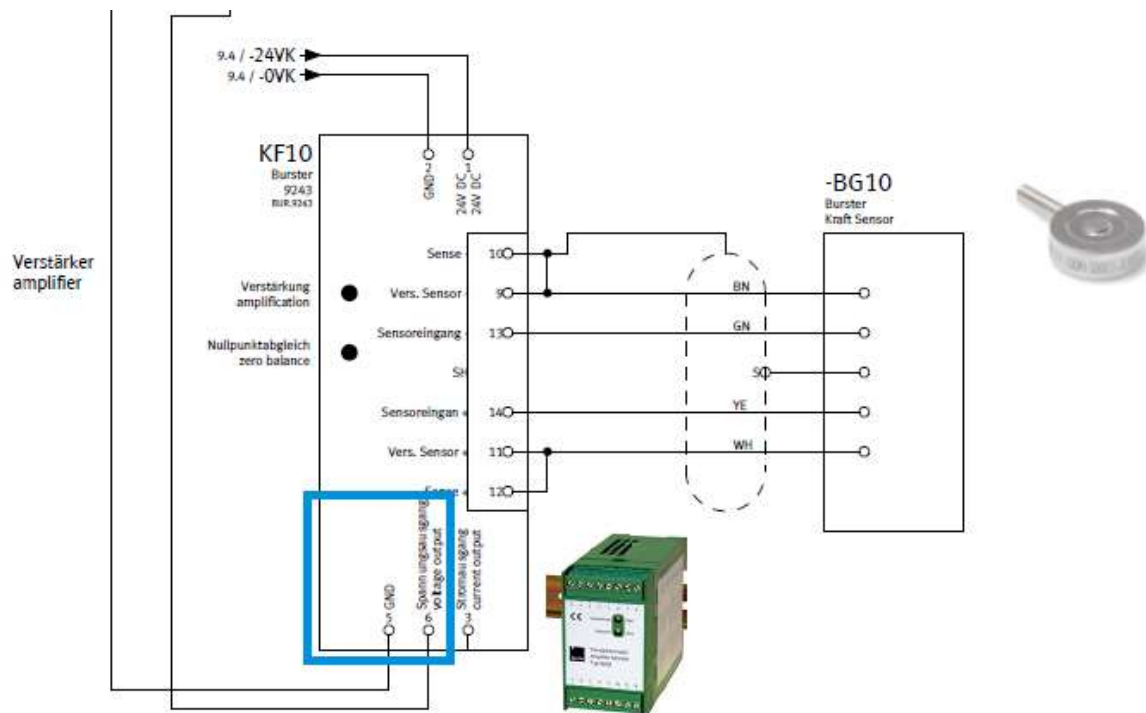

2. Setting the Burster measuring force amplifier
3. Open the cover



4. Set the DIP-switch as shown in the circuit diagram

ON	OFF	
20	<input checked="" type="checkbox"/>	Spannungsausgang voltage output
19	<input checked="" type="checkbox"/>	
18	<input checked="" type="checkbox"/>	
17	<input checked="" type="checkbox"/>	5 V Sensorspannungsversorgung Sensor power supply
16	<input checked="" type="checkbox"/>	
15	<input checked="" type="checkbox"/>	1 kHz Grenzfrequenz Limit frequency
14	<input checked="" type="checkbox"/>	
13	<input checked="" type="checkbox"/>	2 Verstärkungsfaktor Stufe 3 Gain factor Step 3
12	<input checked="" type="checkbox"/>	fein Nullpunkt fine zero point
11	<input checked="" type="checkbox"/>	
10	<input checked="" type="checkbox"/>	
9	<input checked="" type="checkbox"/>	
8	<input checked="" type="checkbox"/>	
7	<input checked="" type="checkbox"/>	10 Verstärkungsfaktor Stufe 2 Gain factor step 2
6	<input checked="" type="checkbox"/>	
5	<input checked="" type="checkbox"/>	
4	<input checked="" type="checkbox"/>	
3	<input checked="" type="checkbox"/>	
2	<input checked="" type="checkbox"/>	100 Verstärkungsfaktor Stufe 1 Gain factor step 1
1	<input checked="" type="checkbox"/>	
ON	OFF	



- Setting these DIP switches is necessary for the correct setting of the amplification factors, sensor supply voltage (5V) etc.
- Measure voltage at terminals 5 & 6 of the measuring amplifier; In the unloaded state of the load cell, about 0.3V should now be displayed => A much larger voltage value could indicate a tensioned or defective load cell. In this case, the load cell must be exposed again and tested when removed.

7. Now the zero point adjustment is to be made by means of the potentiometer Zero (DE: Nullpunkt Zero) on the front plate of the measuring force amplifier. Turn the potentiometer Zero to the left until the voltage value (at terminals 5 & 6 of the measuring force amplifier) drops to 0 V. The HMI should now display approximately 0 N as the actual force value [N].



8. So that the muscle press has to travel as little distance as possible before the force control, the distance to the workpiece can be adjusted by the pressure offset. Depending on the mounting accuracy of the AM, this must now be set between 0 and 1 bar. The print offset must be set in the setup mode on the HMI of the muscle presses (setup screen, lower screen area). In order to ensure that the press ram is not set too low, several orders (in particular the automatic placement of the front / back cover in the magazine + subsequent passage of the muscle press) should be run through.

FESTO
 CP Lab
 Conveyor
 Muscle press

Setup - Application

Setup mode 22/02/2021
 MES Mode 14:23:14

Home

Setup mode

Parameters

System

release (H_MB1)	Press. cyl.	MB1	
088228ms	8		
VPPM control mode			
Dig-Input 0 (H_D1)	Control	D1	
001764ms	2		
Dig-Input 1 (H_D2)	Control	D2	
001269ms	2		
Force control mode			
Proportional-action coefficient Kp:		0.0100	
Integral action coefficient Ki:		0.0600	
Differential action coefficient Kd:		0.0000	
Workpiece available		BG1	
Offset pressure [bar]:		0.00	

Setpoint pressure [bar]: **0.00**

Actual pressure [bar]: **0.08**

Setpoint force [N]: **0.00**

Actual force [N]: **0.73**

9. The preset control parameters do not have to be changed.

8 Operation


An application module has no control elements. Operation of the application module is only possible when it is mounted on a basic module of the CP-Lab or CP-Factory system.

The operation of the application module can be realized by every customer according to his wishes, the supplied programs are only an operating suggestion with which the application module is on CP-Lab or CP-Factory System can be operated. Own operating concepts or external controls are also possible.


If the application module is mounted on a CP Lab or a CP Factory basic module, the general operation for this is described in the manuals of the CP Lab or CP Factory system. All application-specific information is described in this manual for the application module.

8.1 Setting the application module muscle press at HMI


1. If the application module has not yet started, click on the Setup button under Operating mode on the home screen. The application module moves into its basic position

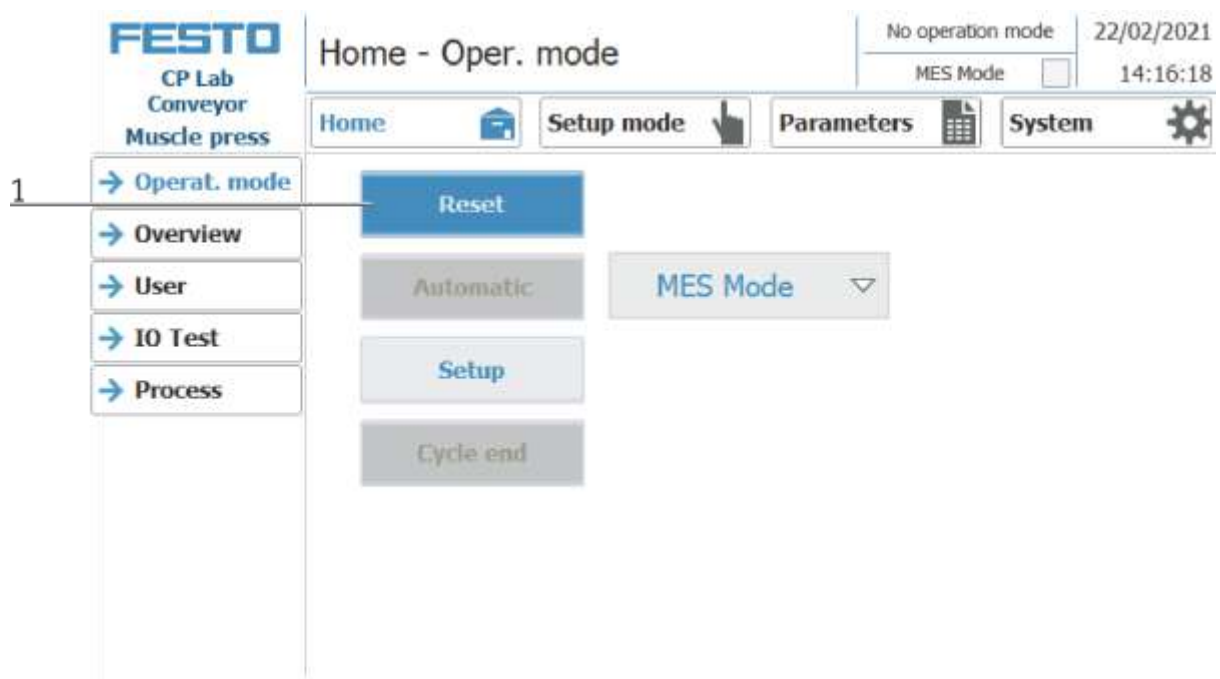

- Then click on Setup, setup mode is active.

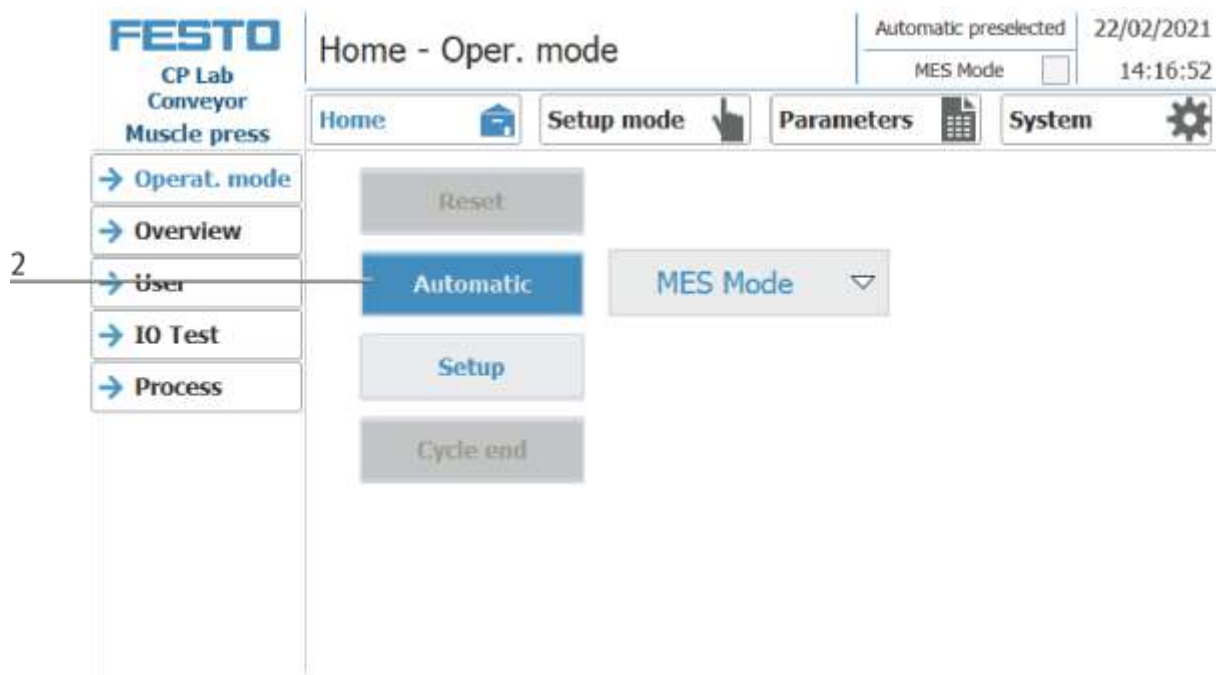

- Change to Setup mode page.

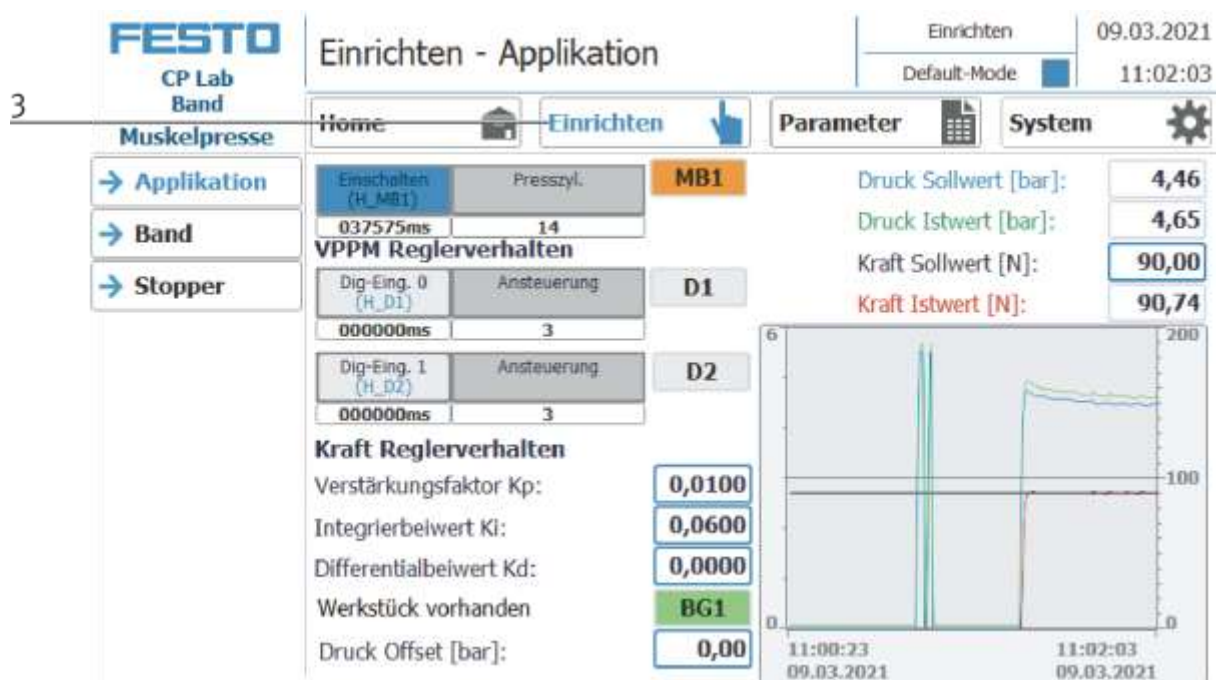

4. Choose application

FESTO
CP Lab
Band
Muskelpresse

4 → Applikation
→ Band
→ Stopper

Einrichten - Applikation

Einrichten 09.03.2021
Default-Mode 11:02:03

Home Einrichten Parameter System

Einschalten (H_MB1) Pressstyl. **MB1**
037575ms 14

VPPM Reglerverhalten

Dig-Eing. 0 (H_D1) Ansteuerung **D1**
000000ms 3

Dig-Eing. 1 (H_D2) Ansteuerung **D2**
000000ms 3


Kraft Reglerverhalten

Verstärkungsfaktor Kp: **0,0100**
Integrierbeiwert Ki: **0,0600**
Differentialbeiwert Kd: **0,0000**
Werkstück vorhanden **BG1**
Druck Offset [bar]: **0,00**

Druck Sollwert [bar]: **4,46**
Druck Istwert [bar]: **4,65**
Kraft Sollwert [N]: **90,00**
Kraft Istwert [N]: **90,74**

11:00:23 09.03.2021 11:02:03 09.03.2021


5. Application is selected to set up the application module. The corresponding actuators can be started by pressing the buttons. All other areas are for display purposes and cannot be influenced.

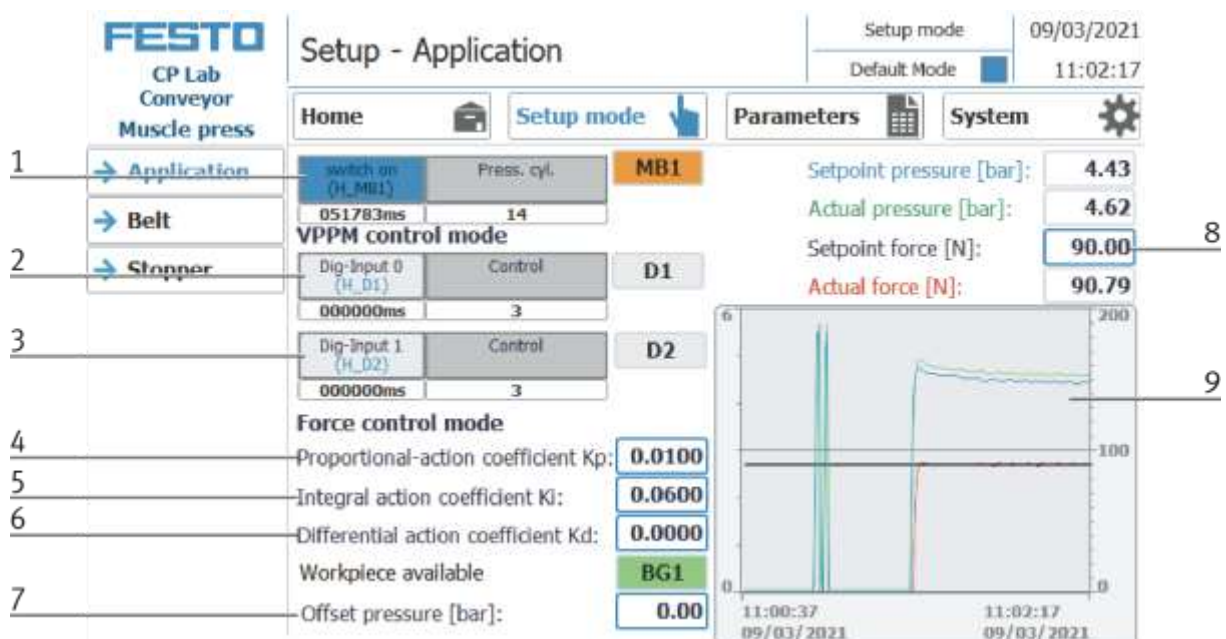

Position number	Description
1	Pressing cylinder switch on button: function tight muscle H_MB1 (blue when active) / move press in press position Pressure for muscle is adjustable (display on the right) MB1 indicates when the actual value corresponds to the setpoint pressure
2	Control Dig input 0 Button: The controller behavior of the VPPM controller can be set here (blue when active) Set H_D1 D1:
3	Control Dig input 1 Button: The controller behavior of the VPPM controller can be set here (blue when active) Set H_D2 D2:
4	Display / input field for the gain factor
5	Display / input field for the integration coefficient
6	Display / input field for the differential coefficient
7	Display / input field for offset pressure
8	Display / input for the force setpoint
9	Display of the pressure and force curve

8.2 Transitions of the application module

The transitions are located in the Parameters submenu





CP Lab
Conveyor
Muscle press


Parameters - Transitions


Automatic mode 23/02/2021

Default Mode ■ 10:29:57

Home 

Setup mode 

Parameters 

System 

→

Application

→

Transitions

→


Belt, Stopper


No.	Start condition	Application execute	press force [N]	Press time [s]	Parameter		End condition	
					---	---	OK	NOK
Init	none	<input type="checkbox"/>	0	0	0	0	0	0
1	0	<input type="checkbox"/>	0	0	0	0	0	0
2	0	<input type="checkbox"/>	0	0	0	0	0	0
3	0	<input type="checkbox"/>	0	0	0	0	0	0
4	0	<input type="checkbox"/>	0	0	0	0	0	0
5	0	<input type="checkbox"/>	0	0	0	0	0	0
6	0	<input type="checkbox"/>	0	0	0	0	0	0
7	0	<input type="checkbox"/>	0	0	0	0	0	0
8	0	<input type="checkbox"/>	0	0	0	0	0	0
9	0	<input type="checkbox"/>	0	0	0	0	0	0
10	0	<input type="checkbox"/>	0	0	0	0	0	0

The transitions can be displayed or changed here. The transitions are used in the default mode, see also the following chapter.

8.3 Process of application module


1. The display page for the pressure and force values is opened via the "Process" button. The page is for display purposes only, no action can be taken. (see following screen)

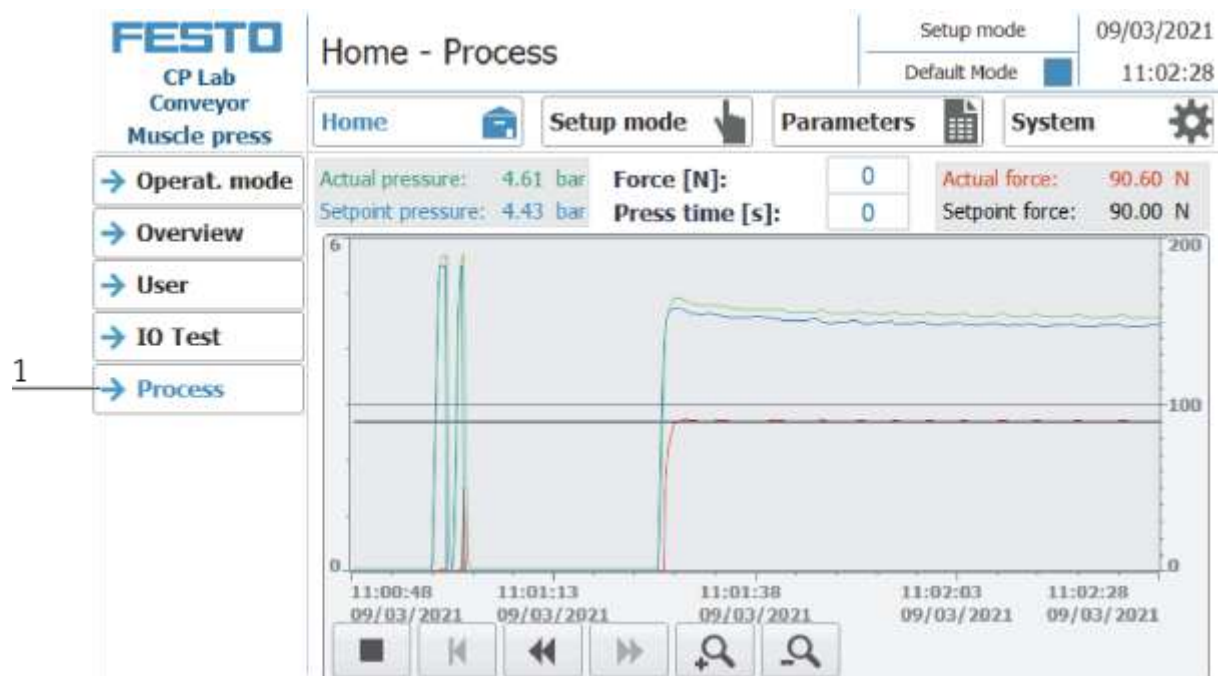

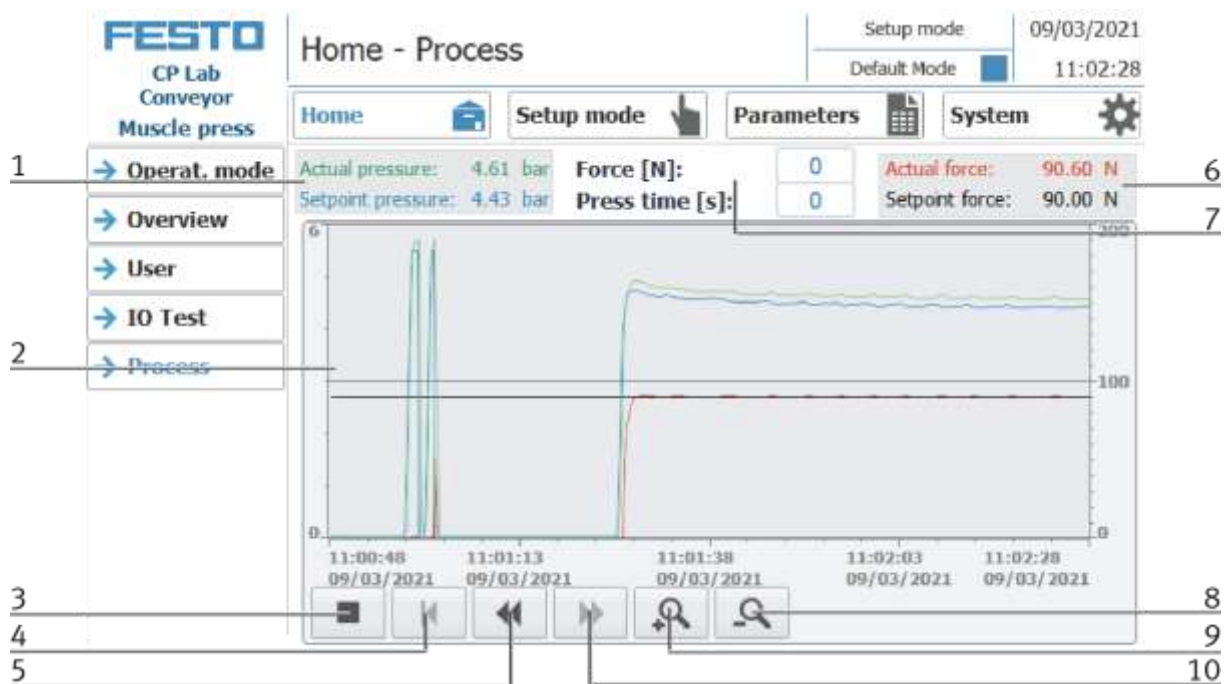

Position	Description
1	Pressure display of the actual and the setpoint in bar
2	Graphic pressure display of the actual and the setpoint
3	Stop diagnosis
4	Diagnosis of the time axis back to the beginning
5	Move the diagnosis of the time axis to the left
6	Force display of the actual and the setpoint in N
7	Display / entry of specifications for Force [N]: in Newtons Press time [s]: in seconds
8	Decrease diagnosis of the time axis
9	Enlarge the diagnosis of the time axis
10	Move the diagnosis of the time axis to the right

8.4 Flow chart

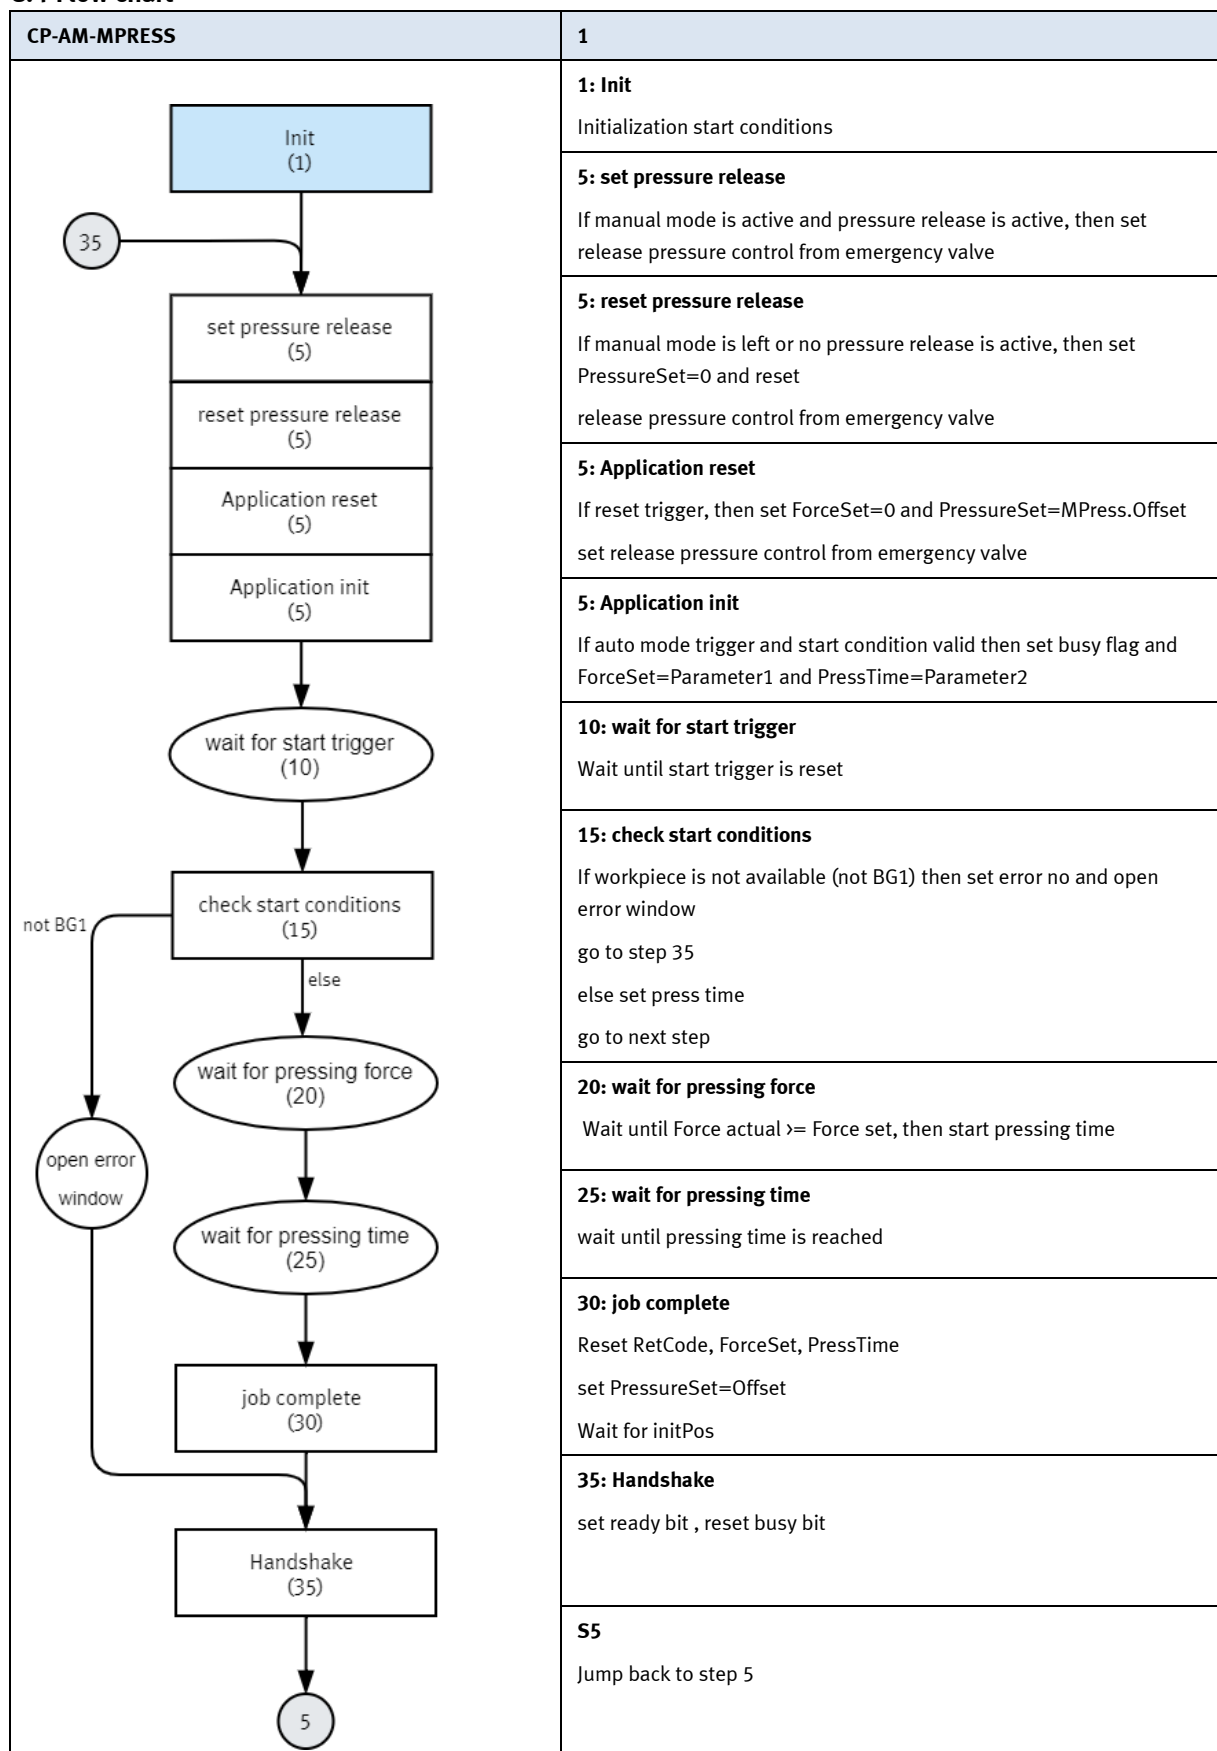

8.4.1 Parameter (MPRESS)

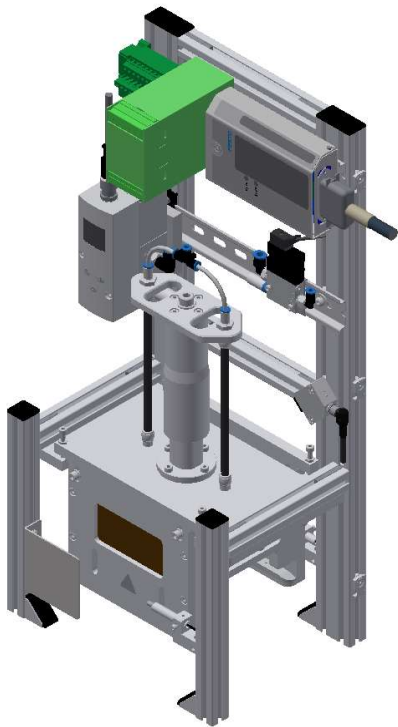


Illustration similar

Default:

Parameter-No.	Description
1	Pressing force [N] Limitation: No limit to the value in the transition table Limitation: Limit in controller block cntrLoop (FC300) to 200N
2	Pressing time [s] Limitation: No limit to the value in the transition table
3	Not used
4	Not used

MES:

Operation	Parameter	Description
111 Pressing with force regulation	1	Pressure [N] Low Limit: 5 High Limit:-100 Value: 50 Type: changeable
	2	Pressing time [s] Low Limit: 0 High Limit:-30 Value: 1 Type: changeable

9 Message texts and interactive error messages at the HMI

In general, there are three different reporting classes. These are designed as follows

- Message class 0 (displayed red in the message line)
 - the program is immediately stopped and the automatic mode is terminated
 - the cause of the error has to be fixed
 - Then acknowledge the fault and restart the station
- Message class 1 (displayed red in the message line)
 - the program and the automatic mode are stopped at the end of the cycle
 - the cause of the error has to be fixed
 - Then acknowledge the fault and restart the station
- Message class 2 (displayed yellow in the message line)
 - the program and the automatic mode are executed further
 - If the cause of the fault is fixed, the error is automatically acknowledged
- Note
 - Displayed on the HMI but not processed in MES

9.1 Message texts


Actual there are no message texts available.

9.2 Interactive error messages

9.2.1 Default operation

Interactive messages are displayed via a pop-up window at HMI

The Pop Up has three buttons.

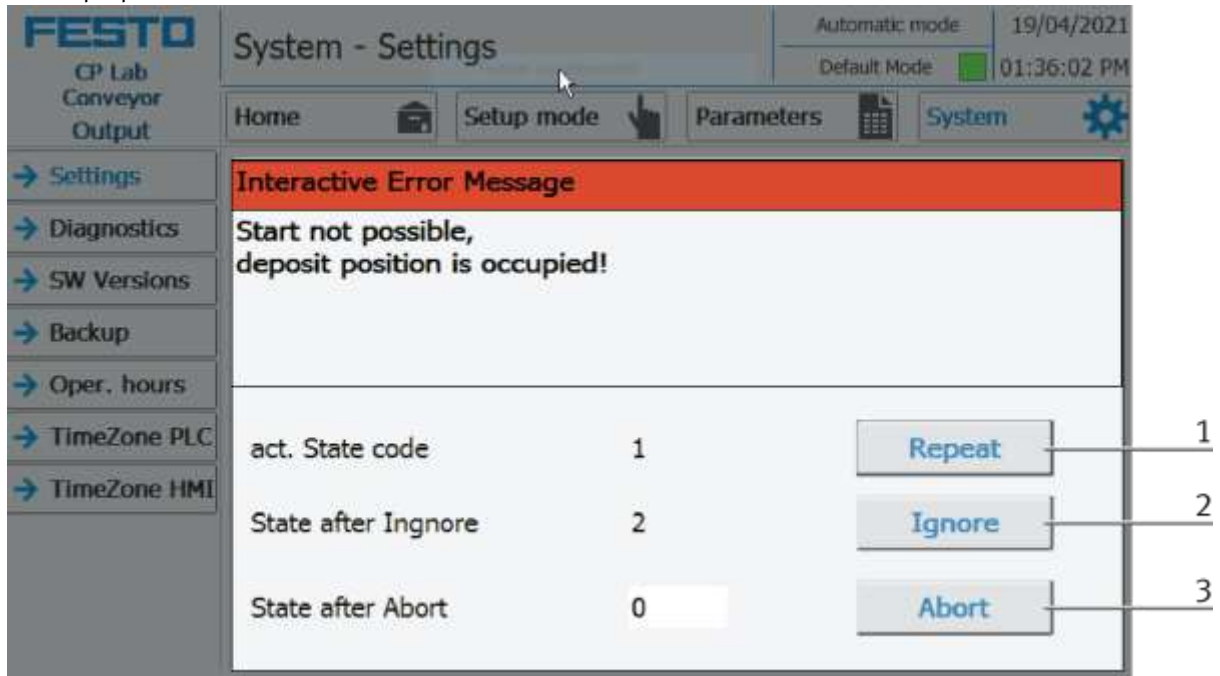


Example application module output - interactive error message in default mode

Position	Note
1	Repeat - An attempt is made to run the application again.
2	Ignore – The error status is ignored; the workpiece carrier receives the status code as indicated in the transition table in the "Initial status" column. The application is no longer executed.
3	Abort – The error status is ignored; the workpiece carrier receives the status code as shown in the input / output field next to the value displayed. This can be changed in this interactive error message window.

9.2.2 MES Operation

Interactive messages are displayed via a pop-up window at HMI

The Pop Up has four buttons.

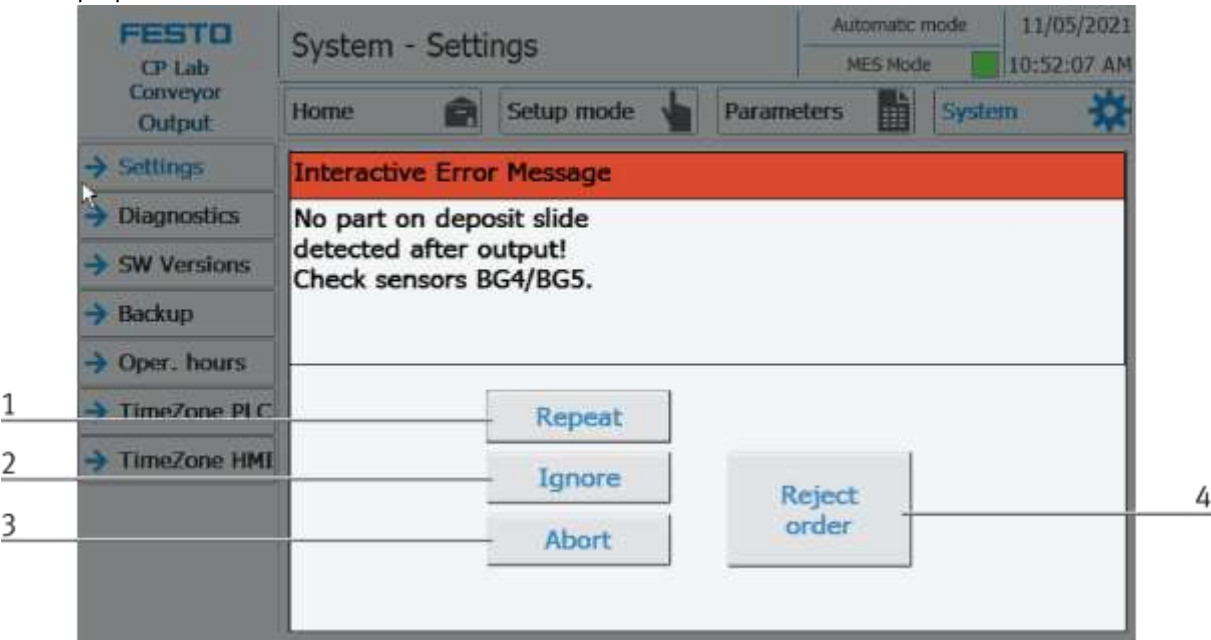

Example application module output - interactive error message in default mode

Position	Note
1	Repeat - An attempt is made to run the application again with the same parameters.
2	Ignore – The application is not executed, but is treated in the MES as if the order step had been executed without errors.
3	Abort – The application is no longer executed. In the MES, this order position is terminated with an error and canceled, depending on whether an error step has been defined or not.
4	Reject order - the application will not be executed. In the MES, the step of this order position is reset and restarted the next time the workpiece carrier arrives.

9.2.3 General

Value	Text	Fix error
100	Order aborted with errors!	Start order again

9.2.4 Application module Press/muscle press

Value	Text	Fix error
5000	Job canceled incorrectly	
5001	No pallet available	Pallet / check sensor BG7
5002	The front cover is already present	Workpiece / check sensor BG8
5003	The back cover is already present	Workpiece / check sensor BG8
5004	No front cover available	Pallet / check sensor BG7
5005	Wrong parameter!	
5007	No workpiece available	Pallet / check sensor BG1
5009	No workpiece on pallet detected	Check pallet / sensor BG1

10 Spare part list

10.1 Electrical parts

Description	Partnumber	Resource identifier	Use
Burster force sensor	8415	BG10	Force measuring
Amplifier Burster IMA2-DMS	9243	KF10	
Analog terminal UM 45-D15SUB/B	PXC 2962735	XD2A	
Proportional pressure control valve VPPM-6L-L-1-G18-0L6H-V1P-C1	558337	KF11	
Light guide SOOC-TB-M4-2-R25	552812	BG1	Workpiece available
Light guide device D: SOEG-L-Q30-P-A-S-2L	8127556	BG1	Workpiece available
I/O Module	8027412	XD1	

10.2 Pneumatische Teile

Bezeichnung	Teilenummer	BMK	Verwendung
manifold block CPE10-M1BH-3GL-M7	916915	MB 1	Emergency stop valve
Proportional pressure control valve VPPM-6L-L-1-G18-0L6H-V1P-C1	558337	KF11	
Fluidic Muscle DMSP-5-130N-AM-CM	3733012		
Fluidic Muscle DMSP-5-130N-AM-CM	3733012		

11 Service and cleaning

The components and systems from Festo Didactic are maintenance-free.

At regular intervals you should have checked:

- the lenses of the optical sensors, fibre optics and reflectors
- the active surface of the proximity switch
- the entire station

can be cleaned with a soft, lint-free cloth or brush.



NOTE

Do not use aggressive or abrasive cleaners.

Protective covers must not be cleaned with alcoholic cleaning agents, there is a risk of embrittlement.


12 Further information and updating

Further information and updates on the technical documentation of Festo Didactic components and systems can be found on the Internet at:

www.ip.festo-didactic.com



13 Disposal

	<div data-bbox="378 286 1406 358"><i>NOTE</i></div> <div data-bbox="378 358 1406 492"><p>Electronic waste contains recyclable materials and must not be disposed of with the domestic waste. Bring electronic waste to a designated municipal collection point.</p></div>
---	---

Festo Didactic SE

Rechbergstraße 3
73770 Denkendorf
Germany



+49 711 3467-0



+49 711 34754-88500



www.festo-didactic.com



did@festo.com